

# Wynncom W104n User Manual



**Note:** The content of the manual is correct when it is released, but “**Wynncom Digital Devices Pvt. Ltd.**” reserves the right to modify the technical specification without additional notification. Some content in the manual may be different from the mobile phone, as the accessory software, SIM card or service varies by providers.

## Table of Contents

<b>IMPORTANT SAFETY PRECAUTIONS</b> .....	3
<b>INTRODUCTION</b> .....	10
<b>1. PHONE DISPLAY</b> .....	10
<b>GETTING STARTED</b> .....	13
<b>TEXT ENTRY</b> .....	16
<b>1. INPUT METHOD</b> .....	16
➤ <i>Changing the input modes</i> .....	16
➤ <i>Entering Symbols</i> .....	16
<b>3. MULTI TAPS INPUT</b> .....	16
<b>4. NUMERIC INPUT</b> .....	17
<b>CALLING</b> .....	17
<b>1. MAKING A CALL</b> .....	17
<b>2. ANSWERING A CALL</b> .....	17
<b>OVERVIEW OF MENU FUNCTIONS</b> .....	18
<b>MENU FUNCTIONS</b> .....	19
<b>HOW TO USE</b> .....	20
<b>1. MESSAGES</b> .....	20
<b>2. PHONEBOOK</b> .....	22
<b>3. CALL HISTORY</b> .....	22
<b>4 SETTINGS</b> .....	23
<b>5. Y ZONE</b> .....	<b>ERROR! BOOKMARK NOT DEFINED.</b>
<b>6. MULTIMEDIA</b> .....	25
<b>7. PROFILE</b> .....	26
<b>8. FILE MANAGER</b> .....	26
<b>9. ORGANIZER</b> .....	27
<b>10. WARRANTY CARD</b> .....	34



### ***Important safety precautions***

This section contains important information on the safe and efficient operation of your mobile device.

For your safety, please refer to the guideline prior to using the phone.

Note: Failure to comply with the following precautions may be dangerous or illegal.

#### **Drive safely at all times**

Do not use a hand-held phone while driving. Park the vehicle first.

#### **Switch off the phone when refueling**

Do not use the phone at a refueling point (service station) or near fuels or chemicals.

#### **Switch off in an aircraft**

Wireless phones can cause interference. Using them in an aircraft is both illegal and dangerous.

#### **Switch off the phone near all medical equipment**

Hospitals or health care facilities may be using equipment that could be sensitive to external radio frequency energy. Follow any regulations or rules in force.

#### **Interference**

All wireless phones may be subject to interference, which could affect their performance.

#### **Be aware of special regulations**

Meet any special regulations in force in any area and always switch off

your phone whenever it is forbidden to use it, or when it may cause interference or danger.

### **Water resistance**

Your phone is not water-resistant. Keep it dry.

### **Sensible use**

Use only in the normal position (held to the ear). Avoid unnecessary contact with the antenna when the phone is switched on.

### **Keep your phone away from small children**

Keep the phone and all its parts, including accessories, out of the reach of small children.

### **Accessories and batteries**

Use only approved batteries and accessories, such as headsets and PC data cables. Use of any unauthorized accessories could damage you and your phone and may be dangerous.

If jewelry, keys, beaded chains, or other conductive materials touch exposed battery terminals, this could complete an electrical circuit (short circuit), become very hot, and could cause damage or injury. Be careful when handling a charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects.

- ❖ Never use a charger or battery that is damaged in any way.
- ❖ Use the battery only for its intended purpose.
- ❖ If you use the phone near the network's base station, it uses less power. Talk and standby time are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.
- ❖ Battery charging time depends on the remaining battery charge, the type of battery, and the charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time is noticeably shorter than normal, it is time to buy a new

battery.

- ❖ If left unused, a fully charged battery will discharge itself over time.
- ❖ Use only approved batteries, and recharges your battery only approved chargers. Disconnect the charger from the power source when it is not in use. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.
- ❖ Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.
- ❖ Do not leave the battery in hot or cold places because the capacity and lifetime of the battery will be reduced. Try to keep the battery at room temperature. A phone with a hot or cold battery may not work temporarily, even when the battery is fully charged.
- ❖ Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object like a coin, clip or pen causes a direct connection between the + and – terminals of the battery (metal strips on the battery). For example, do not carry a spare battery in a pocket or bag where the battery may contact metal objects. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting.
- ❖ Dispose of used batteries in accordance with local regulations. Always recycle. Do not dispose of batteries in a fire.
- ❖ To ensure while using the phone please do not get the battery charge.
- ❖ During the course of charging, it is normal to find the battery and the phone slightly heat-up. The Phone will automatically protect itself when battery temperature rises so as to control temperature variation.

**Note:** This phone is just charged 50%. Please use up the power and recharge it fully. This is the case with the second recharge. After three repetition, the battery can achieve it' s best performance condition.

## **Operating Environment**

Remember to follow any special regulations in force in the area you are in, and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger. When connecting the phone or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the equipment should only be used in the normal operating position (held to your ear with the antenna pointing over your shoulder).

Extreme heat or cold, Avoid temperatures below -10°C/14°F or above 45°C/113°F

## **Electronic devices**

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone. Consult the manufacturer to discuss alternatives.

## **Pacemakers**

Pacemaker manufacturers recommend that a minimum distance of 15 cm (6 inches) be maintained between a wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research and recommendations of Wireless Technology Research. If you have any reason to suspect that interference is taking place, switch you're your phone immediately.

## **Hearing aids**

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may wish to consult your hearing aid manufacturer to discuss alternatives.

## **SIM AT Service**

SIM Card provides several value-added services.

These functions will only display and work on the menu of the phone when your SIM card is supported. The content and the terms of the function lists will depend on your network service provider.

Please contact your network service provider (a network operator or the service provider) in regards with availability of any services related to the SIM card, application information and the costs.

## **Other medical devices**

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Switch off your phone in health care facilities when regulations posted in these areas instruct you to do so.

## **Vehicles**

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

## **Posted facilities**

Switch off your phone in any facility where posted notices require you to do so.

## **Potentially explosive environments**

Switch off your phone when in any area with a potentially explosive atmosphere, and obey all signs and instructions. Sparks in such areas

could cause an explosion or fire resulting in bodily injury or even death. Users are advised to switch off the phone while at a refueling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants, or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often but not always clearly marked. They include the areas below decks on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas, such as propane or butane, areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

### **Emergency calls**

This phone, like any wireless phone, operates using radio signals, wireless, and landline networks as well as user-programmed functions, which cannot guarantee connection in all conditions. Therefore, you should never rely solely on any wireless phone for essential communications like medical emergencies. To make or receive calls, the phone must be switched on and in a service area with adequate signal strength. Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

To make an emergency call: **(For India example: 112,911,100,101,102)**

1. Key in the emergency number for your present location. Emergency numbers may vary by location.
2. Press the Send Key.
3. Inform your location. Do not end the call until given permission to do so. Certain features like Call Barring may need to be deactivated before you can make an emergency call. Consult this document and your local cellular service provider.



## Other important safety information

- ❖ Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.
- ❖ Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.
- ❖ Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the phone, its parts, or accessories.
- ❖ For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. Improperly installed wireless equipment could result in serious injury if the air bag inflates.
- ❖ Switch off your phone before boarding an aircraft. It is dangerous and illegal to use wireless phones in an aircraft because they can interfere with the operation of the aircraft.
- ❖ Failure to observe these instructions may lead to the suspension or denial of telephone services to the offender, or legal action, or both.

## Wynncom Authorized Care Centre

Only qualified service personnel may repair your phone.

It is highly recommended to have a repair service by qualified service personnel. Use only the approved accessories and batteries.

**Note:** Please use the original components in order to achieve the best use of effects, as the use of non-original components may cause damage to the machinery, in such case company shall not be responsible.

# Introduction

## 1. Phone Display



<b>Key</b>	<b>Function</b>
Dial/receive key	Dial and receive calls via SIM1/SIM2 card. View SIM1/SIM2 call history in idle mode and access shortcut menu .
Call End Key/power on/off key	Pressing and holding to turn the phone on/off. End a call or reject an incoming call. Return to the idle mode.
Left Soft Key	Enter Shortcuts
Right Soft Key	Access the phonebook list in idle mode. Return to the previous menu.
OK Key	Enter the Main menu in idle mode.
*	Press and hold to toggle between *, +, (pause character) P, and (wait character) W. Press to enter symbol when editing text.
#	Press to switch input modes when entering text. Press and hold to activate silent mode/Second time Long press for bring the phone to general mode
Navigation Key	Press to access four functions in idle mode (Up: Audio Player Down: Camera Left: Write Messages Right: FM Radio Within a menu, press Up, Down, Left or Right to scroll through menu options.

**Note:** “Press” in this manual, means to press and release the key; “press and hold” means to press and hold the key for at least 3 seconds.

## 2. Icons & Symbols

The Icon shown on the display may vary depending on your country or service provider. The number 1 and 2 in icons mean SIM1 and SIM2.



 
**Signal Strength:** Shows the strength of the receiving signal. Greater the number of bars, stronger the signal strength.

---




**Roaming:** Appears when the phone is roaming.

---

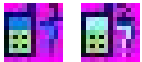

**Missed Calls:** Appears when there is missed call(s).

 ---

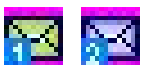

**New Message:** Appears when a new incoming text message is received and is unread.

---



**Call Barring On:** Appears when the call barring mode is active.

---



**Call Forward:** Appears when the call forward mode is active.

---



**Alarm On:** Appears when you set the alarm.

---



**Lock:** Appears when you set the phone lock.

---



**Battery Strength:** Shows the level of your battery. The more bars you see, the more power you have left.

---



**Headset:** appears when you set the Sounds & Alerts as Headset.

---



**General Profile:** Appears when select the General Profile.

---



**Bluetooth:** appears when you “on” the Bluetooth.

---

\* Depending on your country or service provider, the icons shown on the display may vary.

## Getting Started

Please read the safety instructions in the "Safety Information and Notices" section before use.

 
 
### 1. Inserting the SIM Card and the battery

#### Remove the back cover

Make sure the phone is switched off. You need to remove the back cover of your phone before you can insert the SIM card. Hold the phone with the front facing downwards lift the cover upwards to remove it.

#### Remove the battery

Put your finger on the black holder located at the top of the battery slot and lift the battery up to remove it.

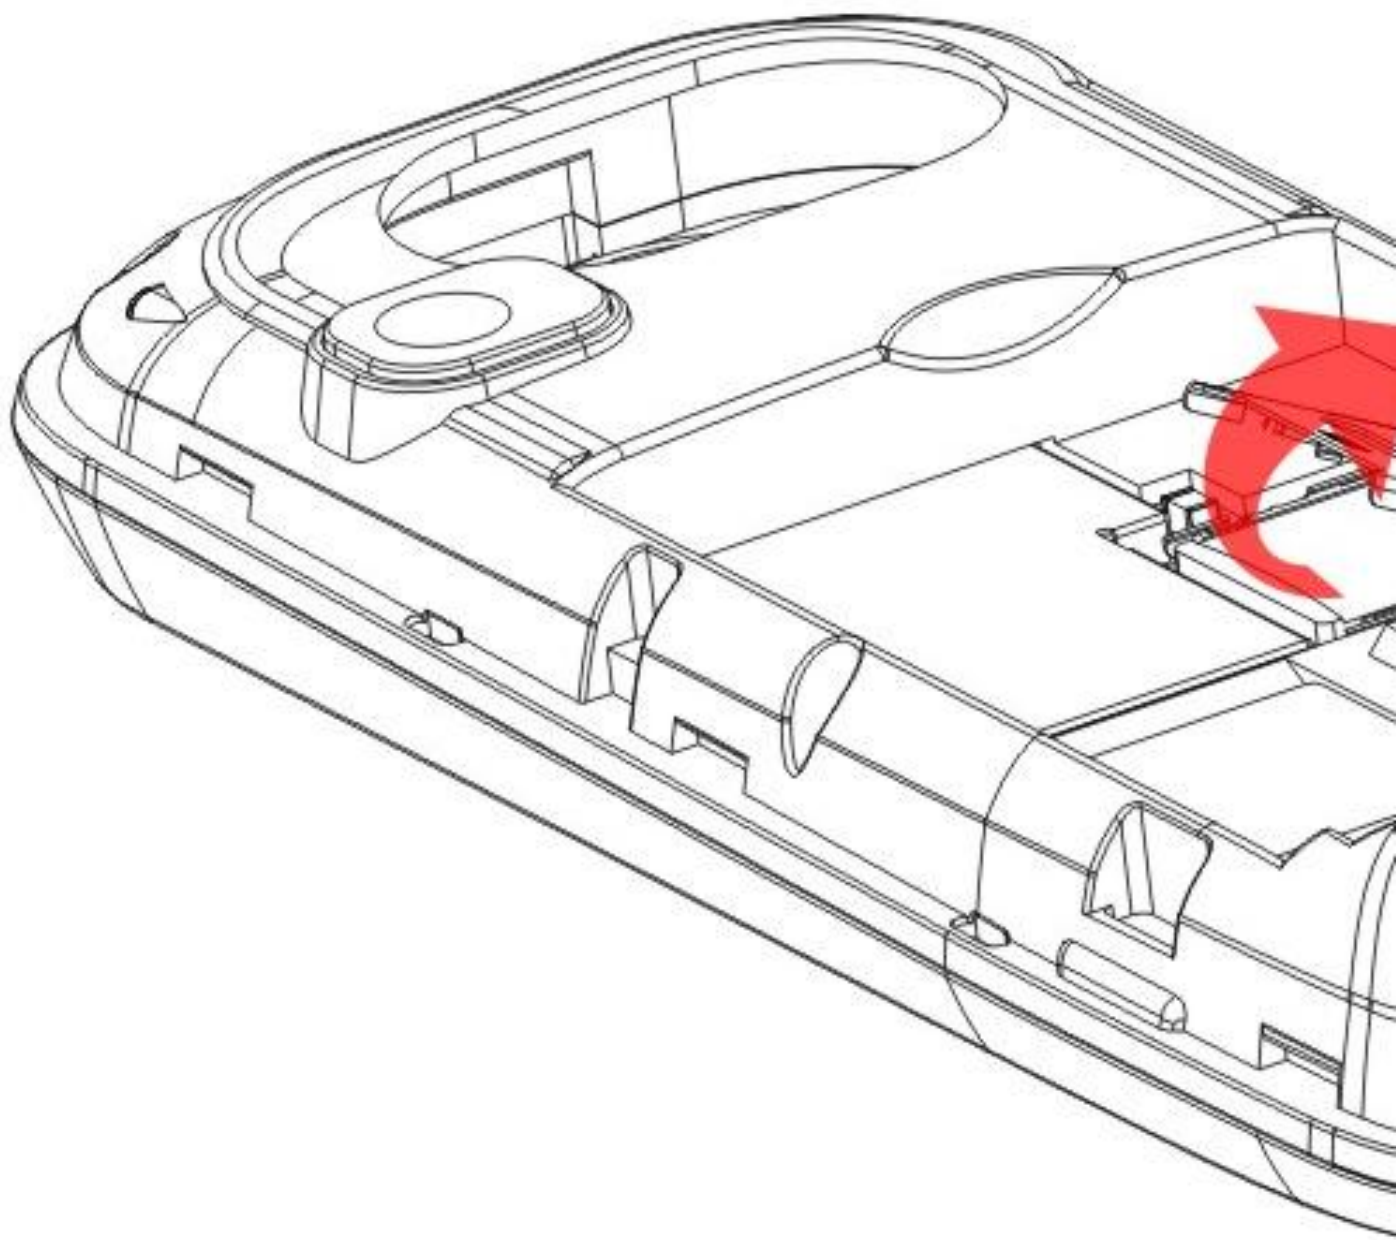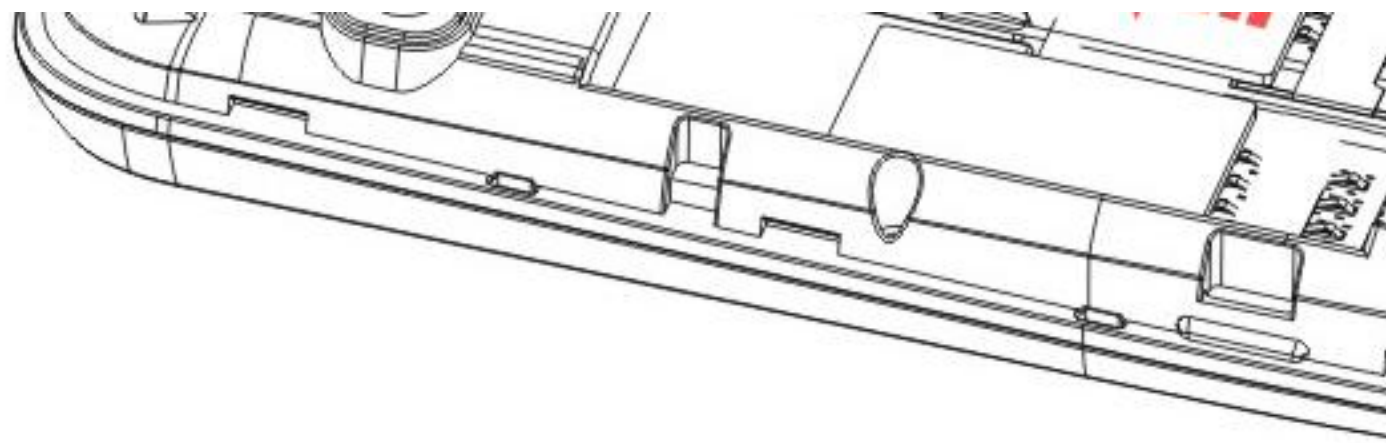


### 3. Turning the phone on

To turn the phone on, press and hold the Call End key. If you have already enabled the Sim Lock function then enter the PIN code (the 4 to 8 digit code of your SIM card). It is preconfigured and provided to you by your network operator or retailer. If you enter an incorrect PIN code 3 times in succession, your SIM card will be locked. To unlock it, you must obtain the PUK code from your network operator and if you enter an incorrect PUK code 10times in succession ,your need to change the SIM card.

### 4. Charging the Battery

 Ensure the battery is inserted in the handset. To charge the battery, plug in the charger connector at the bottom of your phone (USB interface) and then plug the other end into an AC power socket.

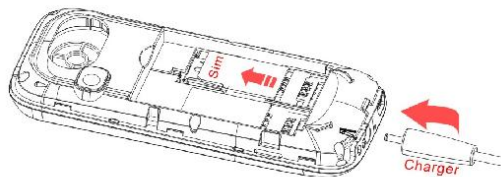

The battery symbol indicates the charging status. While charging, the charge indicators will scroll. When all the scroll bars are steady, the battery is fully charged. It takes about 4 hours to fully charge the battery.

Disconnect the charger from the phone.

Disconnect the charger from the AC power socket.

**Note:** If the battery is powerless, the battery icon will reappear after a few minutes of charging.

### 5. Important Password

Phone lock password is set as 0000 by default.

### 6. Keypad Lock and Unlock

Go to Settings > Phone settings > Auto keypad lock to select the time for

keypad lock.

In idle mode, if the time expires, the keypad will be locked automatically.

Long press \* **key** to lock/unlock the keypad manually.

## **7. Transfer files to the Micro SD (External Memory) card**

Insert your Micro SD card into a card reader, and then connect the card reader to the USB port of a PC. The PC will auto detect the card reader as a removable disk. You can access the Micro SD card memory now.

Download or upload the files to Micro SD card.

Finally, insert your Micro SD card into your cellular phone, you can view the files in Menu > File Manager > Memory card.

# ***Text Entry***

## **1. Input Method**

Your cellular phone supports several input methods, which include:

Multitap (ABC / abc / Abc)

Numeric (123)

Insert Symbol

Hindi Input

### **➤ Changing the input modes**

During text editing, you can press the # Key to switch input modes, or press the Left Soft Key [Options] and choose Input method to select different input modes.

### **➤ Entering Symbols**

In any input mode, press the \* Key to open the symbols input screen. Use the navigation key to choose the desired symbol and the OK key to select it.

## **3. Multi taps Input**

This method requires multiple key presses to reach the desired character: the letter "h" is the second letter on the 4 key, so you must press 4 twice



quickly to enter "h". Using this mode requires you to press a key as many times as needed to enter the desired letter.

Example:

To enter the word "home" in Multitap input mode "abc", press key 4(GHI) twice, press key 6(MNO) thrice, press key 6(MNO) once and key 3(DEF) twice.

## 4. Numeric Input

Press the # Key to select "123" input option then you can enter the numbers.

# Calling

## 1. Making a Call

In idle mode, enter the phone number. Press the dial key to call the number from SIM1 and SIM2. Press the Call End Key to end the call.

**Note:** During a call, press the navigation up and down key to adjust the volume. You can press the Left Soft Key [Options] to choose Sound Recorder to record.

In most countries, recording telephone conversations is subject to legislation. We advise you to notify the caller if you intend to record your conversation and only do so if they agree.

## Making an International Call

1. Press the \* Key twice quickly to enter "+".
2. Enter the country code.
3. Enter the area code (normally without the 0 before it) followed by the phone number.
4. Press the Dial Key to call directly.

## 2. Answering a Call

Press the call receive key/Dial Key to answer calls. Press the Call End key to reject it.

# ***Overview of menu functions***

To access Menu mode, press [**Menu**] in Idle mode.

\* Some menus are operator-, network- and subscription-dependent

## **1. Messages**

- 1.1 Write Message
- 1.2 Inbox
- 1.3 Outbox
- 1.4 SMS Backup
- 1.3 Signature
- 1.4 Settings
- 1.5 Memory Status
- 1.6 Voice mail Server
- 1.7 Broadcast Message
- 1.8 Blacklist

## **2. Phonebook**

- 2.1 Contacts
- 2.2 Add New Contact
- 2.3 Delete All
- 2.4 Copy All
- 2.5 Memory Status
- 2.6 Speed Dial
- 2.7 Phonebook Backup

## **3. Call History**

## **4. Settings**

- 4.1 Date & Time
- 4.2 Display Settings
- 4.3 Phone Settings
- 4.4 Call Settings
- 4.5 Network Settings
- 4.6 Network Status
- 4.7 Security Settings
- 4.8 Restore Factory Settings

## **5. Y Zone**

5.1 Auto Call Record

5.2 Games

5.4 Mobile Tracker

## **6. Multimedia**

6.1 FM Radio

6.2 Audio Player

6.3 Sound Recorder

6.4 Camera

6.5 Video Recorder

6.6 Video Player

6.7 Image Viewer

## **7. Profile**

## **8. File Manager**

## **9. Organizer**

# Menu Functions

## How to Use

### Select Menu

Press the OK key [Menu] to enter main menu in idle mode.

Press the Navigation Key to choose desired operation and press the Left Soft Key [Ok] to enter the selected operation.

You can exit a menu and return to idle mode by pressing the Right Soft Key [Back] or the Call End Key.

### Main Menu

Messages	Phonebook	Call Center
Settings	Y-Zone	Multimedia
Profiles	File Manager	Organizer

## 1. Messages

### 1.1 Write Message

This function can begin a new message. After completing the message.

- Press OK key to enter:
- Enter recipient: Enter recipient to send message
- Contacts: Enter Contact list to add numbers.
- Call History: Enter SIM1/2 call history to add numbers.

Press left soft key to enter Options:

- Send: Enter recipient, select number for Contacts or Call History to send the message
- Save: To save the message in outbox.
- Writing language: To select writing language
- Back: To return to message menu.

### 1.2 Inbox

After entering the Inbox, press up/down navigation key to select messages. Press OK key to check the details of message, or press left soft key to access Options:

- View: To check the message
- Reply: Reply message to the sender
- Delete: Delete the message.
- Copy to phone/SIM
- Move to phone/SIM
- Delete all: Delete all messages
- Copy all: Copy all messages From SIM or From phone
- Move all: Move all messages From SIM or From phone
- Mark several: Select one or more messages to mark

### **1.3 Outbox**

Checks the information of unsuccessfully sent message in outbox . Press left soft key to access Options:

- View: To check the message
- Delete: Delete the message.
- Copy to phone/SIM
- Move to phone/SIM
- Delete all: Delete all messages
- Copy all: Copy all messages From SIM or From phone
- Move all: Move all messages From SIM or From phone
- Mark several: Select one or more messages to mark

### **1.4 SMS Backup**

Press left soft key or OK key to select and confirm to backup messages.

### **1.5 Signature**

You can edit signature and add it to message. Enter the menu to select:

- Mode: Press left soft key or OK key to turn on/off this mode
- Signature text: Enter and edit signature content

### **1.6 Settings**

You can configure the default information about SMS properties. Before using message function, you need to do necessary settings as follows:

- Profile settings: User should set a proper profile for mobile message. Enter into each mode to find the profile name, message centre number, validate time, sending profile setting.
- Common settings: Activate Delivery Reports, Reply Path and save sent message.
- Preferred storage: User can choose location to save the message either in mobile or SIM card

## 1.7 Memory Status

To check SIM1 or SIM2 memory status.

## 1.8 Voicemail Server

Select SIM1 or SIM2 voice mail. You can select to Edit the number or Connect to voice mail.

This function needs a network supply. Please contact with your service provider for more information.

## 1.9 Broadcast Message

This network service enables you to receive all kinds of text messages, such as weather reports or transportation information. Until now, there are several networks afford the service in this world. Please consult your network operator for more reference. Functions of receiving and reading the messages of cell broadcast are as follows:

- **Receive Mode:** User can open or close the receiving of cell broadcast message.
- **Channel Setting:** User can set the channel of cell broadcast, including the selection, add, edit and delete.

## 1.10 Black List

– Mode: Turn on/off black list

– Black list numbers: Edit and add numbers to the list.

## 2. Phonebook

In the phonebook, you can store contacts' personal information and numbers while also search for previously stored contacts.

- **Contacts:** Enter Contacts list to check contacts, and you can input first letter or contacts' name to search.
- **Add new contact:** Add new contact to SIM1, SIM2 or Phone
- **Delete all:** Delete all contacts From SIM1, From SIM2, or from Phone
- **Copy all:** Copy contacts among SIM cards and Phone
- **Memory status:** Check memory status of SIM1, SIM2, or Phone
- **Speed dial:** To check Status or Set number
- **Phonebook backup:** Select Phonebook export or Phonebook Import to backup.

## 3. Call History

Select SIM1 or SIM2 to check call history.

In the call history menu, you can check dialled calls, received calls, missed calls, etc.

- Missed calls: Display the latest missed calls list.
- Dialed calls: Display the latest dialed calls list.
- Received calls: Display the latest received calls list.
- All calls: Display the latest calls list.
- Clear history: Delete all records.
- Call Timer: Display the time taken for last call, dialed call, received call and reset the timer.
- SMS counter: Check the number of all sent and received messages.

## 4. Settings

### 4.1 Date & Time

You can set date and time, or change the format.

### 4.2 Display Settings

- Wallpaper settings: To set the wallpaper .
- LCD Backlight: Set Time for backlight here.
- Brightness: Press left/right navigation key to select brightness.
- Owner number: To set the owners number.

### 4.3 Phone Settings

- Language : To set display language
- Shortcuts: You can select different functions for shortcuts.
- Auto keypad lock: You can set the time to lock the keypad automatically.
- Input method settings: Select and set Writing language and Input method.

### 4.4 Call Settings

#### SIM1/2 call settings

- Caller ID: To set whether hide your ID.
- Call waiting: Set the mode of call waiting, this function need to be activated.
- Call divert: When the call divert is activated, incoming calls will be diverted to voice mail or other phone numbers according to the call divert settings.
- Call Barring: When the call barring is activated, some of the calls will be barred according to the call barring setting condition. Contact your service provider to sign up for call barring.

#### – Common call settings

- Call time reminder: To set reminder for call time
- Auto redial: To turn on/off this function
- Black list: To turn on/off this function

- Answer mode: To select Any key for answer mode

## 4.5 Network Settings

Select SIM1 or SIM2 network to set:

- Network selection
  - New search
  - Select network
  - Selection mode: Manual or Automatic
- Preferred networks

## 4.6 Network Status

To check SIM1 or SIM2 network.

## 4.7 Security Settings

- – SIM1/2 security
  - SIM lock: Input SIM1/2 PIN to turn on/off SIM lock
  - Fixed dial: To set mode or edit fixed dial list. You need to input PIN2 to activate this function.
  - Change password: To change PIN or PIN2 password
- – Phone security
  - Phone lock: If turn on this function, you need to input password every time you power on the phone.
  - Change password: To change phone lock password, the default password is 0000.
- Privacy Protection: To password protect the message , phonebook, call log , photo , video player , Music , file manager.  
The Default password is “0000”

## 4.8 Restore Factory Settings

Input the default password 0000 to restore factory settings.

## 5. Y Zone

### 5.1 Auto Call Recorder

Auto call recorder: To turn on/off this function.

### 5.2 Games

Your phone supplies built-in game, you can play it whenever you want. Select Game settings to set Audio.

### 5.3 Mobile Tracker

Enter password to activate mobile tracker function.

When user activated this function and lost the mobile, if someone pick-up the



mobile and insert new SIM, the Mobile Tracker will send SMS to predetermined numbers to show detail of the lost mobile. This message can be edited by end user.

## **6. Multimedia**

### **6.1 FM Radio**

Enter FM radio; the phone will search channels automatically. Press left/right key to change frequency, press up/down navigation keys to search channels or frequencies automatically. Up/down navigation key to adjust the volume.

Press the left soft key to access Options:

- Power on/off
- Tune
- Channel List
- Preset auto search

### **6.2 Audio Player**

This function menu is used to store and play the audio file.

Press the left soft key or OK key to enter and use the left/right navigation keys and OK key to operate Audio Player.

Press up/down navigation key to adjust volume. Press left soft key to access Options:

- All songs: Check all audio clips
- Settings: Set parameters related of audio player
- Help: Check help information

### **6.3 Sound Recorder**

You can take a recorder in this function. When enter the recorder, press left soft key to access Options: Record, List, and Settings.

Press OK key to record, press left soft key to pause, press right soft key to stop. After saved, press left soft key to access Options.

### **6.4 Camera**

Press left soft key or OK key to select the function. The photo can be previewed in the screen; press OK key to shoot and right soft key to back, left soft key to access Options:

- Camera settings: Set parameters related to camera
- Image settings: Set parameters related to image
- Restore default: Reset all settings to default
- Image viewer: Enter image view to check saved images

### **6.5 Video Recorder**

Press left soft key or OK key to enter video recorder. Press OK key to shoot,

press left soft key to access Options:

- Settings: Set parameters related to video recorder
- Restore default: Reset all settings to default

## 6.6 Video Player

Preview the videos. Press up/down navigation key to adjust volume. Press left/right navigation keys and OK key to operate video player. Press left soft key to access to "Play list", then press left soft key again to access Options:

- Play
- Add
- Remove
- Remove all
- Refresh list

**Note : For Full Screen : Long Press " 0 key"  
:For Play and stop press " ok key".**

## 6.7 Image Viewer

To watch the pictures clicked.

## 7. User Profiles

- General
- Meeting
- Indoor
- Outdoor
- Headset

Press left soft key or OK key to enter Options: Activate/ Customize.

## 8. File Manager

Enter this menu; you can check the files store on Memory card. Select one file to open and press left soft key, you can do options.

## 9. Organizer

### 9.1 Alarm

The alarm clock feature sounds an alert or makes a vibration alert at a time you specify. After set Status, Time, Snooze, Repeat, and Alarm tone, press left soft key to access Options to save.

### 9.2 Bluetooth

This mobile phone support Bluetooth wireless connection. You can establish wireless connection between mobile phone and device to realize voice communication, data exchange and synchronization.

- Turn on/off
- Visibility
  - On
  - Off
- My Devices
- Search audio devices
- My Bluetooth Name
- Advanced

### 9.3 Calendar

You can use this feature to view the year, date and term easily. Use navigation keys to navigate other date. Press left soft key to do options:

- View tasks
- Jump to data
- Go to today
- Week starts on

### 9.4 Task List

To check tasks. Press left soft key to select Add and edit new task. Select one task and press left soft key to access Options:

- Add: Add new task
- Edit: Edit the task
- Delete: Delete the task
- Delete all: Delete all tasks

### 17.5 Calculator

This feature can use your phone as a calculator for simple calculations.

Press keypad or touch corresponding icons to enter the numbers. Use following keys to calculate:

Up, down, left, right key: +, -, ×, ÷

OK key: Show the calculation result.

# Key: Decimal point

### 17.6 STK

If your SIM card supports STK function, the phone can display different first level menu according to different STK card. This function needs the network provider support. If user finds STK function can't operate normally, please contact the network provider. If the network provider does not support this function, we do not claim any responsibility whatsoever.

### 17.7 Torch

The phone can be used as torch. In the menu, press left soft key or OK key to turn on/off torch. You can also long press OK key in standby mode to turn on/off torch

<b>Technical Specification of W104n</b>	
GSM Network	900/1800 MHz
Display Size	4.6 Cm
Battery Capacity	1000 mAh
Charger Specification	Input: 100-300V/50-60Hz Output : DC 5V /500mA
SAR Value	1.169/Kg
Camera Resolution	VGA Camera

# Warranty Card

## Welcome!

Congratulations on your new Wynncom Mobile Purchase.

## Limited Warranty:

Wynncom Digital Devices Pvt. Ltd. provides this Limited Warranty for your Mobile phone and original accessory delivered with your mobile Phone.

## Our Warranty:

Subject to the conditions of the limited Warranty, Wynncom Digital Devices Pvt. Ltd. warrant this product to be free from defects in design, material and workmanship at the time of its original purchase by a consumer, and for a subsequent period of:

- One (1) year for Transceiver
- Six (6) months for Charger, Battery and Headset.

To get maximum use of your new product, we recommend you to:

- . Read the guideline for safe and efficient use in the user manual.
- . Keep your original receipt; you will need it for warranty repair claims.
- . Present this Warranty Certificate along with original proof of purchase having details of purchase & Serial No. whenever you require any warranty services.
- . Read the terms and conditions of your handset warranty in the user manual provided with the Product.

In the unlikely event if the product needs service, please visit the nearest Wynncom [Authorized Care Centre](#).

For more information on Wynncom Products and Services, please visit our Website: [www.wynncom.net](http://www.wynncom.net) or email us at: [customercare@wynncom.net](mailto:customercare@wynncom.net)

Or call at: 1800-102-9299 between 8 AM to 10 PM all days of the week.

Conditions Apply.