

Wynncom W300 User Manual



Note: The content of the manual is correct when it is released, but **"Wynn Telecom Limited"** reserves the right to modify the technical specification without additional notification. Some content in the manual may be different from the mobile phone, as the accessory software, SIM card or service varies by providers.

Table of Contents

IMPORTANT SAFETY PRECAUTIONS.....3

INTRODUCTION.....10

1. PHONE DISPLAY10

GETTING STARTED.....12

1. INSERTING THE SIM CARD AND THE BATTERY.....12

2. INSERTING A MICRO SD (EXTERNAL MEMORY) CARD13

3. TURNING THE PHONE ON14

4. CHARGING THE BATTERY14

5. IMPORTANT PASSWORD.....14

6. KEYPAD LOCK AND UNLOCK.....14

7. TRANSFER FILES TO THE MICRO SD (EXTERNAL MEMORY) CARD15

TEXT ENTRY.....15

CALLING.....16

1. MAKING A CALL.....16

2. ANSWERING A CALL16

OVERVIEW OF MENU FUNCTIONS17

MENU FUNCTIONS19

HOW TO USE19

1. MESSAGES.....19

2. PHONEBOOK21

3. CALL CENTER.....22

4. SETTINGS23

5. Y ZONE.....27

6. MULTIMEDIA.....29

7. Profiles.....30

8. FILE MANAGER.....31

9. ORGANIZER.....32

10. Audio Player.....32

11. SERVICES.....33

12. Video Player.....33



Important safety precautions

This section contains important information on the safe and efficient operation of your mobile device.

For your safety, please refer to the guideline prior to using the phone.

Note: Failure to comply with the following precautions may be dangerous or illegal.

Drive safely at all times

Do not use a hand-held phone while driving. Park the vehicle first.

Switch off the phone when refueling

Do not use the phone at a refueling point (service station) or near fuels or chemicals.

Switch off in an aircraft

Wireless phones can cause interference. Using them in an aircraft is both illegal and dangerous.

Switch off the phone near all medical equipment

Hospitals or health care facilities may be using equipment that could be sensitive to external radio frequency energy. Follow any regulations or rules in force.

Interference

All wireless phones may be subject to interference, which could affect their performance.

Be aware of special regulations

Meet any special regulations in force in any area and always switch off

your phone whenever it is forbidden to use it, or when it may cause interference or danger.

Water resistance

Your phone is not water-resistant. Keep it dry.

Sensible use

Use only in the normal position (held to the ear). Avoid unnecessary contact with the antenna when the phone is switched on.

Keep your phone away from small children

Keep the phone and all its parts, including accessories, out of the reach of small children.

Accessories and batteries

Use only approved batteries and accessories, such as headsets and PC data cables. Use of any unauthorized accessories could damage you and your phone and may be dangerous.

If jewelry, keys, beaded chains, or other conductive materials touch exposed battery terminals, this could complete an electrical circuit (short circuit), become very hot, and could cause damage or injury. Be careful when handling a charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects.

- ❖ Never use a charger or battery that is damaged in any way.
- ❖ Use the battery only for its intended purpose.
- ❖ If you use the phone near the network's base station, it uses less power. Talk and standby time are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.
- ❖ Battery charging time depends on the remaining battery charge, the type of battery, and the charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time is noticeably shorter than normal, it is time to buy a

new battery.

- ❖ If left unused, a fully charged battery will discharge itself over time.
- ❖ Use only approved batteries, and recharges your battery only approved chargers. Disconnect the charger from the power source when it is not in use. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.
- ❖ Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.
- ❖ Do not leave the battery in hot or cold places because the capacity and lifetime of the battery will be reduced. Try to keep the battery at room temperature. A phone with a hot or cold battery may not work temporarily, even when the battery is fully charged.
- ❖ Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object like a coin, clip or pen causes a direct connection between the + and – terminals of the battery (metal strips on the battery). For example, do not carry a spare battery in a pocket or bag where the battery may contact metal objects. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting.
- ❖ Dispose of used batteries in accordance with local regulations. Always recycle. Do not dispose of batteries in a fire.
- ❖ To ensure while using the phone please do not get the battery charge.
- ❖ During the course of charging, it is normal to find the battery and the phone slightly heat-up. The Phone will automatically protect itself when battery temperature rises so as to control temperature variation.

Note: This phone is just charged 50%. Please use up the power and recharge it fully. This is the case with the second recharge. After three repetition, the battery can achieve it' s best performance condition.

Operating Environment

Remember to follow any special regulations in force in the area you are in, and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger. When connecting the phone or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the equipment should only be used in the normal operating position (held to your ear with the antenna pointing over your shoulder).

Extreme heat or cold, Avoid temperatures below -10°C/14°F or above 45°C/113°F

Electronic devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone. Consult the manufacturer to discuss alternatives.

Pacemakers

Pacemaker manufacturers recommend that a minimum distance of 15 cm (6 inches) be maintained between a wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research and recommendations of Wireless Technology Research. If you have any reason to suspect that interference is taking place, switch you're your phone immediately.

Hearing aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may wish to consult your hearing aid manufacturer to discuss alternatives.

SIM AT Service

SIM Card provides several value-added services.

These functions will only display and work on the menu of the phone when your SIM card is supported. The content and the terms of the function lists will depend on your network service provider.

Please contact your network service provider (a network operator or the service provider) in regards with availability of any services related to the SIM card, application information and the costs.

Other medical devices

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Switch off your phone in health care facilities when regulations posted in these areas instruct you to do so.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted facilities

Switch off your phone in any facility where posted notices require you to do so.

Potentially explosive environments

Switch off your phone when in any area with a potentially explosive atmosphere, and obey all signs and instructions. Sparks in such areas

could cause an explosion or fire resulting in bodily injury or even death. Users are advised to switch off the phone while at a refueling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants, or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often but not always clearly marked. They include the areas below decks on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas, such as propane or butane, areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

Emergency calls

This phone, like any wireless phone, operates using radio signals, wireless, and landline networks as well as user-programmed functions, which cannot guarantee connection in all conditions. Therefore, you should never rely solely on any wireless phone for essential communications like medical emergencies. To make or receive calls, the phone must be switched on and in a service area with adequate signal strength. Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

To make an emergency call: **(For India example: 112,911,100,101,102)**

1. Key in the emergency number for your present location. Emergency numbers may vary by location.
2. Press the Send Key.
3. Inform your location. Do not end the call until given permission to do so. Certain features like Call Barring may need to be deactivated before you can make an emergency call. Consult this document and your local cellular service provider.

Other important safety information

- ❖ Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.
- ❖ Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.
- ❖ Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the phone, its parts, or accessories.
- ❖ For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. Improperly installed wireless equipment could result in serious injury if the air bag inflates.
- ❖ Switch off your phone before boarding an aircraft. It is dangerous and illegal to use wireless phones in an aircraft because they can interfere with the operation of the aircraft.
- ❖ Failure to observe these instructions may lead to the suspension or denial of telephone services to the offender, or legal action, or both.

Wynncom Authorized Care Centre

Only qualified service personnel may repair your phone.

It is highly recommended to have a repair service by qualified service personnel. Use only the approved accessories and batteries.

Note: Please use the original components in order to achieve the best use of effects, as the use of non-original components may cause damage to the machinery, in such case company shall not be responsible.

Introduction

1. Phone Display




Key	Function
Dial/receive key	Dial and receive calls via SIM1/SIM2 card. View SIM1/SIM2 call history in idle mode.
Call End Key/power on/off key	Pressing and holding to turn the phone on/off. End a call or reject an incoming call. Return to the idle mode.

 





Left Soft Key	Enter Shortcuts
Right Soft Key	Access the phonebook list in idle mode. Return to the previous menu.
OK Key	Enter the Main menu in idle mode.
*	Press and hold to toggle between *, +, (pause character) P, and (wait character) W. Press to enter symbol when editing text.
#	Press to switch input modes when entering text. Press and hold to activate silent mode/Second time Long press for bring the phone to Vibrator mode/third time Long press Idle mode.
Navigation Key	Press to access four functions in idle mode (Up: Audio Palyer Down:Alarm, Left: Camera Right: Write Message Within a menu, press Up, Down, Left or Right to scroll through menu options.

Note: "Press" in this manual, means to press and release the key; "press and hold" means to press and hold the key for at least 3 seconds.

2. Icons & Symbols

The Icon shown on the display may vary depending on your country or service provider. The number 1 and 2 in icons mean SIM1 and SIM2.

Status	Icons
1.SIGNAL STRENGTH	

2.SILENT MODE	
3.VIBRATE MODE	
4.BATTERY STATUS	
5.INDOOR MODE	
6.OUTDOOR MODE	
7.EARPHONE	
8.BLUETOOTH	

Getting Started

Please read the safety instructions in the "Safety Information and Notices" section before use.

1. Inserting the SIM Card and the battery

 
Remove the back cover

Make sure the phone is switched off. You need to remove the back cover of your phone before you can insert the SIM card. Hold the phone with the front facing downwards lift the cover upwards to remove it.



Remove the battery

Put your finger on the black holder located at the bottom of the battery slot and lift the battery up to remove it.

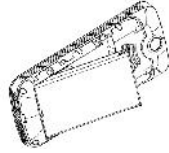

Insert the SIM card

Make sure that the clipped corner of the SIM card is facing the correct direction (clipped corner at top left) and the metallic contacts are facing downwards. Slide the SIM card into the card slot until it stops.



Install the battery

With the metallic contacts of the battery facing the metallic contacts in the battery slot, press the battery down until it locks into place.

2. Inserting a Micro SD (External Memory) Card

Slide the Micro SD card into the micro sd card slot with the metallic pins facing downwards.

 


3. Turning the phone on

To turn the phone on, press and hold the Call End key. If you have already enabled the Sim Lock function then enter the PIN code (the 4 to 8 digit code of your SIM card). It is preconfigured and provided to you by your network operator or retailer. If you enter an incorrect PIN code 3 times in succession, your SIM card will be locked. To unlock it, you must obtain the PUK code from your network operator and if you enter an incorrect PUK code 10 times in succession, you need to change the SIM card.

4. Charging the Battery

Ensure the battery is inserted in the handset. To charge the battery, plug in the charger connector at the bottom of your phone (USB interface) and then plug the other end into an AC power socket.



The battery symbol indicates the charging status. While charging, the charge indicators will scroll. When all the scroll bars are steady, the battery is fully charged. It takes about 4 hours to fully charge the battery. Disconnect the charger from the phone.

Disconnect the charger from the AC power socket.

Note: If the battery is powerless, the battery icon will reappear after a few minutes of charging.

5. Important Password

Phone lock password is set as 0000 by default.

6. Keypad Lock and Unlock

Go to Settings > Security > Auto keypad lock to select the time for

keypad lock.

In idle mode, if the time expires, the keypad will be locked automatically. Press the Left Soft Key and then * Key in quick succession to lock/unlock the keypad manually.

7. Transfer files to the Micro SD (External Memory) card

Insert your Micro SD card into a card reader, and then connect the card reader to the USB port of a PC. The PC will auto detect the card reader as a removable disk. You can access the Micro SD card memory now.

Download or upload the files to Micro SD card.

Finally, insert your Micro SD card into your cellular phone, you can view the files in Menu > My File> Memory card.

Text Entry

1. Input Method

Your cellular phone supports several input methods, which include:

Multitap (ABC / abc / Abc)

Numeric (123)

Insert Symbol

Hindi Input

> Changing the input modes

During text editing, you can press the # Key to switch input modes, or press the Left Soft Key [Options] and choose Input method to select different input modes.

> Entering Symbols

In any input mode, press the * Key to open the symbols input screen. Use the navigation key to choose the desired symbol and the OK key to select it.

3. Multi taps Input

This method requires multiple key presses to reach the desired character:

the letter "h" is the second letter on the 4 key, so you must press 4 twice quickly to enter "h". Using this mode requires you to press a key as many times as needed to enter the desired letter.

Example:

To enter the word "home" in Multitap input mode "abc", press key 4(GHI) twice, press key 6(MNO) thrice, press key 6(MNO) once and key 3(DEF) twice.

4. Numeric Input

Press the # Key to select "123" input option then you can enter the numbers.

Calling

1. Making a Call

In idle mode, enter the phone number. Press the dial key to call the number from SIM1 and SIM2. Press the Call End Key to end the call.

Note: During a call, press the navigation up and down key to adjust the volume. You can press the Left Soft Key [Options] to choose Sound Recorder to record.

In most countries, recording telephone conversations is subject to legislation. We advise you to notify the caller if you intend to record your conversation and only do so if they agree.

Making an International Call

1. Press the * Key twice quickly to enter "+".
2. Enter the country code.
3. Enter the area code (normally without the 0 before it) followed by the phone number.
4. Press the Dial Key to call directly.

2. Answering a Call

Press the call receive key/Dial Key to answer calls. Press the Call End key

to reject it.

Overview of menu functions

To access Menu mode, press [Menu] in Idle mode.

* Some menus are operator-, network- and subscription-dependent

1. Messages

- 1.1 Write Message
- 1.2 Inbox
- 1.3 Outbox
- 1.4 Drafts
- 1.3 Sentbox
- 1.4 Schedule SMS
- 1.5 Message Blacklist

2. Phonebook

3. Call Center

- 3.1 Dialed Numbers
- 3.2 Received Calls
- 3.3 Missed Calls
- 3.4 Rejected Calls
- 3.5 Delete All
- 3.6 Call Timer

4. Settings

- 4.1 Call
- 4.2 Phone
- 4.3 Display
- 4.4 Security
- 4.5 Connection Management

5. Y Zone

- 5.1 Hungama Radio
- 5.2 Hungama
- 5.3 Smart Auto Call Record
- 5.4 Games
- 5.5 Yahoo
- 5.6 MSN
- 5.7 Google
- 5.8 STK

6. Multimedia

- 6.1 Camera
- 6.2 Video Recorder
- 6.3 Image Viewer
- 6.4 FM Radio
- 6.5 Sound Recorder

7. Profile

8. File Manager

9. Organizer

- 7.1 Alarm
- 7.2 Bluetooth
- 7.3 Calender
- 7.4 Torch
- 7.5 Exchange Rate conversion
- 7.6 Unit Converter

10. Audio Player

11. Services

12. Video Player

Menu Functions

How to Use

Select Menu

Press the Left Soft Key [Menu] to enter main menu in idle mode.

Press the Navigation Key to choose desired operation and press the Left Soft Key [Ok] to enter the selected operation.

You can exit a menu and return to idle mode by pressing the Right Soft Key [Back] or the Call End Key.

Main Menu

Messages	Phonebook	Call Center
Settings	Y-Zone	Multimedia
Profiles	File Manager	Organizer
Audio Player	Services	Video Player

1. Messages

1.1 Write Message

You can write new message by using this function. When you input the message to be sent, press left soft key to send, to insert the templates, to add contact person information and symbol, and to save, etc.

- ❖ **Send:** Enter the interface of input number, you can dial the phone number directly, or press left soft key to enter the Phonebook and choose the number to send.
- ❖ **Insert the templates:** Enter the templates interface and you could insert the template to the message.
- ❖ **Add Contact Info:** Enter the Phonebook interface and you could insert the Phonebook information to the message.
- ❖ **Add Phiz:** Enter the symbol interface and add the symbols to the message.
- ❖ **Save:** Save this message to the drafts.
- ❖ **Schedule SMS:** Set the message for Schedule SMS.

1.2 Inbox

This menu includes SIM1 Inbox and SIM2 Inbox. All the operations are similar. This folder stores all the messages you have received.

You have the following **Options**: Reply, Delete, Operate, Call, Lock, Mark, Sort, Delete Repeated numbers, Add to blacklist.

After you select to Read a message, you have the following option:

- ❖ **Delete**: Delete this message.
- ❖ **Reply**: You could choose to reply by SMS.
- ❖ **Forward**: Forward the message.
- ❖ **Call**: Call the addresser.
- ❖ **Detail**: Detail of messages.
- ❖ **Extract subject**: Extract the subject.
- ❖ **Add to blacklist**: You can add the number to blacklist.

1.3 outbox

You can store the SMS you've sent in failure. The SMS could be differentiated by different icons. The two icons before the message list means whether this message is SMS, and it is stored in SIM1, SIM2 or the phone.

Choose one SMS and press left soft key, you could send, delete, lock, mark, sort, and so on.

- ❖ **Send**: Send this SMS.
- ❖ **Delete**: Delete this message.
- ❖ **Lock/unlock**: Lock the message or unlock it.
- ❖ **Mark**: Choose this message or all messages in the inbox, or only choose the messages saved in SIM 1 or SIM 2.
- ❖ **Sort**: Sort the messages in the inbox by time, contact person, subject or message type.

1.4 Draft box

This menu includes SIM1 Drafts and SIM2 Drafts. All the operations are similar.

This folder stores all the messages you save as draft.

Options include: Delete, Edit, Lock, Mark or Sort.

After you select to read a message, you have the following options:

- ❖ **Send**: Enter the interface of input number, you can dial the phone number directly, or press left soft key to enter the Phonebook and choose the number to send.
- ❖ **Insert the templates**: Enter the templates interface and you could insert the template to the message.

- ❖ **Add Contact Info:** Enter the Phonebook interface and you could insert the Phonebook information to the message.
- ❖ **Add Phiz:** Enter the symbol interface and add the symbols to the message.
- ❖ **Save:** Save this message to the drafts.
- ❖ **Schedule SMS:** Set the message for Schedule SMS

1.5 Sent box

Sent messages are saved here. **Your Options include:** Delete, Operate, Forward, Lock, Mark or Sort.

After you select to read a message, you have the following Options:

- ❖ **Delete:** Delete this SMS.
- ❖ **Operate:** Copy or Move the message from SIM to Phone or Phone to SIM.
- ❖ **Forward:** Forward this message to others.
- ❖ **Lock/unlock:** Lock the message or unlock it.
- ❖ **Mark:** Choose this message or all messages in the inbox, or only choose the messages saved in SIM 1 or SIM 2.
- ❖ **Sort:** Sort the messages in the inbox by time, contact person, subject or message type.

1.6 Schedule SMS

You can Schedule SMS for specified date and time.

1.7 Blacklist

Add the number to the blacklist to avoid the messages.

2. Phonebook

There are two separate phonebooks, one stored on the SIM card and the other in the phone.

Each entry in your SIM card's phonebook consists of a phone number and a name. When you change to another phone, the contact information can be transferred to your new phone with the SIM card. The total number of entries allowed in a SIM card varies with different SIM cards.

The contacts stored in the phone can include (Name, Mobile, Home Number, Email, Image, Ringtone and Unclassified), this information will not be transferred with the SIM card to your new phone.

The contact list is arranged in alphabetical order. Select one contact and press Options to the following options:

- ❖ **New:** Add New Contact to Phone/SIM1/SIM2.
- ❖ **Edit:** To edit the contact name and number.

- ❖ **Search:** Search Contact.
- ❖ **SMS:** You Can Write SMS/.
- ❖ **Call:** To dial call directly on selected number.
- ❖ **Send vCard:** Send vCard by SMS/Bluetooth.
- ❖ **Delete:** To delete the selected number.
- ❖ **Mark:** To Mark Selected number/Mark all number.
- ❖ **Copy to:** To Copy the number to SIM1/SIM2, Phone, Copy to Memory Card.
- ❖ **Copy All:** You can Copy all Contact SIM1 to Card.
 - ◆ You can copy all contact SIM2 to Card.
 - ◆ You can copy all contact Card to phone.
- ❖ **Others:**
 - ◆ Speed Dial Settings: You can edit at 3 to 9 numeric key.
 - ◆ Caller ID: You can set it On/off.
 - ◆ Memory Status: You can check the memory status of SIM1/SIM2 and Phone.
 - ◆ Single Line Display: You can set the display mode of record list as one line or two lines.

3. Call Center

Display your recent call log.

3.1 Dialed Numbers

Display the list of your recent dialed numbers.

On the interface of Dialed, choose one dialed number, then press left soft key "**Option**" to enter the Option interface and you can get the following operations.

- ❖ **Details:** You can enquire the details of the record, including the name, number, date, time, calling time, etc.
- ❖ **Call:** Call on that number directly.
- ❖ **Save:** You can save this number into the SIM card or certain group in the phone.
- ❖ **Send SMS:** You can send SMS or to this number.
- ❖ **Add to existing contact:** Add this number to the existing record of the Phonebook.
- ❖ **Add to Blacklist:** Add this number to the blacklist.
- ❖ **Delete:** Delete this record.
- ❖ **Delete all:** Delete all the records in the Dialed list.

- ❖ **Call Timer:** Last Call Time, Total Sent, Total Received and total Timing Reset (phone password is required).
- ❖ **Call Cost:** Calculate the call cost according to the call time.
- ❖ **GPRS Counter:** Total Sent, Total Received and total Timing Reset (phone password is required).

3.2 Received Calls

Display the list of your recent answered numbers. The operation is the same as the Dialed.

3.3 Missed Calls

Display the list of your recent missed numbers. The operation is the same as the Dialed.

3.4 Rejected Calls

Display the incoming call records in the blacklist. The operation is the same as the Dialed.

4 Settings

You can customize the settings, such as time and date, language, call settings etc.

4.1 Call

4.1.1 Dual SIM Settings

- ❖ **Standby Mode:** You can choose which SIM is to enable.
- ❖ **Settings of SIM card III:** You can set as dialing number, SMS, service, prompt Dial, reply from the same card when both cards in use. After setting default card, select dialing number, sending SMS or , connecting web page or reply from the same card will use the default SIM card. If you set as reminding selection, then whenever you do abovementioned work, you will be asked to choose SIM card.
- ❖ **Setting SIM name:** You can set any name you like as the name of SIM card slot.

4.1.2 Network Settings

When your phone enjoys roaming service, the network can automatically or manually select network. The network roaming service can only be used when you subscribed the effective roaming service provided by the other network operator.

- ❖ **Automatic selection:** Press left soft key, the phone will automatically search network. The operation will have the phone independently registered with the most proper network..
- ❖ **Manual selection:** Press left soft key, the phone will search available network, and select the compatible network from the network list.

4.1.3 Call Divert

When "call divert" function is started up, you can transfer the incoming call to voice inbox or other phone number according to the scheduled "call divert" conditions.

- ❖ **Call Forwarding Unconditional:** All incoming calls will be transferred to voice inbox or other phone number according to the setup.
- ❖ **Call Forwarding on Busy:** When your number is busy, the incoming calls will be transferred to voice inbox or other phone number according to the setup.
- ❖ **Call Forwarding on no reply:** When there are missed calls in your phone, they will be transferred to voice inbox or other phone number according to the setup.
- ❖ **Divert If Unreachable:** When your phone is power off or out of the service area, the incoming calls will be transferred to voice inbox or other phone number according to the setup.
- ❖ **Cancel all calls divert:** You can delete all settings of call divert.

4.1.4 Call Barred

All outgoing calls, incoming calls, roaming incoming calls, international outgoing calls, roaming international outgoing calls are available.

- ❖ **All outgoing calls:** Start up the function will bar all outgoing calls.
- ❖ **All incoming calls:** Start up the function will bar all incoming calls.
- ❖ **Roaming incoming calls:** Start up the function will bar all roaming incoming calls.
- ❖ **International outgoing calls:** Start up the function will bar all international outgoing calls.
- ❖ **Roaming international incoming calls:** Start up the function will bar roaming international incoming calls.
- ❖ **Cancel all call barring:** Cancel all restrictions on the call.
- ❖ **Change password of call barring:** You can consult your network operator about the call barring password.

Note: The above-mentioned function will need network support. To use the function, please contact your network service provider.

4.1.5 Call Waiting

You can turn on /off this function. When it is On, even when you are making a call, you can also receive another incoming call.

4.1.6 Hide ID

The other side cannot see your phone number during the calling. This function must be supported by network.

4.1.7 Select Line

Line Switch: Switch between line 1 and line 2. (Note: when line 2 is chosen, no calls can be made.)

4.1.8 Flight Mode

You can start up the function directly or choose when power on. It is used in flight. When flight mode is working all the functions connect with network, such as SMS, dialing back, WAP network, will be unavailable, to avoid interfering the signal of the flight you take.

4.1.9 Others

- ❖ **50 secs warning:** After connecting the call, if this option is On it warns for 50secs.
- ❖ **Vibration when Connected:** When the function is started up, each time when a call is connected, the reminder sound can be heard.
- ❖ **Answer/ Reject Mode:**
 - ◆ **Answer SMS to rejected call:** When an incoming call is rejected, a reminder "answer SMS" will appear.
 - ◆ **Any key answer:** When this function is " On" , you can answer a call by press any key except right soft key or end key.
 - ◆ **Auto Answer when headset Mode:** You can on/off this function.
 - ◆ **Auto Answer when Bluetooth (BT) Mode:** You can on/off this function.
- ❖ **Automatic redial:** You can on/off this function. When it is on, a failed dialing will automatically redial.

Note: By default the storage is Audio folder of phone memory, after the phone memory is completely full the file will save in Audio folder of memory card.

When Auto Call record is activated the file will save in the following format:

Phone number<Date (YY-MM-DD)<Time (Time will be in 24hr clock format)

4.2 Phone Settings

- ❖ **Time & Date:** You can set up the date and time on the phone as well as their display mode.
- ❖ **Select Language:** You can select phone language.
- ❖ **Dedicated Keys:** You can change the short keys as per your convenience.
- ❖ **Auto Power on/off:** You can set the time and repeat mode of power-on and power-off.
- ❖ **Power management:** You can view the electric quantity of your battery.

- ❖ **Restore factory settings:** You can restore part of the phone settings as factory settings.

The default code of restoring factory settings is: 0000.

4.3 Display settings

- ❖ **Wallpaper settings:** You can set as default wallpaper image as well as more other wallpaper images.
- ❖ **Idle display settings:** You can set the information you require on idle display of you mobile phone.
- ❖ **Contrast:** On the screen backlight interface you can set different lightness of your phone by pressing the left/right direction key.
- ❖ **Backlight:** "Always on", "30seconds", "20seconds", "15seconds", "10seconds" and "5seconds" are available.
- ❖ **Keypad light:** "20seconds", "10seconds", "5seconds", "nighttime mode" and "Deactivate" are available.
- ❖ **Animation Effect:** Set the Power on/off animation On/off.

4.4 Security

- ❖ **PIN code:** You can on/off or modify PIN code. Correct PIN code shall be input when you unlock or off PIN code. If PIN code verification is started up, each time when you switch on your phone, you will have to input PIN code. If you have entered wrong PIN codes three times in a continuously, SIM card will be locked. You will have to get PUK code to unlock it. Please contact network operator to get PUK code when necessary.

Note: The default PIN code is 0000.

- ❖ **PIN2 code**
You can review PIN2 code. For details, please contact network operator.
- ❖ **Privacy Protection**
You can review privacy protection password. Besides, you can also set passwords for some menu (call log, Message, camera, contacts, File Manager, Calendar or Mass Storage) .You have to enter password each time when you desire to open that particular Menu option where you have put password.

Note: The default password of privacy protection mode is "0000".

- ❖ **Auto Keypad Lock:** You can lock your phone manually, or select auto lock for the phone to lock its screen and keypad automatically after some idle time in the Standby mode.
- ❖ **Lock screen by End Key:** By activating this function you can lock the

- keypad, just by selecting "Call end key".
- ❖ **Power on password:** You can on/off "phone password" or change it. When "phone password" is activated, you will have to enter "password" each time when you use the phone.
 - ❖ **Note:** The default phone password is "0000".
 - ❖ **Mobile Tracker:** : If you lose your phone, this function may probably help you to get back your phone. You can on/off this Mobile Tracker function or change anti password (the password shall be 6-digit). When "**Mobile Tracker**" function is "**on**", you can only use your SIM card. If different SIM card is used, the phone will automatically check it when you switch it on, and the phone will require you to input protection password. If the password is correct, you can set up the SIM card so that it is compatible with the Mobile Tracker function. If you have entered wrong password for three time, when you switch on the phone, it will send warning SMS to your original SIM card every 24 hours. If the phone is switched off, the warning messages will be sent when you switch on the phone. The warning messages will indicate the existing SIM card and the neighborhood number. When 15 warning SMS were sent out, the phone cannot be used. You will have to take the purchase evidence and have to visit to Nearby Wynncom Service Center. To guarantee the safety of your phone, you are suggested to start up the function when you purchased the phone.
 - ◆ **Activate:** Activate Mobile tracker function.
 - ◆ **Deactivate:** To deactivate mobile Tracker function, you will have to enter the protection password you set for the phone.
 - ◆ **Change Password:** To change protection password, you will have to input the protection password you set for the phone.

The default Mobile Tracker password is "000000".

4.5 Connection Management

- ❖ **Network account**
You can select network count which you want to use.
- ❖ **GPRS settings**
You can select connect when needed, always connect.

5. Y Zone

5.1 Hungama Radio

The Hungama radio is IVR service to listen your favorite songs.

Note: Call charges as per operator plan shall appl.

5.2 Hungama Link

You can sign in to Hungama by the direct link provided in you mobile phone. This will work only when GPRS service is activated in your SIM.

5.3 Smart Auto Call Record:

You can on/off this function. When it is "on" all the incoming calls will record at the defined storage place.

Note: By default the storage is Audio folder of phone memory, after the phone memory is completely full the file will save in Audio folder of memory card.
When Auto Call record is activated the file will save in the following format:
Phone number<Date (YY-MM-DD)<Time (Time will be in 24hr clock format)

5.4 Snake Game

- ❖ **New game:** You can start a new push cases game.
- ❖ **Continue:** You can continue to play the game you didn't finish last time.
- ❖ **Choose level:** You can choose the level of the game.
- ❖ **Help:** Instruction of game.

5.5 Yahoo

You can sign in to Yahoo by the direct link provided in you mobile phone. This will work only when GPRS service is activated in your SIM.

5.5 Yahoo

You can sign in to Yahoo by the direct link provided in you mobile phone. This will work only when GPRS service is activated in your SIM.

5.6 Facebook

You can sign in to Facebook by the direct link provided in you mobile phone. This will work only when GPRS service is activated in your SIM.

5.7 MSN

You can sign in to MSN by the direct link provided in you mobile phone. This will work only when GPRS service is activated in your SIM.

5.8 Google

You can sign in to Google by the direct link provided in you mobile phone. This will work only when GPRS service is activated in your SIM.

6.Multimedia

6.1 Camera

You can take photo at any time and save the photo in memory card. The photo can be used as wallpaper of your device or you can send it to your friends through (multimedia messaging service).

1.3MP Camera

You can view the photo on screen and press camera key to click a picture. On the photo preview interface (screen rotate), press left/right direction key to adjust focus; press up/down direction key to adjust menu settings; press OK key to get the picture; press down direction key to enter "take photo" menu:

In camera interface press left soft key you can enter options menu as follows:

- ❖ **Gallery:** You can enter camera list page to view the photos you shot.
- ❖ **Settings:**
 - ◆ **Image quality:** There are three options in photo image quality: Advanced, Common and Low.
 - ◆ **Banding:** You can set as 50Hz or 60Hz.
 - ◆ **Shutter sound:** You can set up the sound of shutter as: Activate or Deactivate.
 - ◆ **Auto Save:** You can select Activate or Deactivate.
 - ◆ **Display parameters:** You can select Activate or Deactivate.
- ❖ **Storage:** You can save it to Memory card.
- ❖ **Help:** You can view the instructions.

Camera settings include: Shoot Mode, Size, Night Mode, Brightness, Contrast, Exposure bias, White balance, Delay Timer or Effects.

6.2Video Recorder

The device is equipped with a video capture so that you can chat with your friends through it. A driver is needed to be installed when the video capture function is used. The details can be found in driver installation guide.

In Camcorder preview interface press left soft key you can enter options menu as follows:

- ❖ **View video directory:** Enter into videos list.
- ❖ **Settings:**
 - ◆ **Banding:** You can set as 50Hz or 60Hz.
 - ◆ **Audio:** You can set as on or off.
 - ◆ **Type:** You can set as 3gp
 - ◆ **Display parameters:** You can set as on or off
- ❖ **Storage:** You can save it to the memory card.
- ❖ **Help:** You can view the instructions.

Camcorder settings include: Shoot Mode, size, Brightness, Contrast or Effects.

6.3 Image Viewer

You can view the pictures saved in the Memory Card as well as edit them freely. In the picture list interface press left soft key you can do operations as follows:

- ❖ **Change folder:** Change the folder in which pictures are saved.
- ❖ **Send:** Send the pictures to others via or Bluetooth.
- ❖ **Slide Play:** Play the pictures in the list in a slide show manner.
- ❖ **Delete:** Delete the selected pictures.
- ❖ **Set as wallpaper:** Set the picture as standby wallpaper.
- ❖ **Re-name:** Rename the picture.
- ❖ **Mark:** Choose one or all of the pictures in the list.
- ❖ **Details:** View the details of the picture, including name, date, time and size.
- ❖ **Slide settings:** Set the play effect and delay time of the slide.

6.4 FM Radio

You can listen to Fm radio freely. Enter the radio interface, search the frequency automatically by pressing the up and down direction keys, and change previous or next channel by pressing the left and right direction keys.

On the interface of the Radio playing, press left soft key you could enter the options menu and do operations as follows:

- ❖ **Auto Search and save:** Search frequency available automatically and save it to broadcasting station list.
- ❖ **Channel List:** You can view all the broadcasting stations you saved.
- ❖ **Save:** Save the frequency you searched to the list.
- ❖ **Manual Search:** Search the broadcasting station by input frequency manually.
- ❖ **Open Speaker:**
- ❖ **Background play:** When the function is on, you can do other operations while listening to the radio.
- ❖ **Record:** Record the Program.
- ❖ **Record File List:** You can view all the Recorded List.

- ❖ **Help:** You can view the instruction of FM Radio.

Note: When the battery of your cell is insufficient, you may not enter the Radio channel and you need to plug in the Stereo head set to listen the FM radio.
You can switch between Stations with Earphone.

6.6 Sound Recorder

Use this function you can record or listen to your own Voice The record file format: wav.

Press left soft key and select "record". You can also do the following.

- ❖ Start to record: Select "record" and continue the following steps;
- ❖ Records list: Select "records list".

Enter "record" interface, move the cursor to the record icon and press OK key to record. During the process, press left soft key can make a pause, press it again will continue the record. Press right soft key can stop and save the record. You can press left soft key again and do the following.

- ❖ Audition: Audition the tape you just recorded.
- ❖ Delete: Delete the tape you just recorded.
- ❖ Send: Send the tape to others via Bluetooth or .
- ❖ Record File List: Enter the record file list to listen all recorded file.

7. Profiles

Six Profiles are available: Normal Mode, silent mode, meeting mode, indoor mode, outdoor mode. You can select any of these Profiles or customize your own profile by adjusting the parameters of the Profile. Restore to default settings by using the Restore option.

8. File Manager

You can check the specific content and service condition of the Memory Card via this function. You can also format the memory card.

Choose one folder and press left soft key, then you can operate as follows:

- ❖ Create new folder: Create a new folder.
- ❖ Delete: Delete the folder.
- ❖ Details: Check details of the folder, name, date, size, position and so on.
- ❖ Edit: Re-name or copy the folder.
- ❖ Search: Search the file in the folder.
- ❖ Sort: To sort according to name, date, size and type.
- ❖ Mark: Mark one or all the folders in Memory Card.
- ❖ Memory Enquiry: View the space in the memory. In this interface you can format the memory card by pressing left soft key, but this operation will

cause the data in it lose forever.

9. Organizer

9.1 Alarm

You can edit alarm, time, ring and repeated ring mode.

You can select "alarm edit" mode, you can scroll up or down direction key, when the cursor goes to the desired option, press "OK", then you can select desired settings.

9.2 Bluetooth

You can Activate/Deactivate Bluetooth.

- ❖ **Open:** You can choose to "Activate" or "Deactivate" Bluetooth.
- ❖ **Bluetooth Visibility:** You can choose "visible" or "invisible" Bluetooth. If the Bluetooth is invisible, others cannot search your phone.
- ❖ **Paired device:** You can search different Bluetooth equipments and find compatible ones (as long as the PIN codes of two Bluetooth equipments are identical with each other, the match will be successful. The PIN code of Bluetooth earphone is different due to different type, and you can find the code in operating manual of the Bluetooth earphone.).
- ❖ **My Bluetooth Name:** You can change the name of the phone.
- ❖ **Bluetooth File Storage:** You can choose folder in the memory card as the storage position of received files by Bluetooth.
- ❖ **Help:** You can view the operating instruction of Bluetooth.

9.3 Calendar

You can look up the calendar according to this function. Press left soft key on the Calendar interface, you can do the following.

- ❖ **Add New Schedule:** You can set up a calendar reminder.
- ❖ **View Schedule:** You can check a calendar reminder of a certain date.
- ❖ **All Schedules:** You can check all calendar reminders.
- ❖ **Clear Today's Calendar:** You can clear the calendar reminder of a certain date.
- ❖ **Clear All:** You can clear all reminders.
- ❖ **Go to Date:** You can check date.
- ❖ **Weekly:** Display weekly calendar reminder.

9.4 Calculator

The function will make your device a calculator with which you can carry out simple math calculation.

9.5 Torch

On / Off the Torch functionality.

9.6 Exchange rate Converter

To get the conversion of currency.


9.7 Unit Conversion


To get the conversion of Units.


10. Audio Player


This phone could play the MP3 stored in the Memory Card and support the background play.

On the audio player interface, move cursor to the shortcut keys on the screen, you could rapidly operate the MP3 functions.

Press  can play the MP3;

Press  can make a pause;

Press  can stop playing;

Press  can choose the previous and next MP3.

Under the MP3 list interface, press left soft key, then you can do operations as follows:

- ❖ **Update List:** Enter the Memory card and Open the MP3 stored in it.
- ❖ **Music List:** Display MP3 files list which are playing now.
- ❖ **Music Mark:** Choose MP3 to add in to play list or Delete from the Playlist.
- ❖ **Add:** Choose new MP3 from T-card and add it to play list.
- ❖ **Set as Ringtone:** set the selected MP3 as the ringtone of the incoming calls.
- ❖ **Play Mode:** You can choose the play mode as repeat or shuffle.
- ❖ **Settings:**
 - ◆ Equalizer: Set the music style as regular, classical, Odeum, jazz, rock or soft rock.
 - ◆ Display Settings: You can choose the Normal or Spectrum display settings.
- ❖ **Exit:** Exit to MP3 player.

Note: You can switch to next song by headset also

11. Services

The device is compatible with WAP service. You can visit various WAP services, for instance, news, weather forecast and airlines etc. The services are specially

designed for the device and are maintained by WAP service supplier.

WAP service requires network backup. You can consult the network operator or service supplier about the availability, rates and tax of WAP services.

12. Video player

Enter the video play list interface, press left soft key, you could go on the following operations.

- ❖ **Play List:** You can see the list of Videos.
- ❖ **Play:** Play the Video file.
- ❖ **Add Video:** Choose new video from the T-card and add it to play list.
- ❖ **Update List:** Update the play list.
- ❖ **Delete from play List:** Delete the selected video from play list.
- ❖ **File Attribute:** View the details of the video, name, date, duration time, resolution ratio, time span, size and so on.
- ❖ **Set as**
 - ◆ **Set as Power on animation:** Set the video as your power on animation.
 - ◆ **Set as Power off animation:** Set the video as your power off animation.
- ❖ **Mark:** Choose the Video or all the video files.
- ❖ **Full screen play:** You can play the video on full screen.
- ❖ **Order Play:** Select whether to open the playlist on the current order of play inside the video file.

Technical Specification W300	
GSM Network	900/1800MHz
Display Size	5.6Cm
Battery Capacity	1800mAh
Charger Specification	Input :AC100-300V/50-60Hz Output: DC 5V/500mA
SAR Value	0.452W/Kg
Camera Resolution	VGA

Limited Warranty Terms and Conditions

Wynncom Digital Devices Pvt. Ltd., (hereinafter referred to as the 'Company') provides this Limited Warranty to the purchaser of the Wynncom mobile handset and original accessories (Battery, Charger, Hands free etc.) supplied in the sales package (hereinafter collectively referred to as the 'Product').

Warranty period

Subject to the conditions specified herein, the Company warrants the Product to be free from defects in design, material and workmanship at the time of its original purchase and for a subsequent period of one year for the Transceiver, six months for the Accessories (Charger/ Battery/ Hands free/ Data cable); all periods commencing from the date of purchase.

How to get warranty service

To obtain warranty services, the purchaser needs to bring the Product to the Company's Authorized Care Centre at his/her own cost, along with the original proof of purchase, bearing unaltered/ unmodified date of purchase and IMEI number. The Company's Limited Warranty extends only to the original purchaser/ end user of the Product, and is not

assignable or transferable to a subsequent purchaser/ end user

Provisions and Exclusions

This Limited Warranty does not cover a) normal wear and tear; b) defects caused by improper handling; c) defects or damages caused by misuse of the Product, including use that is contrary to the instructions provided by the Company set out in the Product's User's Manual; and/or d) other acts beyond the reasonable control of the Company (including but not limited to Force Majeure, Lightning, Voltage surge, etc.)

During the warranty period, the Company or its Authorized Care Centre may repair or replace at its sole discretion, any defective Product(s) or part(s) thereof with new or factory rebuilt/ re-conditioned item(s) and return the Product to the purchaser in working condition. All replaced part(s)/ item(s) shall become the property of the Company.

The repaired or replaced part(s) or item(s) shall stand warranted only for the remaining warranty period since the date of purchase.

The warranty shall cease to exist in the absence of the original proof of purchase, or in case the original serial number/ IMEI is removed, modified or obliterated, or if the Product is damaged due to liquid spillage, exposure to moisture, exposure to extreme thermal or environmental conditions, or if there is a physical damage to the Product, or if the Product was found tampered/ found opened, modified or repaired by anyone other than the Company's Authorized Care Centre.

The warranty terms are subject to change without prior notice.

Except for any liability that cannot be excluded by law, the Company (including its related entities and their respective officers, employees and agents) excludes all liabilities (including negligence), for any loss of profit, business revenue, goodwill, anticipated savings or data, personal injury, or any loss or damage (including loss of opportunity); whether direct, indirect, special or consequential, arising in any way out of the Product.

All disputes are subject to the jurisdiction of courts of Delhi only.

Wynncom Care – 1800 102 9299
9.30 AM to 6.30 PM (Mon-Sat)

Email us at customercare@wynncom.net
Visit us at www.wynncom.net