

Wynncom W304 User Manual



Note: The content of the manual is correct when it is released, but “**Wynncom Digital Devices Pvt. Ltd.**” reserves the right to modify the technical specification without additional notification. Some content in the manual may be different from the mobile phone, as the accessory software, SIM card or service varies by providers

Table of Contents

IMPORTANT SAFETY PRECAUTIONS	3
INTRODUCTION	10
1. PHONE DISPLAY.....	10
GETTING STARTED	12
1. INSERTING THE SIM CARD AND THE BATTERY.....	12
2. INSERTING A MICRO SD (EXTERNAL MEMORY) CARD.....	13
3. TURNING THE PHONE ON.....	13
4. CHARGING THE BATTERY.....	14
5. IMPORTANT PASSWORD.....	14
6. KEYPAD LOCK AND UNLOCK.....	14
7. TRANSFER FILES TO THE MICRO SD (EXTERNAL MEMORY) CARD.....	15
TEXT ENTRY	15
1. INPUT METHOD.....	15
2. MULTI TAPS INPUT.....	15
3. NUMERIC INPUT.....	16
CALLING	16
1. MAKING A CALL.....	16
2. ANSWERING A CALL.....	16
OVERVIEW OF MENU FUNCTIONS	17
MENU FUNCTIONS	19
HOW TO USE.....	19
1. PHONEBOOK.....	19
2. MESSAGES.....	20
3. CALL LOGS.....	22
4. SETTINGS.....	22
5. FILE MANAGER.....	24
6. Y ZONE.....	24
7. MULTIMEDIA.....	25
8. ORGANIZER.....	25
9. PROFILES.....	26



Important safety precautions

This section contains important information on the safe and efficient operation of your mobile device.

For your safety, please refer to the guideline prior to using the phone.

Note: Failure to comply with the following precautions may be dangerous or illegal.

Drive safely at all times

Do not use a hand-held phone while driving. Park the vehicle first.

Switch off the phone when refueling

Do not use the phone at a refueling point (service station) or near fuels or chemicals.

Switch off in an aircraft

Wireless phones can cause interference. Using them in an aircraft is both illegal and dangerous.

Switch off the phone near all medical equipment

Hospitals or health care facilities may be using equipment that could be sensitive to external radio frequency energy. Follow any regulations or rules in force.

Interference

All wireless phones may be subject to interference, which could affect their performance.

Be aware of special regulations

Meet any special regulations in force in any area and always switch off

your phone whenever it is forbidden to use it, or when it may cause interference or danger.

Water resistance

Your phone is not water-resistant. Keep it dry.

Sensible use

Use only in the normal position (held to the ear). Avoid unnecessary contact with the antenna when the phone is switched on.

Keep your phone away from small children

Keep the phone and all its parts, including accessories, out of the reach of small children.

Accessories and batteries

Use only approved batteries and accessories, such as headsets and PC data cables. Use of any unauthorized accessories could damage you and your phone and may be dangerous.

If jewelry, keys, beaded chains, or other conductive materials touch exposed battery terminals, this could complete an electrical circuit (short circuit), become very hot, and could cause damage or injury. Be careful when handling a charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects.

- ❖ Never use a charger or battery that is damaged in any way.
- ❖ Use the battery only for its intended purpose.
- ❖ If you use the phone near the network's base station, it uses less power. Talk and standby time are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.
- ❖ Battery charging time depends on the remaining battery charge, the type of battery, and the charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time is noticeably shorter than normal, it is time to buy a new

battery.

- ❖ If left unused, a fully charged battery will discharge itself over time.
- ❖ Use only approved batteries, and recharges your battery only approved chargers. Disconnect the charger from the power source when it is not in use. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.
- ❖ Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.
- ❖ Do not leave the battery in hot or cold places because the capacity and lifetime of the battery will be reduced. Try to keep the battery at room temperature. A phone with a hot or cold battery may not work temporarily, even when the battery is fully charged.
- ❖ Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object like a coin, clip or pen causes a direct connection between the + and – terminals of the battery (metal strips on the battery). For example, do not carry a spare battery in a pocket or bag where the battery may contact metal objects. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting.
- ❖ Dispose of used batteries in accordance with local regulations. Always recycle. Do not dispose of batteries in a fire.
- ❖ To ensure while using the phone please do not get the battery charge.
- ❖ During the course of charging, it is normal to find the battery and the phone slightly heat-up. The Phone will automatically protect itself when battery temperature rises so as to control temperature variation.

Note: This phone is just charged 50%. Please use up the power and recharge it fully. This is the case with the second recharge. After three repetition, the battery can achieve it' s best performance condition.

Operating Environment

Remember to follow any special regulations in force in the area you are in, and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger. When connecting the phone or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the equipment should only be used in the normal operating position (held to your ear with the antenna pointing over your shoulder).

Extreme heat or cold, Avoid temperatures below -10°C/14°F or above 45°C/113°F

Electronic devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone. Consult the manufacturer to discuss alternatives.

Pacemakers

Pacemaker manufacturers recommend that a minimum distance of 15 cm (6 inches) be maintained between a wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research and recommendations of Wireless Technology Research. If you have any reason to suspect that interference is taking place, switch you're your phone immediately.

Hearing aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may wish to consult your hearing aid manufacturer to discuss alternatives.

SIM AT Service

SIM Card provides several value-added services.

These functions will only display and work on the menu of the phone when your SIM card is supported. The content and the terms of the function lists will depend on your network service provider.

Please contact your network service provider (a network operator or the service provider) in regards with availability of any services related to the SIM card, application information and the costs.

Other medical devices

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Switch off your phone in health care facilities when regulations posted in these areas instruct you to do so.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted facilities

Switch off your phone in any facility where posted notices require you to do so.

Potentially explosive environments

Switch off your phone when in any area with a potentially explosive atmosphere, and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Users are advised to switch off the phone while at a refueling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution

areas), chemical plants, or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often but not always clearly marked. They include the areas below decks on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas, such as propane or butane, areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

Emergency calls

This phone, like any wireless phone, operates using radio signals, wireless, and landline networks as well as user-programmed functions, which cannot guarantee connection in all conditions. Therefore, you should never rely solely on any wireless phone for essential communications like medical emergencies. To make or receive calls, the phone must be switched on and in a service area with adequate signal strength. Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

To make an emergency call: **(For India example: 112,911,100,101,102)**

1. Key in the emergency number for your present location. Emergency numbers may vary by location.
2. Press the Send Key.
3. Inform your location. Do not end the call until given permission to do so. Certain features like Call Barring may need to be deactivated before you can make an emergency call. Consult this document and your local cellular service provider.

Other important safety information

- ❖ Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.

- ❖ Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.
- ❖ Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the phone, its parts, or accessories.
- ❖ For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. Improperly installed wireless equipment could result in serious injury if the air bag inflates.
- ❖ Switch off your phone before boarding an aircraft. It is dangerous and illegal to use wireless phones in an aircraft because they can interfere with the operation of the aircraft.
- ❖ Failure to observe these instructions may lead to the suspension or denial of telephone services to the offender, or legal action, or both.

Wynncom Authorized Care Centre

Only qualified service personnel may repair your phone.

It is highly recommended to have a repair service by qualified service personnel. Use only the approved accessories and batteries.

Note: Please use the original components in order to achieve the best use of effects, as the use of non-original components may cause damage to the machinery, in such case company shall not be responsible.

Introduction

1. PhoneDisplay






Key	Function
Call Dial/receive key	Dial and receive calls via SIM1/SIM2 card. View SIM1/SIM2 call history in idle mode.
Call End Key/power on/off key	Pressing and holding to turn the phone on/off. End a call or reject an incoming call. Return to the idle mode.
Left Soft Key	Enter Shortcuts
Right Soft Key	Access the phonebook list in idle mode. Return to the previous menu.
OK Key	Enter the Main menu in idle mode.
*	Press and hold to toggle between *, +, (pause character) P, and (wait character) W. Press to enter symbol when editing text.
#	Press to switch input modes when entering text.
Navigation Key	Press to access four functions in idle mode (Up: Music Player Down: Camera, Left: Write Messages Right: FM Radio Within a menu, press Up, Down, Left or Right to scroll through menu options.

Note: “Press” in this manual, means to press and release the key; “press and hold” means to press and hold the key for at least 3 seconds.

2. Icons & Symbols

The Icon shown on the display may vary depending on your country or service provider. The number 1 and 2 in icons mean SIM1 and SIM2.

Status	Icons
1.SIGNAL STRENGTH	
2.VIBRATE MODE	
3.BATTERY STATUS	
4.EARPHONE	
5.BLUETOOTH	

Getting Started

Please read the safety instructions in the "Safety Information and Notices" section before use.

1. Inserting the SIM Card and the battery

Remove the back cover

Make sure the phone is switched off. You need to remove the back cover of your phone before you can insert the SIM card. Hold the phone with the front facing downwards lift the cover upwards to remove it.

Remove the battery

Put your finger on the black holder located at the bottom of the battery slot and lift the battery up to remove it. For further clarification please refer

the pic
below :

Insert the SIM card

Insert the SIM card into the SIM card slot lightly with the corner cutting of the card aligning to the notch of the slot and the gold plate of the card facing down, till the SIM card cannot be further pushed in.



Install the battery

With the metallic contacts of the battery facing the metallic contacts in the battery slot, press the battery down until it locks into place, then fix its back cover.

2. Inserting a Micro SD (External Memory) Card

Slide the Micro SD card into the micro sd card slot with the metallic pins facing downwards.

3. Turning the phone on

To turn the phone on, press and hold the Call End key. If you have

already enabled the Sim Lock function then enter the PIN code (the 4 to 8 digit code of your SIM card). It is preconfigured and provided to you by your network operator or retailer. If you enter an incorrect PIN code 3 times in succession, your SIM card will be locked. To unlock it, you must obtain the PUK code from your network operator and if you enter an incorrect PUK code 10 times in succession, you need to change the SIM card.

4. Charging the Battery

Ensure the battery is inserted in the handset. To charge the battery, plug in the charger connector at the bottom of your phone (USB interface) and then plug the other end into an AC power socket.

The battery symbol indicates the charging status. While charging, the charge indicators will scroll. When all the scroll bars are steady, the battery is fully charged. It takes about 4 hours to fully charge the battery.

Disconnect the charger from the phone.

Disconnect the charger from the AC power socket.

Note: If the battery is powerless, the battery icon will reappear after a few minutes of charging.

5. Important Password

Phone lock password is set as 0000 by default.

6. Keypad Lock and Unlock

Go to Settings > Phone settings > Auto keypad lock to select the time for keypad lock.

In idle mode, if the time expires, the keypad will be locked automatically. Press the Left Soft Key and then * Key in quick succession to lock/unlock the keypad manually.

7. Transfer files to the Micro SD (External Memory) card

Insert your Micro SD card into a card reader, and then connect the card reader to the USB port of a PC. The PC will auto detect the card reader as a removable disk. You can access the Micro SD card memory now.

Download or upload the files to Micro SD card.

Finally, insert your Micro SD card into your cellular phone, you can view the files in Menu > My File> Memory card.

Text Entry

1. Input Method

Your cellular phone supports several input methods, which include:

Multitap (ABC / abc / Abc)

Numeric (123)

Insert Symbol

Hindi Input

➤ Changing the input modes

During text editing, you can press the # Key to switch input modes, or press the Left Soft Key [Options] and choose Input method to select different input modes.

➤ Entering Symbols

In any input mode, press the * Key to open the symbols input screen. Use the navigation key to choose the desired symbol and the OK key to select it.

2. Multi taps Input

This method requires multiple key presses to reach the desired character: the letter "h" is the second letter on the 4 key, so you must press 4 twice quickly to enter "h". Using this mode requires you to press a key as many times as needed to enter the desired letter.

Example:

To enter the word "home" in Multitap input mode "abc", press key 4(GHI) twice, press key 6(MNO) thrice, press key 6(MNO) once and key 3(DEF) twice.

3. Numeric Input

Press the # Key to select "123" input option then you can enter the numbers.

Calling

1. Making a Call

In idle mode, enter the phone number. Press the dial key to call the number from SIM1 and SIM2. Press the Call End Key to end the call.

Note: During a call, press the navigation up and down key to adjust the volume.

Making an International Call

1. Press the * Key twice quickly to enter "+".
2. Enter the country code.
3. Enter the area code (normally without the 0 before it) followed by the phone number.
4. Press the Dial Key to call directly.

2. Answering a Call

Press the call receive key/Dial Key to answer calls. Press the Call End key to reject it.

Overview of menu functions

To access Menu mode, press [**Menu**] in Idle mode.

* Some menus are operator-, network- and subscription-dependent

1. Phonebook

- 1.1 Search
- 1.2 Add new contact
- 1.3 Delete all
- 1.4 Copy all
- 1.5 Speed dial
- 1.6 Memory status
- 1.7 Extra number

2. Messages

- 2.1 Write Message
- 2.2 Inbox
- 2.3 Outbox
- 2.4 Drafts
- 2.5 Message setting
- 2.6 Memory status
- 2.7 Voice mail
- 2.8 Broadcast messages
- 2.9 Scheduled SMS

3. Call Logs

- 3.1 Missed Calls
- 3.2 Dialed Calls
- 3.3 Received Calls
- 3.4 All calls
- 3.5 Clear logs
- 3.6 Call times
- 3.7 Call cost

4. Settings

- 4.1 Date and time
- 4.2 Display settings
- 4.3 Phone settings
- 4.4 Call settings
- 4.5 Connection settings
- 4.6 Security settings
- 4.7 Bluetooth
- 4.8 Restore factory settings

5. Y Zone

- 5.1 Hungama Radio
- 5.2 Mobile Tracker
- 5.3 Privacy protection
- 5.4 Games
- 5.5 STK

6. File Manager

- 6.1 Memory card

7. Multimedia

- 7.1 Camera
- 7.2 Music player
- 7.3 Video player
- 7.4 FM Radio

8. Organizer

- 8.1 Stopwatch
- 8.2 Torch
- 8.3 Calendar
- 8.4 To do list
- 8.5 Alarm clock
- 8.6 World clock
- 8.7 Calculator

9. Profile

Menu Functions

How to Use

Select Menu

Press the Ok Key [Menu] to enter main menu in idle mode.

Press the Navigation Key to choose desired operation and press the Left Soft Key [Ok] to enter the selected operation.

You can exit a menu and return to idle mode by pressing the Right Soft Key [Back] or the Call End Key.

Main Menu

Phonebook	Messages	Call Logs
Settings	File Manager	Y Zone
Multimedia	Organizer	Profiles

1. Phonebook

The mobile phone can store multiple telephone numbers. The number of telephone numbers that an SIM card can store depends on the storage capacity of the SIM card. The telephone numbers stored in the mobile phone and in the SIM cards form a phonebook.

1.1 Search

After selecting a telephone number in the phonebook, select Options to perform the following operations:

- ◆ **View:** View the content of the telephone number.
- ◆ **Call:** call the current number of the SIM1 or SIM2.
- ◆ **Add new contact:** add the new number to SIM or phone.

- ◆ **Sent message:** sent message to the selected number.
- ◆ **Edit:** Edit the selected number and name.
- ◆ **Delete:** Delete the telephone number from the phonebook.
- ◆ **Copy:** Duplicate the telephone number from the mobile phone to the SIM card or from the SIM card to the mobile phone.
- ◆ **Move:** Move the telephone number to the SIM card if it is stored in the mobile phone or to the mobile phone if it is stored in the SIM card.
- ◆ **Add to Speed dial:** Add the selected number to speed dial.
- ◆ **Mark several:** mark several phone numbers at a time so that you can perform a same operation on them.

1.2 Add new contact

Add the new number to SIM or phone.

1.3 Delete all

Delete the telephone number from the phonebook.

1.4 Copy all

Duplicate the telephone number from the mobile phone to the SIM card or from the SIM card to the mobile phone.

1.5 Speed dial

Through this function, you can set the status of single key dial function. For each of the number key 2~9, you can set a phone number. Then in idle screen, you can press number key to originate a call of its corresponding phone number once this function is turned on.

1.6 Memory status

Query the memory status.

1.7 Extra number

Edit your name card, or send it via a short message, or save it as a file.

2. Messages

If the short message memory is full, a blinking message icon appears on the top of the screen. To normally receive short messages, you need to delete some of the existing short messages.

If the destination user has received the short message you sent and the short message delivery report function is activated, the phone will give off a message report alert tone.

2.1 Write Message

Access this menu to create a text message.

2.2 Inbox

Received Messages are listed in this menu.

2.3 outbox

The messages which are sent failed are stored in the Outbox.

2.4 Drafts

From the main menu select “Messages” to create text message. You can type a message, and you’re also able to insert a pre-defined message from “Templates”. While writing a message, select “Options” to access all the messaging options. You can save your messages that you send often to “Drafts”.

2.5 Message settings

- ◆ **Profile settings:** Save or modify the short message service center number required for short message transmission, or obtain it from the network operator.
- ◆ **Common settings:** Set the message delivery report and the reply path. After Delivery report is set to On, the short message service center will send a status report indicating whether the short message you sent has been successfully delivered. This function requires the network operator’s support.
- ◆ **Preferred storage :** Select the memory as per your need.

2.6 Memory status

View the percentage of the memory seized by the short messages in the SIM card to the total SIM card capacity and the percentage of the memory seized by the short messages in the phone to the total phone capacity.

2.7 Voice mail

Edit: Edit or delete your voice mailbox number; or select OK to save the number. Call voicemail: Dial the voice mailbox number stored in the voice mailbox number list.

2.8 Broadcast messages

This network service enables you to receive a variety of text messages, such as broadcast messages about weather forecast or road conditions. At present, few networks provide this service. Please consult the network operator.

- ◆ **Receive mode:** Set it to On to enable or Off to disable cell broadcast service.
- ◆ **Channels:** Select receiving some types of cell broadcast messages or edit/delete some channel numbers.

2.9 Schedule SMS

You can Schedule SMS for specified date and time.

3. Call Logs

Display your recent call log.

3.1 Missed Calls

You can view a list of the latest missed calls.

Note: When the mobile phone indicates that some calls are missed, you can select Read to enter the missed calls list. Navigate to a missed call and then press the Dial key to dial the number that originated that call.

3.2 Dialed Calls

You can view the latest dialed calls. Choose dialed calls and then select a dialed call to delete, save, dial, or edit (or send a short message to it).

3.3 Received Calls

You can view the latest received calls. Choose received calls and then select a received call to delete, save, dial, or edit (or send a short message to it).

3.4 All calls

You can view a list of all calls.

3.5 Clear logs

You can clear the latest call records. Choose clear logs and then select to delete all the numbers in the call history, or delete only the numbers in the missed calls list, the dialed calls list or the received calls list.

3.6 Call Timers

You can choose the view of the time counting in SIM1 and SIM2, which displays the last call, answered call, dialed call and all the calls. Press left soft key, to reset the counted time.

3.7 Call cost

Choose call cost to view the cost of the last call and the cost of all calls, reset the call cost, modify the maximum cost allowed, and/or set the call tariff.

4. Settings

4.1 Date and time

You can set date and time, the format or turn on/off the time zone update through this function.

4.2 Display settings

Through this function, you can set wallpaper, LCD backlight, brightness, etc.

4.3 Phone settings

- ◆ **Language:** Select the display language for the mobile phone.
- ◆ **Shortcuts:** Dedicated key: Customize the shortcut functions of the Up, Down, Left, and Right direction keys. In the standby interface, you can press a direction key to directly enter the function menu corresponding to that direction key. My shortcuts: You can set some most used menus as shortcut functions through this item.
- ◆ **Set home city:** Select a city as home city.
- ◆ **Auto keypad lock:** Once turned on, your mobile will be locked automatically if you performed no operations during a long period.
- ◆ **Input method settings:** Set writing language and input method through this function.

4.4 Call settings

- ◆ **Caller ID:** You can select the ID set by the network, hide the ID, or send the ID. By default, the ID set by the network is chosen.
- ◆ **Call waiting:** Network dependent
- ◆ **Call divert:** This network function enables you to forward incoming calls to another number you have previously specified.
- ◆ **Call barring:** The call barring function enables you to bar calls as needed. When setting this function, you need to use a network barring code, which can be obtained from the network operator.
- ◆ **Closed user group:** This function requires network support. For details, consult the local network operator.

Common call settings

- ◆ **Call time reminder:** To set single or periodic tone in a call to make you know the time.
- ◆ **Auto redial:** Set it to On or Off to enable or disable auto redial. To end the auto redial process, press the End key.
- ◆ **Black list:** He or she can't call you if you set the blacklist status to on and add his or her number to blacklist.
- ◆ **Answer mode:** Once select any key, you can press any key except the end key to answer an incoming call.
- ◆ **Auto Call Record:** To record the call automatically in memory card.

4.5 Connection settings

Through this function, you can select network and set preferred network.

4.6 Security settings

This function provides you with related settings about safety use. The initial phone lock code is set to 0000 by the manufacturer.

4.7 Bluetooth

With Bluetooth, you can make a wireless connection to other compatible devices, such as mobile phones, headsets and car kits. You can use the Bluetooth to send images, video clips, music, sound clips and notes, and transfer files from your compatible pc.

4.8 Restore factory settings

Use this function to restore factory settings. Note: The initial phone lock code is 0000.

5. Y Zone

5.1 Hungama Radio

The hungama radio is IVR service to listen your favourite songs.

Note: Call charges as per operator plan shall appl.

5.2 Mobile Tracker

When the Mobile tracker is on, once your SIM card is replaced, the phone will automatically send stolen information to the prior SIM card. Note: The initial phone lock code is 0000.

5.3 Privacy protection

The initial password is 0000. After accessing this function, you can select some items. Once an item is selected, you need to input correct password whenever you want to enter these items to perform further operations.

5.4 Game

One game named F1 Race is embedded in the phone. For specific operation, please refer to 'game help' option of the game.

5.5 STK

STK service is the tool kit of SIM card. This phone supports the service function. The specific items are depended by SIM card and network. Service menu will be auto added to the phone menu when supported by network and SIM card.

6. File Manager

The phone supports the memory card. You can use the file manager to conveniently manage various directories and files on the memory card.

7. Multimedia

7.1 Camera

Use this function to capture pictures.

7.2 Music player

Use this function to play audio files. In music player interface, you can press up or down direction key to tune volume.

7.3 Video player

Use this function to play video files. In video player interface, you can press up or down direction key to tune volume.

7.4 FM Radio

Before using this function, please insert earphone into its corresponding slot. In FM radio screen, you can press up or down direction key to tune volume, left or right direction key to tune channels manually.

8. Organizer

8.1 Stopwatch

Stopwatch is simple application for measuring time with possibility to register several results and suspend/resume measurement.

8.2 Torch

You can use this function to turn on/off the torch which situates at the top of the phone.

8.3 Calendar

Once you enter this menu, there is a monthly-view calendar for you to keep track of important appointments, etc.

8.4 To do list

This function enables you to create new memos.

8.5 Alarm clock

Through this function can you set Alarm status, time, alarm tone, etc.

8.6 World clock

Access this menu to view time of main cities in various time zones.

8.7 Calculator

The calculator can add, subtract, multiply and divide.

9. Profiles

The mobile phone provides multiple user profiles, so that you can customize some settings to adapt to the specific events and environments.

Customize the user profiles according to your preference and then activate the user profiles. The user profiles fall into five scenarios: General, Meeting, Outdoor, Indoor and Headset.

When you insert an earpiece to the mobile phone, the mobile phone automatically enters the Headset mode. There is no option for activating the Headset mode on the screen. For details on operation, refer to General. If you set Headset > Customize > Answer mode to Auto, incoming calls will be automatically answered.

9.1 Activate

Select Activate to activate the selected mode.

9.2 Customize

After choosing one of the above five modes, select Customize to edit the following items: incoming call ringtone, Alert type, Ring type, ringtone volume, message ringtone, keypad tone, power on/off tone, etc.

Technical Specification of W304

GSM Network	900/1800 MHz
Display Size	5.6 Cm
Battery Capacity	1000 mAh
Charger Specification	Input :AC100-300V/50-60Hz Output: DC 5V /500mA
SAR Value	
Camera Resolution	VGA Camera

Warranty Card

Welcome!

Congratulations on your new Wynncom Mobile Purchase.

Limited Warranty:

Wynncom Digital Devices Pvt. Ltd. provides this Limited Warranty for your Mobile phone and original accessory delivered with your mobile Phone.

Our Warranty:

Subject to the conditions of the limited Warranty, Wynncom Digital Devices Pvt. Ltd. warrant this product to be free from defects in design, material and workmanship at the time of its original purchase by a consumer, and for a subsequent period of:

- One (1) year for Transceiver
- Six (6) months for Travel Charger, Battery and Headset .

To get maximum use of your new product, we recommend you to:

- . Read the guideline for safe and efficient use in the user manual.
- . Keep your original receipt; you will need it for warranty repair claims.
- . Present this Warranty Certificate along with original proof of purchase having details of purchase & Serial No. whenever you require any warranty services.
- . Read the terms and conditions of your handset warranty in the user manual provided with the Product.

In the unlikely event if the product needs service, please visit the nearest Wynncom [Authorized Care Centre](#).

For more information on Wynncom Products and Services, please visit our Website: www.wynncom.net or email us at: customercare@wynncom.net

Or call at: 1800-102-9299 between 8 AM to 10 PM all days of the week.

Conditions Apply.