

Wynncom W520 User Manual



Note: The content of the manual is correct when it is released, but “**Wynn Telecom Limited**” reserves the right to modify the technical specification without additional notification. Some content in the manual may be different from the mobile phone, as the accessory software, SIM card or service varies by providers

Table of Contents

| | |
|---|-----------|
| IMPORTANT SAFETY PRECAUTIONS | 3 |
| INTRODUCTION | 10 |
| 1. PHONE DISPLAY | 10 |
| GETTING STARTED | 12 |
| 1. INSERTING THE SIM CARD AND THE BATTERY | 12 |
| 3. TURNING THE PHONE ON | 12 |
| 4. CHARGING THE BATTERY | 13 |
| 5. IMPORTANT PASSWORD | 13 |
| 6. KEYPAD LOCK AND UNLOCK | 13 |
| 7. TRANSFER FILES TO THE MICRO SD (EXTERNAL MEMORY) CARD | 13 |
| TEXT ENTRY | 14 |
| 1. INPUT METHOD | 14 |
| 2. CHANGING THE INPUT MODES | 14 |
| 3. ENTERING SYMBOLS | 14 |
| 4. MULTI TAPS INPUT | 14 |
| 5. NUMERIC INPUT | 15 |
| 1. MAKING A CALL | 15 |
| 2. ANSWERING A CALL | 15 |
| OVERVIEW OF MENU FUNCTIONS | 15 |
| MENU FUNCTIONS | 17 |
| HOW TO USE | 17 |
| Select Menu | 17 |
| Main Menu | 18 |
| 1. MESSAGES | 18 |
| 2. PHONEBOOK | 25 |
| 3. CALL CENTER | 26 |
| 4. SETTINGS | 27 |
| 5. Y-ZONE | 30 |
| 6. MULTIMEDIA | 30 |
| 7. PROFILE | 33 |
| 8. FILE MANAGER | 34 |
| 9. ORGANIZER | 34 |
| 10. AUDIO PLAYER | 36 |
| 11. SERVICES | 36 |
| 12. VIDEO PLAYER | 37 |
| 13. TECHNICAL SPECIFICATION | 31 |



Important safety precautions

This section contains important information on the safe and efficient operation of your mobile device.

For your safety, please refer to the guideline prior to using the phone.

Note: Failure to comply with the following precautions may be dangerous or illegal.

Drive safely at all times

Do not use a hand-held phone while driving. Park the vehicle first.

Switch off the phone when refueling

Do not use the phone at a refueling point (service station) or near fuels or chemicals.

Switch off in an aircraft

Wireless phones can cause interference. Using them in an aircraft is both illegal and dangerous.

Switch off the phone near all medical equipment

Hospitals or health care facilities may be using equipment that could be sensitive to external radio frequency energy. Follow any regulations or rules in force.

Interference

All wireless phones may be subject to interference, which could affect their performance.

Be aware of special regulations

Meet any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger.

Water resistance

Your phone is not water-resistant. Keep it dry.

Sensible use

Use only in the normal position (held to the ear). Avoid unnecessary contact with the antenna when the phone is switched on.

Keep your phone away from small children

Keep the phone and all its parts, including accessories, out of the reach of small children.

Accessories and batteries

Use only approved batteries and accessories, such as headsets and PC data cables. Use of any unauthorized accessories could damage you and your phone and may be dangerous.

If jewelry, keys, beaded chains, or other conductive materials touch exposed battery terminals, this could complete an electrical circuit (short circuit), become very hot, and could cause damage or injury. Be careful when handling a charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects.

- ❖ Never use a charger or battery that is damaged in any way.
- ❖ Use the battery only for its intended purpose.
- ❖ If you use the phone near the network's base station, it uses less power. Talk and standby time are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.
- ❖ Battery charging time depends on the remaining battery charge, the type of battery, and the charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the

operation time is noticeably shorter than normal, it is time to buy a new battery.

- ❖ If left unused, a fully charged battery will discharge itself over time.
- ❖ Use only approved batteries, and recharges your battery only approved chargers. Disconnect the charger from the power source when it is not in use. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.
- ❖ Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.
- ❖ Do not leave the battery in hot or cold places because the capacity and lifetime of the battery will be reduced. Try to keep the battery at room temperature. A phone with a hot or cold battery may not work temporarily, even when the battery is fully charged.
- ❖ Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object like a coin, clip or pen causes a direct connection between the + and – terminals of the battery (metal strips on the battery). For example, do not carry a spare battery in a pocket or bag where the battery may contact metal objects. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting.
- ❖ Dispose of used batteries in accordance with local regulations. Always recycle. Do not dispose of batteries in a fire.
- ❖ To ensure while using the phone please do not get the battery charge.
- ❖ During the course of charging, it is normal to find the battery and the phone slightly heat-up. The Phone will automatically protect itself when battery temperature rises so as to control temperature variation.

Note: This phone is just charged 50%. Please use up the power and recharge it fully. This is the case with the second recharge. After three repetition, the battery can achieve it' s best performance condition.

Operating Environment

Remember to follow any special regulations in force in the area you are in, and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger. When connecting the phone or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the equipment should only be used in the normal operating position (held to your ear with the antenna pointing over your shoulder).

Extreme heat or cold, Avoid temperatures below -10°C/14°F or above 45°C/113°F

Electronic devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone. Consult the manufacturer to discuss alternatives.

Pacemakers

Pacemaker manufacturers recommend that a minimum distance of 15 cm (6 inches) be maintained between a wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research and recommendations of Wireless Technology Research. If you have any reason to suspect that interference is taking place, switch you're your phone immediately.

Hearing aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may wish to consult your hearing aid manufacturer to discuss alternatives.

SIM AT Service

SIM Card provides several value-added services.

These functions will only display and work on the menu of the phone when your SIM card is supported. The content and the terms of the function lists will depend on your network service provider.

Please contact your network service provider (a network operator or the service provider) in regards with availability of any services related to the SIM card, application information and the costs.

Other medical devices

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Switch off your phone in health care facilities when regulations posted in these areas instruct you to do so.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted facilities

Switch off your phone in any facility where posted notices require you to do so.

Potentially explosive environments

Switch off your phone when in any area with a potentially explosive atmosphere, and obey all signs and instructions. Sparks in such areas

could cause an explosion or fire resulting in bodily injury or even death. Users are advised to switch off the phone while at a refueling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants, or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often but not always clearly marked. They include the areas below decks on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas, such as propane or butane, areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

Emergency calls

This phone, like any wireless phone, operates using radio signals, wireless, and landline networks as well as user-programmed functions, which cannot guarantee connection in all conditions. Therefore, you should never rely solely on any wireless phone for essential communications like medical emergencies. To make or receive calls, the phone must be switched on and in a service area with adequate signal strength. Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

To make an emergency call: **(For India example: 112,911,100,101,102)**

1. Key in the emergency number for your present location. Emergency numbers may vary by location.
2. Press the Send Key.
3. Inform your location. Do not end the call until given permission to do so. Certain features like Call Barring may need to be deactivated before you can make an emergency call. Consult this document and your local cellular service provider.

Other important safety information

- ❖ Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.
- ❖ Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.
- ❖ Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the phone, its parts, or accessories.
- ❖ For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. Improperly installed wireless equipment could result in serious injury if the air bag inflates.
- ❖ Switch off your phone before boarding an aircraft. It is dangerous and illegal to use wireless phones in an aircraft because they can interfere with the operation of the aircraft.
- ❖ Failure to observe these instructions may lead to the suspension or denial of telephone services to the offender, or legal action, or both.

Wynncom Authorized Care Centre

Only qualified service personnel may repair your phone.

It is highly recommended to have a repair service by qualified service personnel. Use only the approved accessories and batteries.

Note: Please use the original components in order to achieve the best use of effects, as the use of non-original components may cause damage to the machinery, in such case company shall not be responsible.

Introduction

1. Phone Display



| Key | Function |
|-------------------------------|---|
| Dial/receive key | Dial and receive calls via SIM1/SIM2 card. View SIM1/SIM2 call history in idle mode. |
| Call End Key/power on/off key | Pressing and holding to turn the phone on/off. End a call or reject an incoming call. Return to the idle mode. |
| Left Soft Key | Enter Menu |
| Right Soft Key | Access the phonebook list in idle mode. Return to the previous menu. |
| OK Key | Enter the Main menu in idle mode. |
| * | Press and hold to toggle between *, +, (pause character) P, and (wait character) W. Press to enter symbol when editing text. |
| # | Press to switch input modes when entering text. Press and hold to activate silent mode/Second |

| | |
|----------------|--|
| | time Long press for bring the phone to Vibrator mode/third time Long press Idle mode. |
| Navigation Key | Press to access four functions in idle mode (Up: Shortcut Down:Bluetooth Left :Write Message Right: FM Within a menu, press Up, Down, Left or Right to scroll through menu options. |

Note: “Press” in this manual, means to press and release the key; “press and hold” means to press and hold the key for at least 3 seconds.

2. Icons & Symbols

The Icon shown on the display may vary depending on your country or service provider. The number 1 and 2 in icons mean SIM1 and SIM2.

| Status | Icons |
|-------------------|---|
| 1.SIGNAL STRENGTH |  |
| 2.SILENT MODE |  |
| 3.VIBRATE MODE |  |
| 4.BATTERY STATUS |  |
| 5.INDOOR MODE |  |
| 6.OUTDOOR MODE |  |
| 7.EARPHONE |  |
| 8.BLUETOOTH |  |

Getting Started

Please read the safety instructions in the "Safety Information and Notices" section before use.

1. Inserting the SIM Card and the battery

Remove the back cover

Make sure the phone is switched off. You need to remove the back cover of your phone before you can insert the SIM card. Hold the phone with the front facing downwards lift the cover upwards to remove it.

Remove the battery

Put your finger on the black holder located at the top of the battery slot and lift the battery up to remove it.

Insert the SIM card

Make sure that the clipped corner of the SIM card is facing the correct direction (clipped corner at top left) and the metallic contacts are facing downwards. Slide the SIM card into the card slot until it stops. For further clarification please refer the picture below :

Install the battery

With the metallic contacts of the battery facing the metallic contacts in the battery slot, press the battery down until it locks into place.

2. Inserting a Micro SD (External Memory) Card

Slide the Micro SD card into the micro sd card slot with the metallic pins facing downwards.

3. Turning the phone on

To turn the phone on, press and hold the Call End key. If you have already enabled the Sim Lock function then enter the PIN code (the 4 to 8 digit code of your SIM card). It is preconfigured and provided to you by your network operator or retailer. If you enter an incorrect PIN code 3 times in succession, your SIM card will be locked. To unlock it, you must obtain the PUK code from your network operator and if you enter an incorrect PUK code 10 times in succession, you need to change the SIM card.

4. Charging the Battery

Ensure the battery is inserted in the handset. To charge the battery, plug in the charger connector at the bottom of your phone (USB interface) and then plug the other end into an AC power socket.

The battery symbol indicates the charging status. While charging, the charge indicators will scroll. When all the scroll bars are steady, the battery is fully charged. It takes about 4 hours to fully charge the battery.

Disconnect the charger from the phone.

Disconnect the charger from the AC power socket.

Note: If the battery is powerless, the battery icon will reappear after a few minutes of charging.

5. Important Password

Phone lock password is set as 0000 by default.

6. Keypad Lock and Unlock

Go to Settings > Security > Auto keypad lock to select the time for keypad lock.

In idle mode, if the time expires, the keypad will be locked automatically.

Press the Left Soft Key and then * Key in quick succession to lock/unlock the keypad manually.

7. Transfer files to the Micro SD (External Memory) card

Insert your Micro SD card into a card reader, and then connect the card reader to the USB port of a PC. The PC will auto detect the card reader as a removable disk. You can access the Micro SD card memory now.

Download or upload the files to Micro SD card.

Finally, insert your Micro SD card into your cellular phone, you can view the files in Menu > My File> Memory card.

Text Entry

1. Input Method

Your cellular phone supports several input methods, which include:

Multitap (ABC / abc / Abc)

Numeric (123)

Insert Symbol

Hindi Input

2.Changing the input modes

During text editing, you can press the # Key to switch input modes, or press the Left Soft Key [Options] and choose Input method to select different input modes.

3.Entering Symbols

In any input mode, press the * Key to open the symbols input screen. Use the navigation key to choose the desired symbol and the OK key to select it.

4. Multi taps Input

This method requires multiple key presses to reach the desired character: the letter "h" is the second letter on the 4 key, so you must press 4 twice quickly to enter "h". Using this mode requires you to press a key as many times as needed to enter the desired letter.

Example:

To enter the word “home” in Multitap input mode “abc”, press key 4(GHI) twice, press key 6(MNO) thrice, press key 6(MNO) once and key 3(DEF)

twice.

5. Numeric Input

Press the # Key to select "123" input option then you can enter the numbers.

Calling

1. Making a Call

In idle mode, enter the phone number. Press the dial key to call the number from SIM1 and SIM2. Press the Call End Key to end the call.

Note: During a call, press the navigation up and down key to adjust the volume. You can press the Left Soft Key [Options] to choose Sound Recorder to record.

In most countries, recording telephone conversations is subject to legislation. We advise you to notify the caller if you intend to record your conversation and only do so if they agree.

Making an International Call

1. Press the * Key twice quickly to enter "+".
2. Enter the country code.
3. Enter the area code (normally without the 0 before it) followed by the phone number.
4. Press the Dial Key to call directly.

2. Answering a Call

Press the call receive key/Dial Key to answer calls. Press the Call End key to reject it.

Overview of menu functions

To access Menu mode, press [Menu] in Idle mode.

* Some menus are operator-, network- and subscription-dependent

1. Messages

- 1.1 Write Message

- 1.2 Inbox
- 1.3 Drafts
- 1.4 Outbox
- 1.5 Sentbox
- 1.6 Schedule SMS
- 1.7 Broadcast Messages
- 1.8 Templates
- 1.9 Message Settings
- 1.10 Backup SMS

2. Phonebook

3. Call Center

- 3.1 Call History
- 3.2 Call Settings
- 3.3 Voice Changer
- 3.4 Voice Changer effect

4. Settings

- 4.1 Dual SIM Settings
- 4.2 Phone Settings
- 4.3 Security Settings
- 4.4 Connectivity
- 4.5 Restore Factory Settings
- 4.6 Sound Effect

5. Y Zone

- 5.1 Smart Auto Call Record
- 5.2 Hungam
- 5.2 Hungama Radio
- 5.3 Java
- 5.4 Java Config
- 5.5 Google
- 5.6 Social Network
- 5.7 Fun & Games

6. Multimedia

6.1 Camera

6.2 Image Viewer

6.3 Video Recorder

6.4 Sound recorder

6.5 FM Radio

7. Profile

8. File Manager

9. Organizer

9.1 Torch

9.2 Calendar

9.3 Calculator

9.4 Unit Converter

9.5 Currency converter

9.6 Health

9.7 Ebook Reader

9.8 Tasks

9.9 Alarm

9.10 World Clock

10. Audio Player

11. Services

12. Video Player

Menu Functions

How to Use

Select Menu

Press the Left Soft Key [Menu] to enter main menu in idle mode.

Press the Navigation Key to choose desired operation and press the Left Soft Key [Ok] to enter the selected operation.

You can exit a menu and return to idle mode by pressing the Right Soft Key [Back] or the Call End Key.

Main Menu

| | | |
|--------------|--------------|--------------|
| Messages | Phonebook | Call Center |
| Settings | Y Zone | Multimedia |
| Profile | File Manager | Organizer |
| Audio Player | Service | Video Player |

For Further Clarification, please refer to the main menu picture given below:



1. Messages

1.1 Write Messages

You can edit and send the SMS and MMS with this function.

1.1.1. Text message (SMS)

- **Send to:** Select number and then send SMS to the selected number.
- **Input method:** Change the input method.
- **Set Cstar:** On/ off the input methods.
- **Insert template:** Enter the text message template .You can edit the template and save.

- **Advanced:** Insert pictures, melody, phone number and bookmark.
 - Insert number: Insert the number of the contacts.
 - Insert name: Insert the phone book name.
 - Insert bookmark: Insert the website in bookmark.
- **Save to Draft:** Save the SMS in the Draft box.

Select [send to] to enter in the sending window after finishing the creation of the SMS. Select [Enter number] or [Add from phonebook] to search a phone number of the receiver and finally press **Left Soft Key**:

- **Send:** Send the SMS.
- **Edit recipient:** Edit the recipient number.
- **Remove recipient:** Delete the selected recipient.
- **Remove all recipients:** Delete all recipients.
- **Save to Draft:** Save the SMS in the Draft box. Press **OK Key** to send the SMS.

1.1.2. Multimedia Messages (MMS)

- **Send to:** Select number and then send MMS to the selected number.
- **Input method:** Change the input method.
- **Set Cstar:** On/ off the input methods.
- **Add picture:** Insert picture.
- **Add sound:** Insert the audio file.
- **Add video:** Insert the video file.
- **Add subject:** Write subject.
- **Preview MMS:** View the edited MMS.

➤ **Slide options**

- **Add slide behind:** Insert new slide after current slide.
- **Add slide before:** All new slide before current slide.
- **Slide timing:** Set up the time of the slide.

➤ **Advanced**

- **Insert text template :** Enter the text message template .You can edit the template and save.
- **Insert attachment:** Attach the file from
- **Insert bookmark:** Add bookmark to MMS.

➤ **Save to Drafts:** Save the MMS in the Drafts.

Select [send to] to enter in the sending window after finishing the creation of the SMS. Select [Enter number] or [Add from phonebook] to search a phone number of the receiver and finally press **Left Soft Key**:

- **Send:** Send the MMS .
- **Send options:** You can set validity period, delivery report, read report, etc.
- **Edit recipient:** Edit the recipient number.
- **Remove recipient:** Delete the selected recipient.
- **Remove all recipients:** Delete all recipients.
- **Change to Cc:** MMS Cc to contact.
- **Change to Bcc:** MMS BCc to contact.
- **Save to Drafts:** Save the MMS in the Drafts.

Press **OK Key** to send the MMS.

1.2 Inbox

The Inbox lists stores the SMS and MMS.

You can view the received SMS with this function. Select any SMS and press <Option> under the inbox SMS list window to perform:

- **View:** View the selected message.
- **Reply by SMS:** Reply via SMS to the sender.
- **Reply by MMS:** Reply via MMS to the sender.
- **Call sender:** Call the sender of the selected message.
- **Forward:** Forward the SMS to other via SIM card 1/ 2 .
- **Delete:** Delete the selected entry of the message;
- **Delete all:** Delete all messages.
- **Save to phonebook:** Save the contact to Phonebook.
- **Mark Several:** Delete the marked messages at the same time.
- **Advanced:** Press **OK Key** under this window to perform:
 - **Copy to phone:** Copy the SMS/MMS to the phone.
 - **Move to phone:** Move the SMS/MMS to the phone.

1.3 Drafts

To save the drafted messages.

Press **OK Key** to enter SIM1 drafts. And press **Left Soft Key** under the Drafts list window to perform:

- **View:** View the selected message.
- **Send:** Send the selected message.
- **Edit:** Edit the selected message.
- **Delete:** Delete the selected entry of the message;

- **Delete all:** Delete all messages
- **Mark several:** Mark several messages to delete at the same time.
- **Advanced:** Press [OK] under this window to perform:
 - **Copy to phone:** Copy the SMS/MMS to the phone.
 - **Move to phone:** Move the SMS/MMS to the pho

1.4 Outbox

You can store the SMS and MMS you've not sent successfully.

View: View the selected message. The option include the following :

- **Resend:** Send the selected message.
- **Edit:** Edit the selected message.
- **Delete:** Delete the selected message;
- **Delete all:** Delete all messages.
- **Mark several:** Mark several messages to delete at the same time.
- **Advanced:**
 - **Copy to phone:** Copy the SMS/MMS to the phone.
 - **Move to phone:** Move the SMS/MMS to the phone.

1.5 Sent Messages

You can store the SMS you've sent successfully. Choose one SMS and press left soft key, you could delete, forward, lock, mark, sort, and so on.

- **View:** View the selected message.
- **Forward:** Forward the SMS to other via SIM card 1/ 2;
- **Delete:** Delete the selected entry of the message;

- **Delete all:** Delete all messages
- **Mark several:** Mark several messages to delete at the same time.

Advanced:

- **Copy to phone:** Copy the SMS/MMS to the phone.
- **Move to phone:** Move the SMS/MMS to the phone.

1.6 Schedule Message

You can Schedule SMS for specified date and time.

1.7 Broadcast Message

The area to services send different kinds of messages. Change the settings of this service and inquire the area info by using this function.

- **Receive mode:** Turn on or turn off the broadcast message.
- **Channel settings:** Set the channel to receive the area message.
--Add the channel: Add the channel index and channel name.
- **Languages:** Set different Languages.
- **Read messages:** Read the messages received.

1.8 Template

Enter the templates interface and you could insert the template to the message.

1.9 Message Settings

There are eight options: SIM 1/SIM2 Message Service center number, validity

period, Message Type, Delivery report, reply path, preferred connection, and

voice mail server.

2. **--SIM1 Service Center No. :** Display the Service center number of SIM1.
3. **--SIM2 Service Center No. :** Display the Service center number of SIM2.
4. **--Validity period:** You can set the validity period of the message for 1 hour, 6 hours, 24 hours, 72 hours, 1 week and the maximum value.

5. --**Message Type:** Choose the Type of message text, Paging, Email, Fax.
6. --**Delivery report:** Make it on/off.
7. --**Reply Path:** You can make the reply path on/off.
8. -- **Preferred Connection:** You can select the connection type.
9. **Voicemail Server:** This phone supports the function of the voice mailbox. You can choose either SIM1 or SIM2. When you receive the calls from others, they could give you a message in your voice mailbox. When your phone receives the message notice, you could listen to the messages. Under the voice mailbox interface you can edit and set the number of line 1, line 2, fax or data.
 - Listen to the message: Dial the number of the voice mailbox and listen to the message.
 - Number settings: Edit the number of the voice mailbox.

1.9 MMS Settings

Select MMS settings, you can access the following options:

1. Data account
This is WAP data account. You can select a server to send information first.

2. Common settings
You can set up various MMS service options with this function. Select an entry of MMS and press <OK> under the Common settings window to perform:

- **Compose:** Enter this option you can set up Creation mode, Picture resizing, auto signature and signature.
- **Sending:** Enter this option you can set up Validity period, Delivery report, Read report, Priority, Slide timing and Delivery time.
- **Retrieval:** Enter this option you can set up Home network, Roaming, Read report and Delivery report.
- **Preferred storage:** Select to save the MMS in phone or memory card.
- **Memory status:** View the memory space available and occupied

1.10 Backup SMS

You can take the Backup of SMS in T-flash card.

2. Phonebook

This function could help you browse the Phonebook, store, edit and delete the names and phone numbers in the phone and SIM card. To facilitate the management of the records, this phone sets the group function, collecting the similar items into a group. The storage capacity of the SIM card varies.

On the standby interface, press right soft key to enter the interface of the Phonebook. When the record of the Phonebook is not empty, press left soft key for the following operation

The Options are as follows:

1. View- View the contact detail.
2. Send SMS: You can send SMS.
3. Send MMS: You can send MMS.
4. Call – To dial call directly on selected number.
5. Edit – To edit the contact name and number.
6. Delete – To delete the selected number.
7. Mark – To Mark Selected number/Mark all number.
8. Copy to-To Copy the number to SIM1/SIM2, Phone, Copy to Memory Card.
9. Move - To Move the number to SIM1/SIM2, Phone, Copy to Memory Card.
10. Send vCard: Send vCard by SMS/MMS /Bluetooth.
11. Add To Blacklist: Add the number to the blacklist, to restrict the call from unwanted numbers.
12. Mark Several: To Mark Selected number/Mark all number.
13. Caller Group: To add the numbers to a particular group.
14. Phonebook Settings:
 - Preferred Storage: You can set the storage to phone memory /SIM1/SIM2 .
 - Speed Dial Settings: You can edit at 3 to 9 numeric key.
 - My Number: You can store the personal contact number.
 - Extra Number: You can store the Fixed Dial/Owner number/SOS

Dial number for emergency.

-Memory Status: You can check the memory status of SIM1/SIM2 and Phone.

3. Call Center

Display your recent call log.

3.1 Dialed Numbers

Display the list of your recent dialed numbers.

On the interface of Dialed, choose one dialed number, then press left soft key "Option" to enter the Option interface and you can get the following operations.

- **View:** You can enquire the details of the record, including the name, number, date, time, calling time, etc.
- **Call:** Call on that number directly.
- **Save to Phonebook:** You can save this number into the SIM card or certain group in the phone.
- **Add to Blacklist:** Add this number to the blacklist.
- **Edit before Call:** Edit the contact before dialing.
- **Send SMS:** You can send SMS or MMS to this number.
- **Delete:** Delete this record.
- **Delete all:** Delete all the records in the Dialed list.
- **Mark Several:** Mark the contact to delete at one time.
- **Advanced:**
 - a. **Call Timer:** You can choose the view of the time counting in SIM1 and SIM2, which displays the last call, answered call, dialed call and all the calls. Press left soft key, to reset the counted time.
 - b. **Call Cost:** Display the total call expense, the upper limit of the call, charges, rater reset, the functions of which shall be supported by the network operators.

Note: The call expense function shall be supported by the network operator. The design of the charging unit and the phone rate limit shall require you to input the PIN2 code. Please contact with your network operator to achieve the password.

- c. **SMS Counter:** You can check the total SMS sent.
- d. **GPRS Counter:** You could check the GPRS flow of the SIM1 and SIM2 and press left soft key to reset.

3.2 Received Calls

Display the list of your recent answered numbers. The operation is the same as the Dialed.

3.3 Missed Calls

Display the list of your recent missed numbers. The operation is the same as the Dialed.

3.4 Rejected Calls

Display the incoming call records in the blacklist. The operation is the same as the Dialed.

3.5 Delete All

You can delete all the records of the Dialed, Answered, Missed and Rejected

calls.

3.7 Call Settings

3.7.1 Blacklist

To reject the call from a particular number, add the number to the blacklist.

3.7.2 Auto Redial

You can on/off this function. When it is on, a failed dialing will automatically redial.

3.7.3 Call Time Reminder

You can on/off and set the time as reminder.

3.7.4 Reject by SMS

When an incoming call is rejected, a will be sent to the caller.

3.7.5 Answer Mode

You can set answering key or auto answer mode.

3.8 Voice Changer

You can switch this option on/off, to change the effect of voice at the time of the call.

3.8 Voice Changer Effect

To choose the effect of voice.

4. Settings

You can customize the settings, such as time and date, language, call settings etc.

4.1 Dual SIM Settings

Dual SIM settings allow you to select the mode in which you want the phone to be.

4.2 Phone Settings

You have following options listed under phone setup:

- **Time and date:** Let you set the Time and date on the phone.
- **Schedule Power On/Off:** Let you set the time on which the phone turns on or off automatically.
- **Language:** To select language for the phone.
- **Pref. input methods:** This enables you to select the text input method from 8 options. They are –Smart ABC, Smart abc, Smart Hindi, ABC, abc, Abc, Hindi, Numeric.
- **Display:** Under Display setup, you can set a host of different characteristics of the phone. Like
 - a. Wallpaper – Set your favorite wallpaper on the phone
 - b. Screen Saver – Let you set an image as a screen saver.
 - c. Power on Display: Change the Power on animation.
 - d. Power off Display: Change the Power off animation.
 - e. Show date and time – Enables you to see the date and time on the idle screen.
 - f. Screen Switch effect : Change the effect of screen switching .
 - g. Show operator name –You can put this to ON/OFF state. It lets you see the network name on the idle screen
- e
- **Shortcuts:** Shortcuts help you use certain key features of the phone instantly. You can choose the features at your own wish and set them in the menu. You can add new features to the list, delete, edit, disable and change the order.
- **Dedicated Key:** This option helps you dedicate/map certain key features of the phone with the Directional keys (UP/DOWN/LEFT/RIGHT) of the phone. At anytime you can change the mapping and select a new feature from the list of features available.
- **Misc. settings:**
 - a. LCD backlight: you can adjust brightness and time

4.3 Security Settings

- **Phone Lock:** Enables you to lock/unlock your phone with a

password.

- **Auto Keypad Lock:** Enables you to lock keypad after certain time which can be set.
- **Data Security:** Includes protection for all, phone book, messages, calls history , Image Viewer , Video player, audio player ,Video recorder, FM Radio, File manager & keypad lock. If this function is enabled, corresponding menu or content will be locked. To access, enter the password. The default password is “0000”.
- **Mobile Tracker:** You can on/off this Mobile Tracker function or change anti password (the password shall be 6-digit).

When “Mobile Tracker” function is “on”, you can only use your SIM card. If different SIM card is used, the phone will automatically check it when you switch it on, and the phone will require you to input protection password. If the password is correct, you can set up the SIM card so that it is compatible with the Mobile Tracker function.

If you have entered wrong password for three time, when you switch on the phone, it will send warning SMS to your original SIM card every 24 hours. If the phone is switched off, the warning messages will be sent when you switch on the phone. The warning messages will indicate the existing SIM card and the neighborhood number. When 15 warning SMS were sent out, the phone cannot be used. You will have to take the purchase evidence and have to visit to Nearby Wynncom Service Center.

To guarantee the safety of your phone, you are suggested to start up the function when you purchased the phone.

– Status: To activate & deactivate Mobile tracker function.

4.4 Connectivity

➤ Bluetooth

The following options are available in the Bluetooth menu :

1. **Power** : On/Off
2. **Visibility:** on/off
3. **My device** : Inquiry new device or display paired devices and take the options.
4. **Search audio device** : Search for audio devices.
5. **My name** : Change the name of the Bluetooth.
6. **Advanced** : Configure the settings of Bluetooth, For example, Audio path, storage etc.

4.5 Restore Factory Settings

Selecting this option will ask you to enter the password to restore the

phone to factory settings. The default password is '0000'.

4.6 Sound Effects

Select this option to on/off the Equalizer mode.

5. Y-Zone

5.1 Smart Auto Call Record

You can on/off this function. When it is "on" all the incoming calls will record at the defined storage place.

Note: By default the storage is Audio folder of phone memory, after the phone memory is completely full the file will save in Audio folder of memory card.

When Auto Call record is activated the file will save in the following format:

Phone number<Date (YY-MM-DD)<Time (Time will be in 24hr clock format)

5.2 Hungama Radio

The hungama radio is IVR service to listen your favourite songs.

Note: Call charges as per operator plan shall apply.

5.3 Hungama Link

You can sign in to hungama by the direct link provided in you mobile phone. This will work only when GPRS service is activated in your SIM.

5.4 Java

Your Phone support Java lite. You can play Java games in your memory card.

The ebuddy & Operamini are the default Java application in you Wynncom W520.

5.4 Java config

The Java config settings are as below:

1. **Basic Settings:** No need to change the basic settings of the Java.

2. **Select Profile:** Select the SIM profile.
3. **Data Account:** Select the data account of the respective SIM.
4. **About:** To know about Java.

5.5 Google

You can sign in to google by the direct link provided in you mobile phone. This will work only when GPRS service is activated in your SIM.

5.6 Social Network

The social Network includes:

- **Facetalk:** You can sign in to Facetalk by the direct link provided in you mobile phone. This will work only when GPRS service is activated in your SIM.
- **Games:** You can download the games/videos/wallpaper by the direct link provided in you mobile phone. This will work only when GPRS service is activated in your SIM.
- **Twitter:** You can sign in to twitter by the direct link provided in you mobile phone. This will work only when GPRS service is activated in your SIM.
- **Skype:** You can sign in to MSN by the direct link provided in you mobile phone. This will work only when GPRS service is activated in your SIM.
- **MSN:** You can sign in to MSN by the direct link provided in you mobile phone. This will work only when GPRS service is activated in your SIM.
- **Yahoo:** You can sign in to Yahoo by the direct link provided in you mobile phone. This will work only when GPRS service is activated in your SIM.

5.7 Fun & Games

There are two games:

1. Fish
2. Raiden
3. Puzzle

4. Game Settings:

- **BGM:** turn on/off the background music

- **Sound effect:** turn on/off the sound effect
- **Volume:** select the grades of the volume

6. Multimedia

This phone comes with a host of multimedia applications to provide you with unlimited entertainment.

6.1 Camera:

The built-in camera allows you to take photos and adjust the camera settings. The options menu contains the following choices:

- **Switch to video recorder:** Switch to video recorder mode
- **Photos:** To view a saved photo.
- **Camera settings:** To set the corresponding parameters of the camera.
- **Image settings:** To set the corresponding parameters of the photo to be shot.
- **White balance:** To adjust the white balance (E.g. Daylight, Auto etc.).
- **Scene mode:** To set the scenario mode of the camera. (E.g. Auto, Night)
- **Effect settings:** There are many kinds of effects, including : Normal , Grayscale ,sepia ,sepia green ,sepia blue ,color invert.
- **Storage:** To set the storage directory for photos.
- **Restore default:** To restore the settings of camera to factory setting

6.2 Image Viewer:

The options for image viewer are as follows:

- **View:** To view a photo.
- **Browse style:** To select the mode for browsing photos.
- **Send:** Transform the photos by different ways, such as multimedia message or via Bluetooth.
- **Use as:** This photo can be used as wallpaper/screen saver/caller picture
- **Rename:** To rename the selected image or photo.
- **Delete:** To delete the selected photo.
- **Sort by:** To sort photos by the desired method.
- **Delete all files:** To delete all photos.
- **Storage:** To set the storage directory for photos.

6.3 Video Recorder:

The options for video recorder are as follows:

- **Switch to Camera:** Switch to camera mode.
- **Camcorder settings:** Set the related parameters of the recorder

- (EV/Night mode/Anti flicker.)
- **Video settings:** Set the Video quality, Size and time limit, Record audio.
- **White balance:** It can set white balance for video recorder.
- **Effect settings:** The video effect for the video (Normal/Grayscale/Sepia/Sepia green/ sepia blue/Color invert/)
- **Storage:** Allows you to set the location to save the files (cell phone or memory card)
- **Restore default:** Resume the consumer settings for recording the original.

6.4 Sound Recorder

You can record sound/voice on your phone. Just select sound recorder, go to options and press record. Select Stop to rename the file and save it. Select pause to 'pause' the recording and 'continue' to resume the recording.

6.5 FM Radio

You can play the FM with With and without Connectind the headphone cable.

- **Channel list:** List out all the current channels. You can enter channel list, edit it and display the searched channel list.
- **Manual input :** Input the desired broadcasting channel manually
- **Auto Search:** Search and create the channel's list automatically.
- **Settings:** To set some parameters of FM.
- **Record:** To record the current program being played on the radio.
- **Append:** To append the appendage.
- **File list:** To view the list of recorded files.

Note : Shortcut keys for operating FM as given below :

* key - Searching

0 Key – FM recording

Key – Speaker Mode (While Earphone is connected)

Ok key – ON/OFF

Up/Down navigation key – To increase and decrease the volume.

7. Profiles

All the different profiles are listed under this option:

- **Add New Profile:** The Profile gives you an option to customize a new profile.
- **General:** The Profile gives you an option to activate and customize the settings.
- **Silent:** Active this mode to make the phone into silent mode.
- **Meeting:** These modes are similar to General Mode and can be customized according to your own preference.

- **Outdoor:** These modes are similar to General Mode and can be customized according to your own preference.
- **Headset:** These modes are similar to General Mode and can be customized according to your own preference.
- **Indoor:** These modes are similar to General Mode and can be customized according to your own preference.

8. File Manager

If you choose the phone memory:

Press left key option to enter function menu, the following options are available.

- **Open:** See the files in the different folders of your phone
- **Format:** To format the folder.

If you choose the memory Card:

Press left key option to enter functional menu, the following options are available:

- **Open:** See the files in the different folders of your phone
- **Format:** To format the folder.
- **Rename:** To rename the Memory card.
- **Details:** To view the Memory status of the Memory card.

9. Organizer

9.1 Torch

To switch on/off the torch option.

9.2 Calendar

You can use the calendar to keep track of important meetings. After entering the calendar function menu you can select year, month and date using direction keys. On a selected date you can select to view:

- **View :** To view and set the schedule of a day
- **View all:** To view the schedule of all day.
- **Add event:** You can add several events to the date.
- **Delete event:** You can delete All /overdue/Specific period event
- **Jump to date:** To input the date to enter the calendar, then move the cursor to the specified date.
- **Go to today:** Go to check today.
- **Go to weekly view**
- **Settings :** Choose the type of calendar as English/Hindu/hijri Calendar

9.3 Calculator

Keep your calculations on your finger tips with the easy to use calculator.

9.4 Unit Converter

Convert different units in weight and length.

9.5 Currency Converter

You can use this function to convert currencies by entering a known rate.

9.6 Health

In this function, you can manage your health by BMI.

9.7 Ebook reader

The eBook function lists the eBooks in TXT format stored in your memory card. On the bottom of the screen, the size and the number of rows of the selected eBook are displayed.

9.8 Tasks

For creating a new memo or viewing the memos set in the schedule. You can also perform View, Add, Edit, Delete, Delete overdue and Delete All and jump to date etc. If the alarm reminder is set up for the memo, the cell phone will remind you with a ring once the time is up, and it will display the contents of the memo settings.

10. Audio Player

This phone comes with an inbuilt audio player that plays all your favorite songs. It gives you a host of setting options to make your listening experience interesting.

4. Refresh list – To refresh the audio file list.

5. Settings– To set parameters for audio playing.

- **Pre. Play list:** You can choose the Mp3 files in the Phone or in the memory card.
- **List Auto Gen.:** On/Off, play the music saved in system/select music files from the File Manager to play.
- **Repeat:** You can select Off, One or All.
- **Shuffle:** You can select On/Off.
- **Background Play:** On, the music will continue to play even if you exit the Playing Screen (music will stop when a call is coming).
- **Audio Effect:** To Switch to SRS mode.
- **Lyrics Display:** To switch on/off the lyrics display.

Note: You can either use the dedicated keys on Phone or refer to Short cut keys for Audio player are as below :

OK Key – Play & Pause

Down Navigation – Stop

Up Navigation – Settings

Right Navigation- Next (Long Press Forward)

Left Navigation – Previous (Long Press Reverse)

11. Services

Phone supports STK function (But it requires support from SIM card service provider)

11. 1 Internet Services

This function allows you to acquire or visit diversified services on the internet through message or network, please contact your network operator for more information.

- a. **Homepage:** Start a connection to the selected URL set.
- b. **Bookmarks:** Access or edit a bookmark.
- c. **Input address:** Enter the address.
- d. **Recent pages:** Browse a saved URL.
- e. **Service inbox:** Enable a trusted server to send messages to the phone, which is saved in the Service Inbox.
- f. **Settings:** Set parameters of WAP browser. Please consult your network operator for details of the parameters

11. 2 Data Count

Your phone supports GPRS.

12. Video player

The Video Player plays all your video files stored in the phone (Phone Memory or on the Memory Card). The video player gives you the following options:

1. **Play** – To start playing the video file.
2. **Send:** To send the file as MMS or via Bluetooth.
3. **Rename:** To rename the file.
4. **Delete:** To delete the file.
5. **Delete all files:** To delete all files
6. **Refresh list**–To refresh the video list.
7. **Settings** – To set parameters for video playing.

Note: You can play the video files stored on your phone or Memory card. Your phone supports 3GP, MP4, AVI of QCIF resolution upto 25 frames/second

MOT (Movie Theatre)Support: You can compress the video to MOT and play 4-5 movies in one 2GB card. To download the MOT converter login to the website : www.wynncom.net

To play video on full screen use “ * “ key .

| Technical Specification of W520 | |
|--|---|
| GSM Network | 900/1800 MHz |
| Display Size | 6.1 Cm |
| Battery Capacity | 1200 mAh |
| Charger Specification | Input: AC100-300V/50-60Hz Output: DC 5V /500mA |
| SAR Value | 1.372 W/Kg |
| Camera Resolution | 1.3 Mega Pixel |

Limited Warranty Terms and Conditions

Wynncom Digital Devices Pvt. Ltd., (hereinafter referred to as the 'Company') provides this Limited Warranty to the purchaser of the Wynncom mobile handset and original accessories (Battery, Charger, Hands free etc.) supplied in the sales package (hereinafter collectively referred to as the 'Product').

Warranty period

Subject to the conditions specified herein, the Company warrants the Product to be free from defects in design, material and workmanship at the time of its original purchase and for a subsequent period of one year for the Transceiver, six months for the Accessories (Charger/ Battery/ Hands free/ Data cable); all periods commencing from the date of purchase.

How to get warranty service

To obtain warranty services, the purchaser needs to bring the Product to the Company's Authorized Care Centre at his/her own cost, along with the original proof of purchase, bearing unaltered/ unmodified date of purchase and IMEI number.

The Company's Limited Warranty extends only to the original purchaser/ end user of the Product, and is not assignable or transferable to a subsequent purchaser/ end user

Provisions and Exclusions

This Limited Warranty does not cover a) normal wear and tear; b) defects caused by improper handling; c) defects or damages caused by misuse of the Product, including use that is contrary to the instructions provided by the Company set out in the Product's User's Manual; and/or d) other acts beyond the reasonable control of the Company (including but not limited to Force Majeure, Lightening, Voltage surge, etc.)

During the warranty period, the Company or its Authorized Care Centre may repair or replace at its sole discretion, any defective Product(s) or part(s) thereof with new or factory rebuilt/ re-conditioned item(s) and return the Product to the purchaser in working condition. All replaced part(s)/ item(s) shall become the property of the Company.

The repaired or replaced part(s) or item(s) shall stand warranted only for the remaining warranty period since the date of purchase.

The warranty shall cease to exist in the absence of the original proof of purchase, or in case the original serial number/ IMEI is removed, modified or obliterated, or if the Product is damaged due to liquid spillage, exposure to moisture, exposure to extreme thermal or environmental conditions, or if there is a physical damage to the Product, or if the Product was found tampered/ found opened, modified or repaired by anyone other than the Company's Authorized Care Centre.

The warranty terms are subject to change without prior notice.

Except for any liability that cannot be excluded by law, the Company (including its related entities and their respective officers, employees and agents) excludes all liabilities (including negligence), for any loss of profit, business revenue, goodwill, anticipated savings or data, personal injury; or any loss or damage (including loss of opportunity); whether direct, indirect, special or consequential, arising in any way out of the Product.

All disputes are subject to the jurisdiction of courts of Delhi only.

**Wynncom Care – 1800 102 9299
9.30 AM to 6.30 PM (Mon-Sat)**

**Email us at customercare@wynncom.net
Visit us at www.wynncom.net**