

Wynncom W601 User Manual



Note: The content of the manual is correct when it is released, but “Wynncom Digital Devices Pvt. Ltd” reserves the right to modify the technical specification without additional notification. Some content in the manual may be different from the mobile phone, as the accessory software, SIM card or service varies by providers.

CONTENT

1. MESSAGE	13
2. PHONEBOOK	16
3. CALL HISTORY	17
4. SETTINGS.....	17
5. Y ZONE	21
6. MULTIMEDIA	23
7. PROFILES.....	25
8. FILE MANAGER	25
9. ORGANIZER	25
10. AUDIO PLAYER	27
11. SERVICE.....	27
12. KING MOVIE PLAYER	28
13. USB MODE.....	28
14. TECHNICAL SPECIFICATION.....	29
14. WARRANTY CARD	30



Important safety precautions

This section contains important information on the safe and efficient operation of your mobile device.

For your safety, please refer to the guidelines prior to using the phone.

Note: Failure to comply with the following precautions may be dangerous or illegal.

Drive safely at all times

Do not use a hand-held phone while driving. Park the vehicle first.

Switch off the phone when refueling

Do not use the phone at a refueling point (service station) or near fuels or chemicals.

Switch off in an aircraft

Wireless phones can cause interference with the communication system of aircraft. Using them in an aircraft is both illegal and dangerous. User can keep the phone in flight mode.

Switch off the phone near all medical equipment

Hospitals or health care facilities may be using equipment that could be sensitive to external radio frequency energy. Follow any regulations or rules in force.

Interference

All wireless phones may be subject to interference, which could affect their performance.

Be aware of special regulations

Meet any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger.

Water resistance

Your phone is not water-resistant. Keep it dry.

Sensible use

Use only in the normal position (held to the ear). Avoid unnecessary contact with the antenna when the phone is switched on.

Keep your phone away from small children

Keep the phone and all its parts, including accessories, out of the reach of small children.

Accessories and batteries

Use only approved batteries and accessories, such as headsets and PC data cables. Use of any unauthorized accessories could cause damages to you and your phone and may be dangerous.

If jewelry, keys, beaded chains, or other conductive materials touch exposed battery terminals, this could complete an electrical circuit (short circuit), become

very hot, and could cause damage or injury. Be careful when handling a charged battery, particularly when placing it inside a pocket, purse, or other Container with metal objects.

- ★ Never use a charger or a battery that is damaged in any way.

- ★ Use the battery only for its intended purpose.

- ★ If you use the phone near the network's base station, it uses less power. Talk and standby time are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.

- ★ Battery charging time depends on the remaining battery charge, the type of battery, and the charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time is noticeably shorter than normal, it is time to buy a new battery.

- ★ If left unused, a fully charged battery will discharge itself over time.

- ★ Use only approved batteries and battery chargers. Disconnect the charger from the power source when it is not in use. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.

- ★ Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.

- ★ Do not leave the battery in hot or cold places because the capacity and lifetime of the battery will be reduced. Try to keep the battery at room temperature. A phone with a hot or cold battery may not work temporarily, even when the battery is fully charged.

Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object like a coin, clip or pen causes a direct connection between the + and – terminals of the battery (metal strips on the battery). For example, do not carry a spare battery in a pocket or bag where the battery may contact metal objects. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting.

- ★ Dispose off used batteries in accordance with local regulations. Always recycle. Do not dispose off batteries in a fire.

- ★ Do not charge the battery while using the phone.

- ★ During the course of charging, it is normal to find the battery and the phone slightly heat-up. The phone will automatically protect itself when battery temperature rises so as to control temperature variation.

Note: This phone is charged only around 50%. Please use up the power and recharge it fully. This is the case with the second recharge. After three repetitions, the battery can achieve its best performance conditions.

Operating Environment

Remember to follow any special regulations in force in the area you are in, and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger. When connecting the phone or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the equipment should only be used in the normal operating position (held to your ear with the antenna pointing over your shoulder).

Ensure to avoid extreme heat or cold; do not place your phone in temperatures below -10°C/14°F or above 45°C/113°F.

Electronic devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone. Consult the manufacturer to discuss alternatives.

[Pacemakers](#)

Pacemaker manufacturers recommend that a minimum distance of 15 cm (6 inches) be maintained between a wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research and recommendations of Wireless Technology Research. If you have any reason to suspect that interference is taking place, switch off your phone immediately.

[Hearing aids](#)

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may wish to consult your hearing aid manufacturer to discuss alternatives.

[SIM AT Service](#)

SIM Card provides several value-added services.

These functions will only display and work on the menu of the phone when your SIM card is supported. The content and the terms of the function lists will depend on your network service provider.

Please contact your network service provider (a network operator) in regards with availability of any services related to the SIM card, application information and the costs.

[Other medical devices](#)

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Switch off your phone in health care facilities when regulations posted in these areas instruct you to do so.

[Vehicles](#)

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

[Posted facilities](#)

Switch off your phone in any facility where posted notices require you to do so.

[Potentially explosive environments](#)

Switch off your phone when in any area with a potentially explosive atmosphere, and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch off the phone while at a refueling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants, or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often but not always clearly marked. They include the areas below decks on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas, such as propane or butane, areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

[Emergency calls](#)

This phone, like any wireless phone, operates using radio signals, wireless, and landline networks as well as user-programmed functions, which cannot

guarantee connection in all conditions. Therefore, you should never rely solely on any wireless phone for essential communications like medical emergencies. To make or receive calls, the phone must be switched on and in a service area with adequate signal strength. Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

To make an emergency call :(For INDIA example: 112,119,101,102)

1. Key in the emergency number for your present location. Emergency numbers may vary by location.
2. Press the Send Key.
3. Inform your location. Do not end the call until given permission to do so.

Certain features like Call Barring may need to be deactivated before you can make an emergency call. Consult this document with your local cellular service provider.

Other important safety information

★ Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.

Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.

★ Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the phone, its parts, or accessories.

★ For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. Improperly installed wireless equipment could result in serious injury if the air bag inflates.

★ Switch off your phone before boarding an aircraft. It is dangerous and illegal to use wireless phones in an aircraft because they can interfere with the operation of the aircraft.

★ Failure to observe these instructions may lead to the suspension or denial of telephone services to the offender, or legal action, or both.

Wynncom Authorized Care Centre

Only Wynncom qualified service personnel may repair your phone.

It is highly recommended to have a repair or service by qualified service personnel. Use only the approved accessories and batteries.

Introduction
1 Phone Display



Key	Function
Call Dial & Receive Key	Dial and receive calls via SIM1 or SIM2 card. View call history of SIM1 or SIM2 in idle mode.
Call Reject Key/Power on/off key	Press and hold to turn the phone on/off. End a call or reject an incoming call. Return to the idle mode.
Left Soft Key	Enter Shortcuts.
Right Soft Key	Access the phonebook list in idle mode. Return to the previous menu.
0 key	Press and hold to open torch.
OK Key	Confirm a selection.
Numeric key	Enter numbers, letters or characters. Select a submenu item with the corresponding number.
*	Press and hold to toggle between *, +, P and W. Press to enter symbol when editing text.
#	Press to switch input modes when entering text. Press and hold to activate or deactivate the silent mode in idle mode.
Navigation Key	Press to access four functions in idle mode (Up: Audio Player; Down: Camera; profile: Message; Right: FM. Within a menu, press Up, Down, Left or Right to scroll through menu options.

Note: "Press" in this manual, means to press and release the key; "press and hold" means to press and hold the key for at least 3 seconds.

 
Getting Started

Please read the safety instructions in the "Safety Information and Notices" section before use.

1. Inserting the SIM Card and the battery


1.1 Remove the back cover

Make sure the phone is switched off. You need to remove the back cover of your phone before you can insert the SIM card. Hold the phone with the front facing downwards, pull the battery cover downwards and lift the cover upwards to remove it.

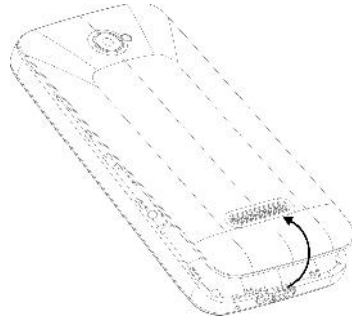


1.2 Remove the battery

 Put your finger on the black holder located at the bottom of the battery slot and lift the battery up to remove it. for further clarification please refer the pic below :

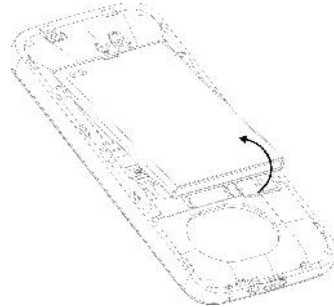

1.3 Insert the SIM card

 Make sure that the clipped corner of the SIM card is facing the correct direction and the metallic contacts are facing downwards. Slide the SIM card into the card slot until it stops. The slot for each network is indicated by 'SIM1' and "SIM2' at the top of the slot. for further clarification please refer the pic below:

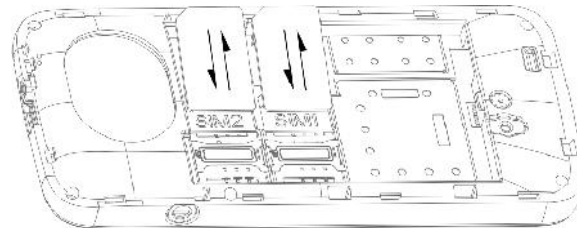

1.4 Install the battery

 
With the metallic contacts of the battery facing the metallic contacts in the battery slot, press the battery down until it locks into place.

1.5 Install the back cover

Align and hook the back cover to the top of the battery slot and then push the back cover upwards until it locks into place.

2. Inserting a Micro SD (External Memory) Card

Pull backward micro SD card cover. Then, put inside the micro SD card against the groove with the golden metal contact facing downward.

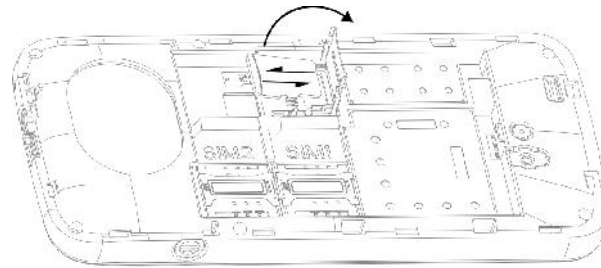

3. Turning the phone on

 
To turn the phone on, press and hold the Call End key. If you have already enabled the Sim Lock function then enter the PIN code (the 4 to 8 digit code of your SIM card). It is preconfigured and provided to you by your network operator or retailer. If you enter an incorrect PIN code 3 times in succession, your SIM card will be locked. To unlock it, you must obtain the PUK code from your network operator

4. Charging the Battery

Ensure the battery is inserted in the handset. To charge the battery, plug in the charger connector and then plug the other end into an AC power socket. The battery symbol indicates the charging status. While charging, the charge indicators will scroll. When all the scroll bars are steady, the battery is fully charged. It takes about 4 hours to fully charge the battery.

Disconnect the charger from the phone.

Disconnect the charger from the AC power socket. For further clarification please refer the pic below :

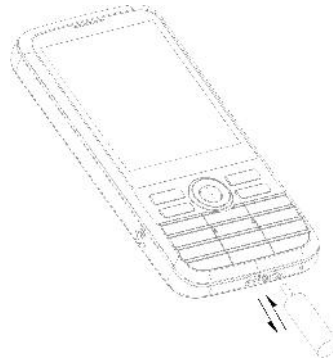

Note: If the battery is powerless, the battery icon will reappear after a few minutes of charging.

5. Important Password

Phone lock password is set as 0000 by default.

6. Keypad Lock and Unlock

Go to Settings > Security Settings > Auto keypad lock to select the time for keypad lock.

In idle mode, if the time expires, the keypad will be locked automatically.

Long Press * key to Lock Keypad

Press LSK+ * Key in quick succession to unlock the keypad manually.

Text Entry

1. Input Method

Your cellular phone supports several input methods, which include:

Smart (ABC/abc/Abc)

Multitap (ABC/abc/Abc)

Numeric Input (123)

Hindi Input

1.1 Changing the input modes

During text editing, you can press the # Key to switch input modes.

1.2 Entering Symbols

In any input mode, press the * Key to open the symbols input screen. Use the navigation key to choose the desired symbol and the OK key to select it.

2. Smart Input

Letters and symbols represented by each key are as follows:

2 to 9	Press to input letters
1	Press to input symbol
0	Press to input space
Left Soft Key (Select)	Press to confirm the letter or word.
Right Soft Key (Clear)	Press to clear a letter, press and hold to clear all entries.
OK Key	Press to send the message.
#	Switch between input mode

*	Press to activate punctuation mode
---	------------------------------------

Example: How to enter the word "HOME"

1. Press the # Key to switch to Smart ABC.
2. Press 4 6 6 3, the first word "GOOD" appears.
3. Use navigation keys to browse and select "HOME".
4. Press the Left Soft Key [Select] to confirm "HOME".

3. Multitap Input

This method requires multiple key presses to reach the desired character: the letter "h" is the second letter on the 4 key, so you must press 4 twice quickly to enter "h". Using this mode requires you to press a key as many times as needed to enter the desired letter.

Example:

To enter the word "home" in Multitap input mode "abc", press key 4(GHI) twice, press key 6(MNO) thrice, press key 6(MNO) once and key 3(DEF) twice.

4. Numeric Input

Press the # Key to select "123" input option then you can enter the numbers.

Calling

1. Making a Call

In idle mode, enter the phone number. Press the Dial key to call the number from SIM1 voice call or SIM2 voice call.

Press the Call End Key to end the call.

Note: During a call, press the navigation up and down key to adjust the volume. You can press the Left Soft Key [Options] to choose Sound recorder to record.

In most countries, recording telephone conversations is subject to legislation. We advise you to notify the caller if you intend to record your conversation and only do so if they agree.

2. Answering a Call

Press the Dial Key to answer calls to respective numbers.

Press the Call End key to reject it.

Menu Functions

How to Use

Select Menu

Press the ok Key [Menu] to enter main menu in idle mode.

Press the Navigation Key to choose desired operation and press the Left Soft Key [Ok] to enter the selected operation.

You can exit a menu and return to idle mode by pressing the Right Soft Key [Back] or the Call End Key.

Main Menu

Messages	Phonebook	Call history
Settings	Y -Zone	Multimedia
Profiles	File manager	Organizer
Music	Services	King movie

For further clarification refer the main GUI pic below :



1. Message

This chapter introduces the message services provided by the GSM network. Some services may not be supported by the local network.

1.1. Create messages

1.1.1. SMS

Enter the SMS editor screen. You may use keypad to input English, digits and punctuation marks. After writing the text message, you have the follow options:

Send: Send the message.

Add Recipient: Add new recipient.

Save to draft: Save to Draft box.

Insert: Insert pictures, audio, video, template, vCard or vCalendar.

Convert to MMS: Convert this SMS to MMS.

Send Options: Enter the SMS setup screen to set up service center number, Bearer mode, Validity period, Message type, Status report, Direct reply options

Input Menu: Insert symbols, switch input method or language.

1.1.2. MMS

The MMS function allows you to send text and multimedia such as pictures, audio and video to the other phone. After creating the message, you have the following options:

Send: Send the message.

Add Recipient: Add new recipient.

Insert: Insert Picture, audio, video, template, VCard, VCalendar.

Insert Slide: Insert a new page before or after the current page.

Preview: Preview the current MMS.

Convert to SMS: Convert this MMS to SMS.

Save to draft: Save to Draft box.

Page settings: Set the playback time, text positions and picture size

1.2. Inbox

The Inbox lists the received SMS and MMS. You have the following options: Open, new message, Reply, Delete, Copy to phone/SIM, Mark and Details.

After you select to read a message, you have the following options: Reply, Forward, Delete, Call Sender, Save sender, Copy to SIM, and View Detail.

The Mark function is for you to select messages for further operation, such as delete all marked messages, conveniently.

1.3. Draft box

Saved messages and unsent message are saved here. Options are Open, New message, Delete, Copy, Mark and View Detail.

After you select to read a message, you will enter the message editor.

1.4. Outbox

The out-going messages are listed here. Your options include: Resend, Delete, Delete all, Move to draft, View details.

1.5. Sent box

Sent messages are saved here. Your options include: Open, new message, Delete, Mark and View Details.

After you select to read a message, you have the following options: Forward, Delete, Call recipient, and View Detail.

1.6. Templates

You can preset frequently used sentences here to avoid repeated input when writing a message.

1.7. Schedule SMS

You can schedule the SMS for particular date and time and send.

1.8. SMS Chat

Keep the record of the chat on SMS.

1.9. Voicemail

Voicemail messages are stored on the network. You can listen to your voicemail messages by calling your network voicemail phone number. You will be asked to enter your mailbox number when you use it for the first time.

1.10. Cell Broadcast

Look up the broadcast messages.

1.11. Setting

There are eight options: SIM 1/SIM2 Message Service center number, validity period, Message Type, Delivery report, Direct Reply, Inbox Location, Save sent message.

--SIM1 Service Center No. : Display the Service center number of SIM1.

--SIM2 Service Center No. : Display the Service center number of SIM2.

--Validity period: You can set the validity period of the message for 1 hour, 6 hours, 24 hours, 72 hours, 1 week and the maximum value.

--Message Type: Choose the Type of message text, Paging, Email, Fax.

--Delivery report: Make it on/off.

--Direct Reply: You can make the reply path on/off.

--Inbox Location: You can choose the storage position at SIM card or phone.

--Save Sent message: You can make the Backup in sent box on /off.

■ MMS Settings

--Page Setting: You can set the duration/Text.

-- Sending option:

--Multimedia Retrieval: When this function is on, after the MMS is successfully received, the user will receive a delivery report.

--Allow Anonymous message: When this function is on, after the receiver reads your MMS, the sender's name and number are hidden. This function requires the network support.

--Receive advertisement: If this function is on, the advertisements in MMS are allowed.

-- Delivery Report: You could set it on /off.

--Validity period: Set the validity period of the MMS: 12 hours, 1 day, 1 week and maximum period

Note: This time is related with the services of the network operator.

--Save Sent Message: You could set it on to save the sent message and vice- versa.

1.12. Memory Status

This screen shows the storage status of SMS and the free space of your SIM card and your phone.

1.13. Data Count

This screen shows the count of SMS sent.

2. Phonebook

This chapter describes the functions of the phonebook. You can use alphabet for quick search of your contacts.

2.1. Phonebooks of SIM card and your phone

There are two separate phonebooks, one stored on the SIM card and the other in the phone.

Each entry in your SIM card's phonebook consists of a phone number and a name. When you change to another phone, the contact information can be transferred to your new phone with the SIM card. The total number of entries allowed in the SIM card varies with the different SIM cards.

The contact stored in the phone can include name, cell phone number, home, office numbers, others, group, picture, ring tone, company name, department name, address, email address, website and notebook. This information will not be transferred with the SIM card to your new phone.

2.2. Contact list

The contact list is arranged in alphabetical order. You have the following options: View, Call, Send, New, Delete, Delete all, Mark, Copy to SIM card/phone, Copy to SIM card/phone, Assign to group, vCard, and Memory Details.

View: View the contact information.

Call: Dial the current number

Send: Send SMS or MMS to the number.

New: Create a new contact.

Delete: Delete selected entry

Mark: Activate Mark/Unmark mode to mark the selected contact for further operation.

Copy to SIM/phone: Copy the selected entry to SIM card or phone.

Note:

- If the entry stored in the phone has multiple information, when copying it to SIM card, the information will be separated into multiple entries.
- In the dual card mode, the copy functions only apply to the default card.

Assign to Group: Contacts saved on the phone can be assigned to some specific groups .

Add to Blacklist : Add the contact to blacklist.

vCard: Send vCard, Import or export by vCard format.

Import: Import the vcard from phone/**memory card** to phonebook list.

Backup: backup the contact to phone/**memory card**.

Memory Details: Display the storage status.

2.3. Contact

From the contact list you can select a contact and do the following: Call, Send, Edit, Delete, Set picture, set ringtone, assign to group.

Edit: Edit the contact details

Set picture: Set up a headshot for the contact

Set ringtone: Assign an individual ring tone to the contact

2.4. Group

You may set up various groups to categorize your contacts.

3. Call center

Call history function logs all recent calls including missed calls, dialed calls and answered calls. Options are:

View: View the call log

Call: Dial the selected number

New Message: Send SMS or MMS to the selected number.

Save: Save the selected number to SIM or phone.

Delete: Delete selected entry

Delete all: Delete all entries, all entries of Card 1 or all entries of Card 2

Call timer: Last Call, Received calls, Dialed calls, Reset (phone password is required)

Call cost: Calculate the call cost according to the call time

Note : Default password is "0000".

4. Settings

Enter Settings from the Main Menu. There are General, Phone and Connection Settings.

Note:

➤ If only one SIM card is installed, your phone will automatically hide the dual card related settings.

4.1. General settings

4.1.1. Personalization

Personal settings include Display, Standby mode, ringtone settings and Display language.

Display settings

Backlight: Set the brightness of backlight and time.

Standby mode

Set the wallpaper and arrow key shortcuts.

Ringtone settings

You can set Vibrate, Volume, incoming call tone, Power on tone, Power off tone, Message, Calendar, Alarm, Missed event reminder tone.

Display Language

Set display language, writing language.

The editor settings vary with different languages. When the language is set to English, you have the options to set the default input method: English alphabet.

When the language is set to another language, the input methods may be intelligent input method, keypad method, etc.

Navigation keys

Set the shortcut on navigation key.

Reject By SMS

This feature allows you to reject a call by sending SMS .You can On/off this feature.

4.1.2. Time and date

You can set the time, Time zone, Second time, Time format, date, date format.

4.1.3. Profiles

Six Profiles are available: General Mode, Meeting Mode, Outdoor Mode, Silent Mode, Personal Mode, and Headset Mode. You can select any of these Profiles or customize your own profile by adjusting the parameters of the Profile. Restore to default settings by using the Restore option.

4.1.4. Power on/off

You can set the time and condition for the phone to automatically power on/off itself.

4.1.5. Information

You can look up your phone IMEI, Memory details, Software version in this menu.

4.1.6. Security

You can set Phone lock, SIM lock, and Auto keypad lock here.

SIM1/SIM2 Pin code: Change PIN1 and PIN2 passwords. You need to have the default Pin numbers from the network carrier.

Phone lock: Turn the phone lock on/off and edit your phone password. The default is 0000.

SIM lock: Allow you to check the SIM card lock status and change password.

Mobile tracker: If you lose your phone, this function may probably help you to get back your phone.

1. First you should insert SIM card.
2. Enter Settings → Security settings → SIM1 security settings → Mobile tracker.
3. Enter the password (The password is 0000, same as Phone lock password).
4. Set status "ON".
5. Enter "Receive stolen SMS number". You can add two numbers.
6. Finish.
7. Power off. Pull off the SIM card, and insert other SIM card. (If you set SIM1 Security, you will pull off the SIM1 and insert another SIM1).
8. Power on. The handset will send a message to the numbers (You enter the numbers in "Receive stolen SMS number"). You will know which number is using your handset. If you insert former SIM card, the handset will not send the message.

Note: The initial password is "0000." After you change your password, you will need to input the password. If you forgot your password, contact the service center. Please be informed that the Mobile tracker message is support only SIM1. Please contact your service provider for more information.

Auto keypad lock: You can lock your phone manually, or select auto lock for the phone to lock its screen and keypad automatically after some idle time in the Standby mode.

4.1.7 Dance mode settings

Dance mode including mode Settings dance light setting/dance vibrator setting/dance mode setting.

4.1.8 Restore to factory default

Restore you phone to the factory or default settings through this option. You need to input your phone password (default is 0000) for this operation.

All data will be deleted when your phone is restored to its factory settings.

4.2. Phone settings

4.2.1. Call settings

Call waiting

You can turn the call waiting on/off and look up the current status. When the call waiting is turned off and your phone is busy, all other incoming calls will hear the busy ring tone.

Caller identity

You can set whether or not to send your phone number with out-going calls.

Minute Reminder

You can set the duration of the call for the phone to remind you when the time is reached.

Auto redial

You can set whether or not to auto redial the number last called that was unanswered.

Answer reminder

Off, ring tone, vibrate, and screen blinking.

Cost setting

Set the currency, unit cost and quota.

User group

Set user groups.

4.2.2. Call divert

Set the divert methods for the following different types of calls: all, voicemail, data, fax. The divert methods are: divert all, when busy, when no answer, when no service, when power-off, cancel all divert.

4.2.3. Call barring

Set the block methods for the following different types of calls: all, voicemail, data, fax and SMS. Block options are: all outgoing, international outgoing, international outgoing while abroad, all incoming, incoming while abroad, cancel all barring, change password.

4.2.4. Network settings

You can set your priority network, carrier, and airplane mode.

4.2.5. Switch mode

You can set dual mode, enable sim1 only and enable sim2 only.

4.2.6. Speed dial

Set fast dial numbers. When the number is set, you can simply press the single number key and then the dial key for a fast dial.

4.3. Connection settings

You can set Modem account, WAP account, MMS settings.

5. Y Zone

5.1 Smart Auto Call Record

You can on/off this function. When it is "on" all the incoming calls will record at the defined storage place.

Note: By default the storage is Audio folder of phone memory, after the phone memory is completely full the file will save in Audio folder of memory card.

When Auto Call record is activated the file will save in the following format:

Phone number<Date (YY-MM-DD)<Time (Time will be in 24hr clock format)

5.2 Private Data Protection

It is used to password protect phonebook, call history ,message , file manager .To activate this function user need to provide the security code " 0000" and user need to switch on this function.

Note:The default password of privacy protection mode is "0000".

5.3 Remote control Mobile Tracker

This is the remote control feature in your phone. In case if you forgot you phone at home you want make it off, transfer the call , transfer SMS or set the block mode you just need to send one SMS the phone will get switched off.

You can also track you lost Wynncom W601 phone by activating this function in you Wynncom W601.

The default Mobile Tracker password is "0000".

5.4 Games

5.4.1 Tetris

Tetris game is a pop and classical game all over the world; it is very simple to play. Play process, navigation keys and left soft key control game.

5.5Ebuddy/Facebook/MSN/Twitter/Cricinfo/Hungama/Hungama radio/Tjat/Yahoo/ Google

You can sign in to Ebuddy ,Yahoo , facebook , MSN , twitter , cricinfo , hungama, Tjat by the direct link provided in you mobile phone. This will work only when GPRS service is activated in your SIM.

6. Multimedia

You have Camera, Video Recorder, Photo Viewer, FM radio, Voice memo and King movie functions in Multimedia.

6.1. Camera

Before using Camera, make sure you have inserted a memory card. The photos will be saved in JPG format to your memory card.

Note:

- Taking pictures in dim lighting may result in poor picture quality.

After entering the Camera, the Camera Preview screen will appear with the status icons. Press **Center** to take the picture.

Other options include:



Configuration



Browse photos



Switch to camcorder



Go back

Camera settings include:

Image size: For contact, Wallpaper, 320x240, 640x480, 800x600, 1024x768, 1280x1024

Image quality: Normal, High, Low

Night mode: On, Off

Effect: Normal, Mono, Sepia, Negative, Sepia blue, Gray inversion

Continues: 4, 6, 9, Off

Timer: 5 seconds, 10 seconds, 15 seconds, Off

White balance: Auto, Cloud, Daylight, Fluorescent, Incandescence

Banding: 50Hz, 60Hz

Sound: On, Off

EV: -2, -1, 0, 1, 2

Fill light: On, Off

6.2. Video Recorder

Before using Camcorder, make sure you have inserted a memory card. The video will be saved in 3GP format to your memory card.

After entering the Camcorder, the Camcorder Preview screen will appear with status icons. Press **Center** to start recording videos.

Other options include:



Configuration



Browse photos



Switch to camcorder



Go back

Camcorder settings include:

Video size: CIF (352x288), QCIF (176x144)

Video quality: Normal, High, Low

Night mode: On, Off

Effect: Normal, Mono, Sepia, Negative, Sepia blue, Gray inversion

White balance: Auto, Cloud, Daylight, Fluorescent, Incandescence

Banding: 50Hz, 60Hz

Sound: On, Off

File Size Limit: No limit, MMS size

Recording Time Limit: No limit, 15 seconds, 30 seconds, 60 seconds

EV: -2, -1, 0, 1, 2

6.3. King Movie

In this player you can play the video in .KMV format only. This player provides you to play KMV format, which is the compressed format of video and lets you store and play 5 movies in 2GB card.

Enter the Video Player and the Video file list is displayed. Select the video and you can do the following:

You can press **Center** to Pause and play, press **Left** to previous, press **Right** to next, press **Up** to volume up, press **Down** to volume down, press ***** to full screen on/off

Several functions are available by Options menu: Stop/Play, Full screen, Send, Delete, Details.

6.4. Photo Viewer

Upon entering the Photo Album, the photos are listed as thumbnails. Several functions are available by Options menu:

View: Preview the selected image.

Set as: Set as Wallpaper, Contact head shot and screen saver.

Send: Send by MMS or Bluetooth.

Rename: Rename the selected image.

Delete: Delete the selected image.

Mark: Mark the selected image or all images.

Slideshow: Display by slideshow.

View detail: Look up the name, file type, size, date, and stored place.

6.5. FM radio

You can receive and listen to FM radio here.

Please make sure the headset, which is used as the antenna, is plugged in before using the FM radio.

The icons on the touch screen provide the following functions:



Press **Center** to control play/stop



Press **Right** to Search forward



Press **Left** to Search backward



Press **up** Volume up



Press **down** Volume down

Functions are also available via the Options menu:

Radio off (on): Turn the FM radio off/on.

My channel: Edit My channel. You can set up to 20 favorite channels.

Add to my channel: Add current channel to My channel.

Search channel: Auto search, Manual input.

Record: Record FM

In the My Channel option, you can play, edit, delete and delete all.

6.6. Sound Recorder

Enter the Sound recorder function, Press **Center** to start and stop recording. The memo can be played back immediately or using Option menu to do the following functions:

New: Start a new recording

Send: Send by MMS or Bluetooth

Set as: Set as ring tone, individual contact ring tone, alarm sound

Rename: Rename the recording

Delete: Delete the recording

7. Profiles

Six Profiles are available: General Mode, Meeting Mode, Outdoor Mode, Silent Mode, Personal Mode, Headset Mode , Bluetooth mode & Power Saving . You can select any of these Profiles or customize your own profile by adjusting the parameters of the Profile. Restore to default settings by using the Restore option.

8. File Manager

The File Manager lists the all the files stored in your phone or memory card.

9. Organizer

9.1. Bluetooth

You may do functions for your Bluetooth settings such as: Turn on/off, Paired devices, Search devices, Settings.

9.2. Calculator

A basic calculator is provided.

9.3. Converter

The Unit Converter can help you convert Currency, Energy, Speed, Mass, Area, Volume, Power, Time, Pressure, Length, Temperature, and Date (western and lunar calendar).

9.4. Stopwatch

Stopwatch provides 20 sets of entries with both total and lap timer functions.

9.5. Timer

Countdown timer is provided

9.6. World clock

World clock is provided with a world map. You can press **Left** and **Right** to switch to the next time zone. The local time of the city on the map is displayed.

9.7. Shortcuts

You can set shortcuts for quick operations.

9.8. BMI

You can calculate the body mass index .

9.9. Calendar

In addition to the western calendar. You can add, edit and look up events on different dates. Options are:

New event: The editor will be displayed. You can add an appointment or an all-day event. Available input fields are: Subject, Location, Repeat, Start date, Start time, End date, end time, alarm, description. The display and reminder will be executed according to your setting.

View mode: Weekly or monthly

Event list: List the events of the selected month. You may edit, delete or send the event.

Go to date: Go to a particular date directly

Setting: Set the preset view mode, the start day of a week

Delete all: You can delete all the events prior to a certain date, or delete all events

Search event: Search event by inputting the keyword

Memory details: You can look up the total number of event entries and free space.

9.10. Alarm

You can set up to 6 alarm clocks. The Alarm Clock settings include: Title, Time, Status, Frequency and Ringtone. The frequency settings are: Once, Daily,

Monday, Tuesday, Wednesday, Thursday, Friday, Saturday and Sunday. The Alarm Clock function is on even when the phone is powered off.

Alarm Dialog will be displayed when the alarm goes off. You can stop the alarm or snooze for 5 minutes.

9.11. Torch

To turn on/off the torch function.

9.12. E-Book

The eBook function lists the eBooks in TXT format stored in your memory card. On the bottom of the screen, the size and the number of rows of the selected eBook are displayed. Press **Up** or **Down** to scroll up or down the list, and press **Center** to open the selected eBook.

Press **Left** to open the Option menu:

View: Open the eBook

Delete: Delete the current eBook

Delete all: Delete all eBooks

Scroll Style: There are four options, one row at a time, three rows at a time, six rows at a time and one page at a time.

Language code: Auto, Simplified Chinese (GB2312), UCS2

Information: Display the name, size and format of the selected eBook

After you open an eBook, you can press **Up** or **Down** to scroll up or down the page. You can also press **Left** to open the menu for the following functions:

Full screen: You can also press **Center** to toggle Full screen and normal browsing mode.

My bookmark: You can add a bookmark to the current page, or go to the page marked previously and continue reading from there. In the bookmark list, tap

Option for the following operations: rename, replace, delete and delete all.

Scroll format: There are four options, one row at a time, three rows at a time, six rows at a time and one page at a time.

Note:

➤ You must install a corresponding data package to your T card to use this function.

10. Audio player

Upon entering the Music Player, Playlist will be displayed. Through All Music you can look up all the music files. Other Options are: View, New playlist, Repeat, Shuffle, Equalizer, dance mode settings, Show lyrics and Set cover.

After you have selected music from the Playlist, you will enter the Music Player screen and you can look up the album, name of the song, artist, play time, item number, etc.

You can press **Center** to Pause and play, press **Left** to previous, press **Right** to next, press **up** to volume up, press **down** to volume down.

The following operations can also be done by selecting the corresponding menu item: Play/Pause, Stop, Repeat, Shuffle, Equalizer, Dance mode settings, Show lyrics, Song info, and Details.

11. Service

11.1. WAP explorer

Your mobile phone supports wireless application protocol (WAP) service. You can access many different WAP services such as news, weather reports, flight information, and others. These services are especially designed for mobile phones and maintained by WAP service providers.

Network support is necessary for WAP services. Please contact your network provider and the service provider of the desired service. The service provider will also provide instructions about how to use their service.

Guidance

Goto URL: Use this menu to manually enter the URL address of a website and access the website.

Homepage: Select "Homepage" to enter the home page, use this menu to connect your phone to the network and load the home page of the wireless web service provider. The Home page is the WAP site set by you in the activated connection method.

Mangage bookmark

Create new, edit, delete and move bookmark. Also you can set the bookmark you have created homepage.

Folder

Create New, delete and rename Folder.

Mark

You can mark or mark all bookmarks you have created.

Clean

Clean all buffer data

Settings

Select "Settings" to enter settings for online browsing.

Download image: Yes / No

Storage: Phone / Card

Download dir

You can browse what you have downloaded.

Exit

Exit WAP Service

Note: If you tried to visit, or successfully visited confidential information that required a password (such as a bank account), please clear your mobile phone's cache memory each time.

12. Video player

In this player you can play the video in .KMV format only. This player provides you to play KMV format, which is the compressed format of video and lets you store and play 5 movies in 2GB card.

Enter the Video Player and the Video file list is displayed. Select the video and you can do the following:

You can press **Center** to Pause and play, press **Left** to previous, press **Right** to next, press **Up** to volume up, press **down** to volume down, press **#** to full screen on/off

Several functions are available by Options menu: Stop/Play, Full screen, Send, Delete, Details.

13. USB mode

While your phone is connected by USB, you may use your phone as storage device, Modem and Webcam. Other than Modem, the functions are plug-and-play.

For Modem, please find the software on your external memory card. Connect your phone to your PC and select your phone as Modem. Use the wizard of your PC operating system to guide you through installation. You can find Modem in your PC's Device Manager and check if the driver is successfully installed.

Note:

- While using the above functions, the phone application will be disabled.
- When our phone is connected by USB but there is no further setting, the phone will switch into charging mode.

Technical Specification W601	
GSM Network	900/1800MHz
Display Size	6.1Cm
Battery Capacity	1800mAh
Charger Specification	Input :AC100-300V/50-60Hz Output: DC 5V/500mA
SAR Value	0.58W/Kg
Camera Resolution	1.3 Mega Pixel

Limited Warranty Terms and Conditions

Wynncom Digital Devices Pvt. Ltd., (hereinafter referred to as the 'Company') provides this Limited Warranty to the purchaser of the Wynncom mobile handset and original accessories (Battery, Charger, Hands free etc.) supplied in the sales package (hereinafter collectively referred to as the 'Product').

Warranty period

Subject to the conditions specified herein, the Company warrants the Product to be free from defects in design, material and workmanship at the time of its original purchase and for a subsequent period of one year for the Transceiver, six months for the Accessories (Charger/ Battery/ Hands free/ Data cable); all periods commencing from the date of purchase.

How to get warranty service

To obtain warranty services, the purchaser needs to bring the Product to the Company's Authorized Care Centre at his/her own cost, along with the original proof of purchase, bearing unaltered/ unmodified date of purchase and IMEI number.

The Company's Limited Warranty extends only to the original purchaser/ end user of the Product, and is not assignable or transferable to a subsequent purchaser/ end user

Provisions and Exclusions

This Limited Warranty does not cover a) normal wear and tear; b) defects caused by improper handling; c) defects or damages caused by misuse of the Product, including use that is contrary to the instructions provided by the Company set out in the Product's User's Manual; and/or d) other acts beyond the reasonable control of the Company (including but not limited to Force Majeure, Lightning, Voltage surge, etc.)

During the warranty period, the Company or its Authorized Care Centre may repair or replace at its sole discretion, any defective Product(s) or part(s) thereof with new or factory rebuilt/ re-conditioned item(s) and return the Product to the purchaser in working condition. All replaced part(s)/ item(s) shall become the property of the Company.

The repaired or replaced part(s) or item(s) shall stand warranted only for the remaining warranty period since the date of purchase.

The warranty shall cease to exist in the absence of the original proof of purchase, or in case the original serial number/ IMEI is removed, modified or obliterated, or if the Product is damaged due to liquid spillage, exposure to moisture, exposure to extreme thermal or environmental conditions, or if there is a physical damage to the Product, or if the Product was found tampered/ found opened, modified or repaired by anyone other than the Company's Authorized Care Centre.

The warranty terms are subject to change without prior notice.

Except for any liability that cannot be excluded by law, the Company (including its related entities and their respective officers, employees and agents) excludes all liabilities (including negligence), for any loss of profit, business revenue, goodwill, anticipated savings or data, personal injury; or any loss or damage (including loss of opportunity); whether direct, indirect, special or consequential, arising in any way out of the Product.

All disputes are subject to the jurisdiction of courts of Delhi only.

Wynncom Care – 1800 102 9299
9.30 AM to 6.30 PM (Mon-Sat)

Email us at customercare@wynncom.net
Visit us at www.wynncom.net