

W707

User's Manual



ALL RIGHTS RESERVED

© 2012. All rights are reserved. No part of this document may be reproduced without permission.

While all efforts have been made to ensure the accuracy of all contents in this manual, we assume no liability for errors or omissions or statements of any kind in this manual, whether such errors or omissions or statements resulting from negligence, accidents, or any other cause. The contents of this manual are subject to change without notice.

Protect our environment! We strive to produce products in compliance with global environmental standards. Please consult your local authorities for proper disposal.

Note: User's Manual is Just to guide the user about the functionality of the phone. This does not seem any certificate of technology. Some functions may vary due to modifications and up gradations of software or due to print mistake.

TABLE OF CONTENTS

ALL RIGHTS RESERVED

TABLE OF CONTENTS

SAFETY PRECAUTIONS

GENERAL INFORMATION1

Antenna.....1

Network Service.....1

Accessories1

PHONE OVERVIEW ERROR! BOOKMARK NOT DEFINED.

STATUS ICONS3

SMART TOUCH SCREEN4

GETTING STARTED5

Installing SIM Card and Battery.....5

Installing Memory Card5

Charging the Battery.....6

Switch On/Off the Phone6

Automatic Customer Registration7

BASIC OPERATIONS8

Make Calls8

To Dial International Number.....8

Clear Wrong Enters.....9

Adjusting the Sound Volume9

Answer/Reject an Incoming Call.....9

Options During A Call.....9

MAIN MENU.....10

DIALER.....10

MESSAGING10

MEDIA PLAYER12

PHONEBOOK.....12









CALL LOGS13



CALENDAR13

| | |
|--------------------------------------|------------|
| <i>CAMERA</i> | 13 |
| <i>Y ZONE</i> | 13 |
| <i>SETTINGS</i> | 15 |
| <i>ALARM</i> | 18 |
| <i>IMAGE VIEWER</i> | 18 |
| <i>CALCULATOR</i> | 18 |
| <i>FILE MANAGER</i> | 18 |
| <i>SOUND RECORDER</i> | 19 |
| <i>CONNECTIVITY</i> | 19 |
| <i>TASKS</i> | 19 |
| <i>FM RADIO</i> | 19 |
| <i>WORLD CLOCK</i> | 19 |
| <i>SIM TOOLKIT</i> | 19 |
| <i>FACEBOOK</i> | 19 |
| <i>Y! MESSENGER</i> | 20 |
| <i>BLUETOOTH</i> | 20 |
| <i>BROWSER</i> | 20 |
| <i>CURRENCY CONVERTER</i> | 20 |
| <i>EBOOK READER</i> | 20 |
| <i>GAMES</i> | 20 |
| <i>MOVIE</i> | 21 |
| <i>PROFILES</i> | 21 |
| <i>STOPWATCH</i> | 21 |
| <i>TWITTER</i> | 21 |
| <i>UNIT CONVERTER</i> | 21 |
| APPENDIX | 23 |
| <i>Troubleshooting</i> | 23 |
| TECHNICAL SPECIFICATION | 224 |

SAFETY PRECAUTIONS

Before using your phone, please read the following important information to eliminate or reduce any possibility of causing damage and personal injury.

| | |
|---|--|
|  | <i>Do not use wireless phones while driving.</i> |
|  | <i>Switch off wireless devices in aircraft. The signal may cause interference. Using them on aircraft is illegal.</i> |
|  | <i>Do not use mobile phones where blasting is in progress. Follow any regulations and rules strictly.</i> |
|  | <i>Do not use mobile phones at Petrol stations. Don't use near fuel or chemicals. Do not dispose your battery or mobile in a fire.</i> |
|  | <i>Follow any regulations or rules in hospital and health care facilities. Switch phone off near medical equipment.</i> |
|  | <i>All wireless devices may get interference that could affect performance.</i> |
|  | <i>The repair or installation of the device should be done at Authorized service centers</i> |
|  | <i>Use only approved accessories and batteries.</i> |

| | |
|---|--|
|  | <p><i>Use only in normal position. Do not expose your phone to extreme high temperatures above +60°C (+140°F). Do not use anything static to clean your phone.</i></p> |
|  | <p><i>Ensure the phone is turned on and in service. Enter the emergency number, then press Pick Up key. Give your location. Do not end the call until told to do so.</i></p> |

Improper use will invalidate the warranty! These safety instructions also apply to original accessories.

Antenna

Use of other antenna devices could damage your mobile phone and reduce performance. Your phone has a built-in antenna. Don't touch the antenna area unnecessarily when the phone is switched on. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

Network Service

A lot of features described in this manual are called network service. They are special services provided by wireless service providers. You should subscribe to these services from your home service provider and learn instructions on uses before you select the network you want to use.


Accessories

Li-Ion battery is the manufacturer-approved rechargeable battery available for your phone. May be some batteries performs best after several full charge/discharge cycles.

Use batteries, chargers and accessories approved by the phone manufacturer with this particular model. The use of any other types will invalidate any approval or warranty applying to the phone, and may be dangerous.

Please consult with your dealer for availability of approved accessories.

PHONE OVERVIEW

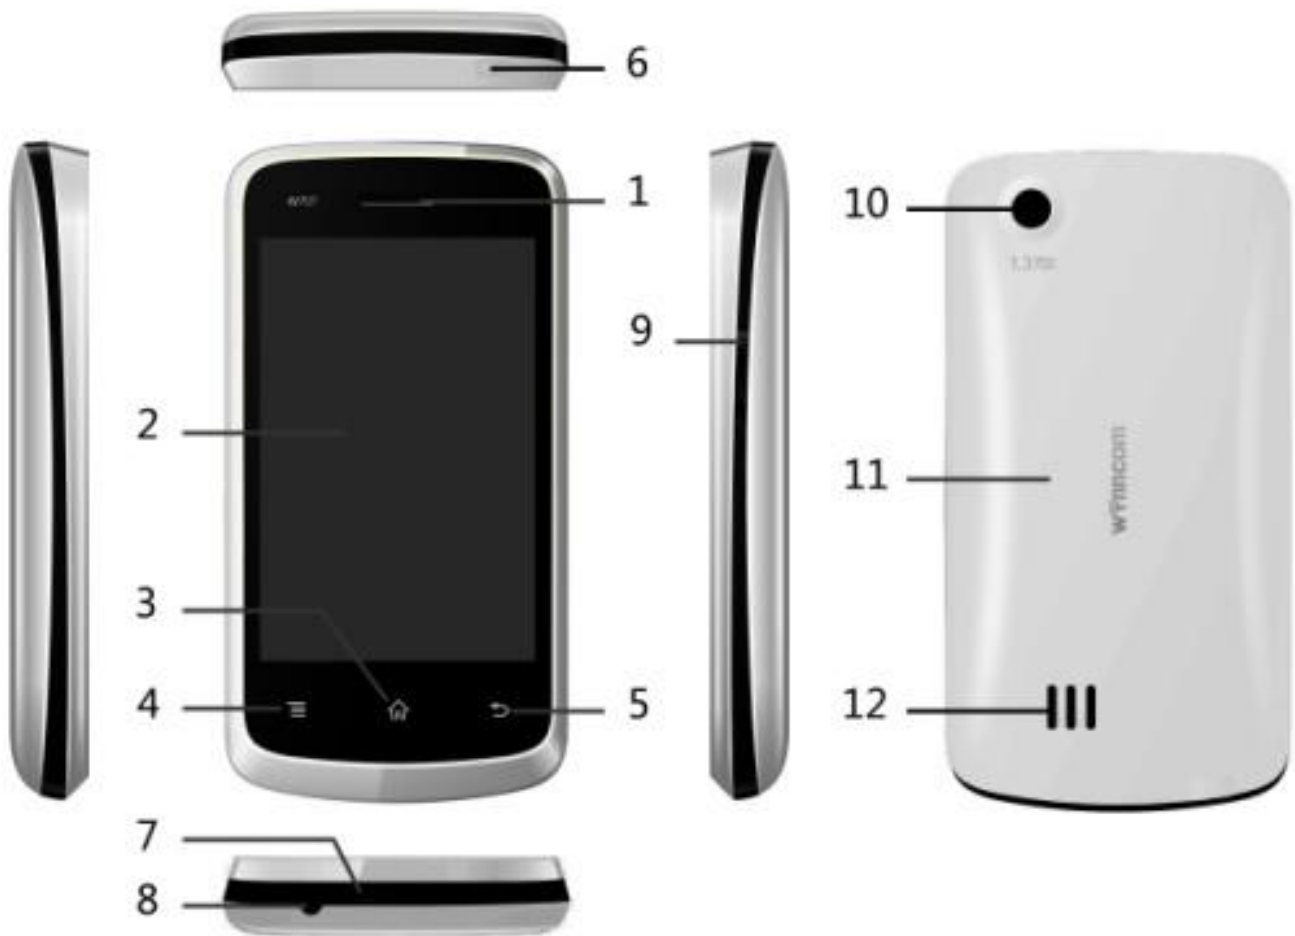

1 Receiver

2 Screen

3 Home Key

4 Left Soft Key

5 Back Key

6 Power Key

7 USB Connector

8 Earphone Jack

9 Side keys


 











10 Camera

11 Battery cover

12 Speaker

STATUS ICONS

The table below lists various icons that might appear on the status bar while using the phone. Apart from the icons for signal strength level and the power, other icons are displayed as per the current mode and priority of the phone.

| Icon | Description |
|---|--|
|  | <i>Indicates the network signal strength.</i> |
|  | <i>Indicates the current battery capacity.</i> |
|  | <i>Indicates that there is an unread message.</i> |
|  | <i>Indicates that there is a missed call.</i> |
|  | <i>Indicates that the current Sound Status is the Ring only.</i> |
|  | <i>Indicates that the current Sound Status is the Vibrate then Ring.</i> |
|  | <i>Indicates that the current Sound Status is the Vibrate and Ring.</i> |
|  | <i>Indicates that the current Sound Status is the Vibrate only.</i> |
|  | <i>Indicates that the current Sound Status is the Silent mode.</i> |
|  | <i>Indicates that the current profile mode is the Headset mode.</i> |
|  | <i>Indicates that the current alarm clock is set as activated.</i> |
|  | <i>Indicates the current keypad-locked state.</i> |
|  | <i>Indicates that the Bluetooth is turn on.</i> |

Note: The picture is for reference only; the product is subject to the

real one.

SMART TOUCH SCREEN

The phone features a full touch, 8.11 cm wide screen with idle display and access to utilities on just one-touch. So swipe right or left to navigate through various screens accessing your favorite features without entering the main menu.

The first row known as the status bar displays various icons, including signal strength, battery, time and profile mode.

GETTING STARTED

Please switch off your phone before inserting or removing the battery/SIM card or memory card.

Installing SIM Card and Battery

Your phone is provided with two SIM slots for two different SIM cards. The SIM card inserted in the slot is called SIM.

- *Hold the phone with the back upwards: Eject the battery cover from the left side of the camera.*
- *Remove the back cover of the phone.*
- *Insert the SIM cards in the slots.*
- *Attach the battery.*
- *Push the battery cover until it clicks into place.*




Installing Memory Card

The phone supports T-Flash card, which is a multimedia memory card used to multiply the memory of the phone. The T-flash card is small and should be pulled out /installed carefully and prudently in order to avoid any kind of damage.

- *Switch off your phone.*
- *Remove the battery cover.*
- *Slide the T-Flash card into the slot.*
- *Attach the battery.*

- *Push the battery cover until it clicks into place.*

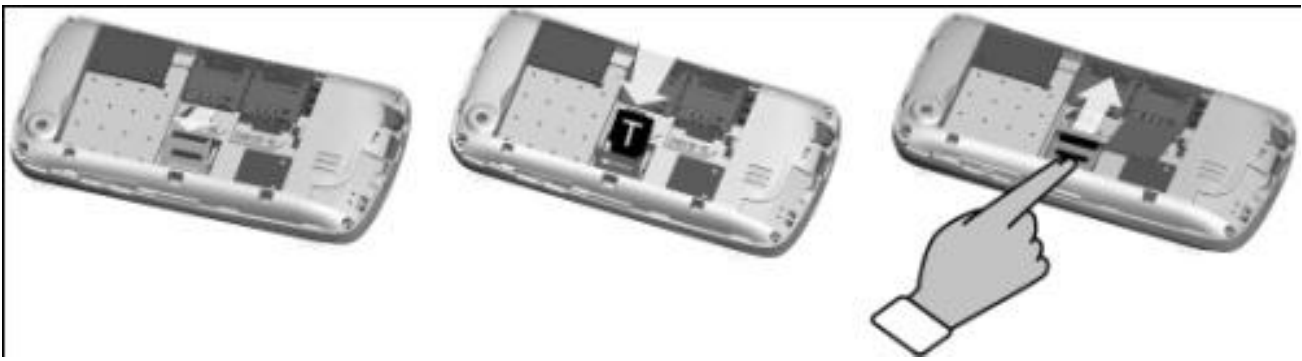


Charging the Battery

The phone prompts a warning tone and message stating insufficient battery when the power of your phone is low. Please follow the instructions mentioned below to charge your phone:

- *Plug the connector of the charger into the jack of the phone.*
- *Plug the charger into a standard AC wall outlet.*

Note:

When  is shown on the screen, it indicates that there is not enough power and you should now charge your phone. When charging is complete, the battery icon will stop flashing.

Charging.....  Fully Charged..... 

You must fully charge the battery before using the phone for the first time. It is recommended to charge the battery for four hours before using the phone for the first time.

If the phone is turned on during charging, you can still make or answer calls, but this will consume battery power, thus will extend the charging time of the phone.

Switch On/Off the Phone

To turn on/off the phone, press and hold the Power Key. If you have

enabled the SIM Lock function then enter the PIN code (the 4 to 8 digits secret code of your SIM card). It is preconfigured and provided to you by your network operator or retailer. If you enter an incorrect PIN code 3 times in succession, your SIM card will be locked. To unlock it, you must obtain a code from your network operator.


Automatic Customer Registration





After 4 hours of usage a SMS from the phone will be sent automatically for the customer registration.

Note: standard SMS charges apply.

BASIC OPERATIONS


Make Calls


If the icon  appears on the screen, then you can make or receive calls.

- In the standby mode, tap **Dialer** , enter the desired phone number (should affix the international/ national/ regional code or district code if necessary) and then tap  to make a call.
- In the standby mode, tap **Phonebook** , use the scroll bar to select the desired contact or enter the initials of the name to be searched and then tap  to make a call.

To Dial International Number

The phone supports dialing the international emergency phone number. Using your handset, you can dial an emergency call in any country or region under the normal situation regardless of SIM card inserted when the phone is located within the coverage of the GSM network.

Input the emergency phone number and tap  to dial.

- In the idle mode, tap the * twice to prefix the international symbol +.
- Enter the country code, area code and phone number.
- Tap  to make an International call.

The phone will select the main network automatically after powered on if it is located within the coverage of the main network.

The phone can use other network, called as roaming, if the phone is not located within the coverage of the main network when the network operator protocol permits.



Clear Wrong Enters

If you tap a wrong number, tap Clear to erase the wrong number.

Adjusting the Sound Volume

During a call, you can press the Side Key to adjust the earpiece volume.

Answer/Reject an Incoming Call

- *To answer an incoming call, tap the (). You can use the earphone to answer the call when the generic earphone is inserted in the phone.*
- *To end or reject an incoming/ongoing call, tap the ().*
End-call).


Options During A Call

Your phone provides a number of functions that you can use during a call.

MAIN MENU

Menu guides you to the various features, applications and services available in your phone. Tap **Menu** access to the Main Menu.

DIALER

This opens the dialer pad for you to enter the desired phone number and then tap  to make a call.

You can make a call, save to phonebook or send a message to the contact using the dialer pad.

MESSAGING

Your phone features, sending and receiving of SMS (Short Message Service) and MMS (Multimedia Message Service).

In the standby mode, tap  Messaging.

Write Message

You can create and send SMS/MMS to a particular contact using this sub-menu.

Conversations/ Inbox

Inbox sub-menu enables you to view all the messages received on your SIM.

Drafts

The created messages can be saved to drafts folder for future use. After selecting a message from the Drafts folder, select Options to edit/delete or send the saved message from the desired SIM.

Broadcast Message

This network service enables you to receive all kind of text messages, such as weather reports or transportation information. There are several networks who afford this service in this world. Please consult your network operator for more reference.

Templates

Your phone is provided with some commonly used pre-defined messages. These messages can be edited, removed and send instantly.

Message Settings

1. Text message

Message Settings: You can change the SMS settings, such as profile settings, voicemail server, also, you can check the memory status and choose the preferred storage.

2. Multimedia Message

Data Account: You can set primary account and secondary account for SIM.

Common Settings:

- **Compose:** You can configure Slide Time, Creation Mode, Auto Signature, Signature.
- **Sending:** You can configure Validity period, Delivery Report, Read Report, Priority, Delivery Time, Send and save.
- **Retrieval:** You can configure Home network, Roaming, Filters, Read report and Delivery Report.
- **Preferred Storage:** You can set phone or memory card for the preferred storage.
- **Memory Status:** You can check the usage, used memory and free memory of phone and memory card.

3. Service Message

- **Enable push:** You can set accept all, disable.
- **Service loading:** You can set prompt, auto launch and disable.

4. Conversations

You can set to on/off to enable/disable the conversation feature.

SMS Backup

You can backup your SMS.

Message Blacklist

You can set message blacklist function 'on' or 'off' to restrict set numbers from sending you messages.

MEDIA PLAYER

Audio Player allows you to play audio files. The phone supports T-Flash memory card.

PHONEBOOK

This menu refers to the directory wherein all the contacts are stored in an alphabetical order. You can view, edit, delete, send message and perform various other functions on each contact of your phonebook.

In the standby mode, Tap  Phonebook.

Add New Contact

Go to main Menu and select phonebook

- *Add the required details i.e number and contact name*

Search Contact

- *Input the initials of a name to be searched.*
- *Select a desired entry from the list.*

Select a contact from the phonebook and select options to perform the following functions:

- **View:** *view the detailed info of the selected contact.*
- **Send Text Message:** *send a message to the current contact.*
- **Send Multimedia Message:** *send a multimedia message to the current contact.*
- **Call:** *make a call.*
- **Edit:** *edit the current contact.*
- **Delete:** *delete the current contact.*
- **Copy:** *copy the entry to phone, to SIM.*
- **Send business Card:** *send the contact details as a message etc.*
- **Add To Blacklist:** *add the contact to the blacklist list.*

- **Mark several:** you can mark several numbers.
- **Phonebook Settings:** manage the phonebook with this function.

CALL LOGS

In the standby mode, tap **Menu > Call Logs**.

All Calls

With this function, you can check all recent calls.

Dialed Calls

With this function, you can check recent dialed calls. In this function, you can Delete, Save to Phone Book, Call, and so on.

Missed Calls

Scroll the Up/Down to select a missed call.

Press the left soft key to access **Options**, and you can Delete, Save to Phone book, call, and so on.

Received Calls



With this function, you can check recent received calls. In this function, you can Delete, Save to Phone Book, Call, and so on.

CALENDAR

You can view and edit the memo of a specified date with this function.

CAMERA

The phone is provided with a digital camera, which supports the photographing and video shooting functions. Pictures are saved in the file system of the phone or the memory card.

You can tap  >  to switch between video and camera mode.

Y ZONE

Auto call Record

You can select Off or On.

Privacy

Did someone scan your Personal Messages when you were out? Get smarter with W707's Private Menu advantage. Keep your Phone numbers, SMS and Call Records password protected so that no one gets to know about your secrets. It can keep 1000 Numbers of Phone Book, SMS up to 200, 20 each of Dialed Calls, Received Calls and Missed Call Records, your personal notes like different passwords, account nos. etc (Above all are shared between both Private and Non-private Menu and for SMS with SIM Card SMS and handset SMS). The default password is 0000.

Mobile Tracker

Now do not panic, even if your handset is misplaced. The Mobile Tracker feature in W707 allows you to keep a track of your handset if it is lost. Just activate Mobile Tracker application and assign the numbers, so that if you lose your handset, you can receive a warning SMS on those pre-defined numbers.

1) Tracker Mode

*This function requires your network support. You can set ON or OFF. When the function ON and the phone change a SIM card, the phone will sent a message to the number which you set in **Y ZONE > Mobile Tracker > Number**. The message will tell you that which number is using your phone now. The default password is 0000.*

2) Number

You can set Tracker number.

TIP: *This function requires your network support. When you set Tracker Mode OFF, and then you can set the tracker number you want.*

3) Change Password

You can change Tracker Password.

Games

There are several interesting games in the phone. Please refer to instructions from the menu for more details.

SETTINGS

Dual SIM Settings

You can choose one mode as your desire.

Pen Calibration

Click any position on the screen to start calibration. Then follow the prompt and operate, as this operation allows the screen to respond more quickly and correctly.

Phone Settings

Time and Date

You can set Home City, Time/Date, Format and Update with time zone.

Schedule Power On / Off

You can set the time for auto power on /off. Do turn the status on before using that function, and then the time.

Language

Select the desired language for the display text.

Writing language

Select the desired input method for the default input method.

Widget manager

Configure the Widget characteristics would appear including Widget display and Widget order

Shortcut manager

You can set shortcuts for those functions you often use.

Encoding

You can select ASCII and Windows-1252.

Display

With this function you can configure the basic status of display characteristics including Wallpaper, Menu page transition, Lock screen image, Screen auto lock, Power On Display, Power Off Display.

Themes

You can choose themes for your phone as per your choice.

Auto Update Time

It can be set to ON or OFF. (Network Service).

Flight Mode

You can set normal or flight mode.

Misc. Settings

LCD backlight: You can set the LCD backlight.

Network Settings

Please contact the network operator for the following network service.

1. Network Selection

You can choose Automatic or Manual to select the network (Auto is recommended). When you select Automatic, the phone will make the preferential selection according to the network where the SIM card belongs. When you select Manual, you are required to select the same network as the registered network with the network operator by SIM card for your use.

2. Preferences

*Select the Preferred Networks. The default network is the network where the SIM card belongs. Select **Options** to perform the following operations:*

- **Change Priority:** *Reset the selected Network Priority.*
- **Delete:** *Delete the current preferred network.*

GPRS transfer preference

You can choose Data prefer or Call prefer.

Security Settings

- **SIM Security:** *You will be asked to input the PIN. It can be configured if the PIN is correct. If SIM card is set on, you will need to input the PIN every time you switch on the power. If you enter incorrect PIN three times, you will be asked to enter PUK. PUK is used to release and modify the locked PIN. If PUK is not provided or missed, please consult your network operator.*
- **Phone security:** *You can lock or unlock the phone. Enter the password to activate or deactivate the phone lock. When the phone is locked, you will be asked to enter the phone password.*

4-8 numbers can be used for the phone password. The default phone password is 0000.

Notification Settings

Configure the Notification settings would include Notification service, Messaging, Call logs, Downloads.

Call Settings

Caller ID (Net work Service)

You can select Set By Network, Hide ID or Send ID. The default state is the Set By Network

Call Waiting

Activate, the network will notify you of a new incoming call while you have a call in progress (Net work Service).

Call Divert

This network service allows you to divert your incoming calls to another number. For details, contact your service provider.

Call Barring

Activate, this network service allows you to restrict incoming calls from your phone. For details, contact your service provider.

Advanced settings

- **Blacklist:** When this Black list is enabled, you won't receive the calls from the numbers entered in the Blacklist.
- **Whitelist:** When this white list is enabled, you will receive the calls from the numbers entered in the list.
- **Auto redial:** On, the phone will automatically redial the last dialed number after a while if you fail to connect to the number. Press Abort to end Auto Redial.
- **Call Time Display:** You can set Call Time Display as On or Off. The call time will be displayed when set on
- **Call Time Reminder:** This function prompts you to end the call in time to save the call cost. You can select Off, Single, or Periodic.
- **Auto quick end:** You can set ON/ OFF, and set a time (1~9999s) as your desire.

- **Reject by SMS:** You can set on or off.
- **Connect notice:** You can set on or off.
- **Mute SMS Content:** You can set Mute SMS content.
- **Answer mode:** If **Any key** is selected, you can press any key to answer a call.

License Manager

The License Manager function lists and shows the status of software in your phone.

Restore Factory Settings

All settings can be restored to factory settings with this function. The default password is 0000.

ALARM

The mobile phone provides 5 alarms and you can set them as your need. If you have configured an alarm, an icon indicated that you have configured the alarm will appear. No icon will show if you don't set an alarm. Select "Edit" to set the current alarm.

IMAGE VIEWER

The Image Viewer provides you with a quick view of the picture functions. Please refer to the **Photos** operations of the Camera for more details.

CALCULATOR

The calculator can add, subtract, multiply and divide.

FILE MANAGER

You can use the function to manage all types of files saved in the Phone or the Memory card.

SOUND RECORDER

You can record conversations, which can be saved to the Audio folder under File Manager.

CONNECTIVITY

Data connection SIM

You can select SIM1 or SIM2.




Data Accounts

You can use this function to edit the account related settings.

TASKS

*You can View, Add, Edit, Delete, Delete Overdue, Delete All, Jump to date, View uncompleted, Send vCalendar and Save As File as desired. Start up the **Tasks** and press OK. Press **Add** to access to add a new memo.*

FM RADIO

You can use your phone to listen to FM radio stations once the original Headset is plugged into the connector. Please press the side key to adjust music volume. Tap the () to play/stop the FM radio. Tap the ( ) to select the channels.

WORLD CLOCK

Scroll to browse every city's time zone in the world map.

SIM TOOLKIT

This service is offered as the SIM card service provided by the network operator.

FACEBOOK

Facebook is a very popular social networking site around the world giving people the power to share and make the world more open and connected. Millions of people use Facebook everyday to keep up with friends uploads an unlimited number of photos, share links

and videos, and learn more about the people they meet. Please ensure that you have GPRS settings in your phone to open Facebook. Contact your operator for GPRS settings.

Y! MESSENGER

This menu launches the Yahoo! Messenger site by clicking on the Yahoo Messenger icon. GPRS connection charges may apply.

BLUETOOTH

You can transfer data, such as music to other device using Bluetooth. Search the device and accept/transfer data. The received data is automatically stored in the directory.

BROWSER

WAP enable you tour around the Internet world easily and pleasantly.

CURRENCY CONVERTER

This feature gives you conversions of exchange rates of various currencies from your mobile phone. To do this, you simply have to enter the rate of the currency and your mobile phone will do all the computation for you.

EBOOK READER

*The E-book reader lets you read TXT files from your phone memory or memory card. To access this, go to Main **Menu** → **Ebook reader** → (choose from Memory Card / Phone Memory) → (select E-book)*

Games

There are several interesting games in the phone. Please refer to

instructions from the menu for more details.

MOVIE

*Play movies and video clips by going to **Menu** → **Movie** → (choose from selection).*

PROFILES

The phone provides five pre-defined user profiles that allow the operations of the phone to best suit the environment you are in. The profiles are General, Silent, Meeting, Outdoor, and My Style. The phone will automatically enter the headset profile if you connect the headset to your phone.

STOPWATCH

*The Stopwatch lets you measure and record time through split and lap timing. To access this feature go to **Menu**→**Stopwatch**.*

TWITTER

This menu launches the Twitter Mobile site by clicking on the Twitter icon. GPRS connection charges may apply.

UNIT CONVERTER

This mobile phone provides you with a unit converter function for the weight and length, you can convert kilogram into pound or ounce, kilometer into mile, meter or yard etc.

APPENDIX

Troubleshooting

This section lists some problems that you might meet while using your phone. If you feel that your phone do not operate normally, please reset settings first, and then follow Troubleshooting Guide. If you are still unable to solve problems, please contact the authorized service center or the store from where you purchased the phone.

| Problems | Solutions |
|--------------------------------------|--|
| <i>Can not answer or make a call</i> | <i>Make sure that the phone has been switched on. Make sure that the battery is charged. Make sure that the signal intensity is high enough. Make sure the own number function in the call setting is system preset or number sending. Make sure the line switch in call setting is the system preset line. Check whether you have set up call barring or fixed dialing or any other safety function. Check whether you have set up call diverts. Check whether you have inserted the proper SIM card correctly.</i> |
| <i>Low voice</i> | <i>Check if the volume has been set too low.</i> |
| <i>No ring</i> | <i>Check whether you have set up the " Silent " option. Check whether the ring volume is not too low Move away from a noisy place to check if you can hear the phone ringing. Check whether you have set up call diverts.</i> |
| <i>LCD</i> | <i>Check whether the contrast has been set too</i> |

| | |
|---|--|
| <i>unclear</i> | <i>low.</i> |
| <i>T-Flash card detect slowly</i> | <i>Format your T-Flash card with your phone. Note: To protect your files from getting lost, please backup the important information into the safe place before you formatting card.</i> |

| <i>Technical Specification Of W707</i> | |
|---|---|
| <i>GSM Network</i> | <i>900/1800MHz</i> |
| <i>Display Size</i> | <i>8.1cm(3.2 inches)</i> |
| <i>Battery Capacity</i> | <i>1000mAh</i> |
| <i>Charger Specification</i> | <i>Input : AC100-300V/50-60Hz Output : DC 5V/500mA</i> |
| <i>SAR Value</i> | <i>0.765 W/kg</i> |
| <i>Camera Resolution</i> | <i>1.3 Mega Pixel</i> |

Warranty Card

Welcome!

Congratulations on your new Wynncom Mobile Purchase.

Limited Warranty:

Wynn Telecom Ltd. provides this Limited Warranty for your Mobile phone and original accessory delivered with your mobile Phone.

Our Warranty:

Subject to the conditions of the limited Warranty, Wynn Telecom Ltd. warrant this product to be free from defects in design, material and workmanship at the time of its original purchase by a consumer, and for a subsequent period of:

- One (1) year for Transceiver*
- Six (6) months for Charger, Battery, Headset and Data Cable*

To get maximum use of your new product, we recommend you to:

- . Read the guideline for safe and efficient use in the user manual.*
- . Keep your original receipt; you will need it for warranty repair claims.*
- . Present this Warranty Certificate along with original proof of purchase having details of purchase & Serial No. whenever you require any warranty services.*
- . Read the terms and conditions of your handset warranty in the user manual provided with the Product.*

*In the unlikely event if the product needs service, please visit the nearest Wynncom **Authorized Care** Centre.*

For more information on Wynncom Products and Services, please visit our Website: www.wynncom.net or email us at: customercare@wynncom.net

Or call at: 1800-102-9299 between 8 AM to 10 PM all days of the week.

Conditions Apply.