

W711

User Manual



Contents

Introduction.....	7
1. Phone Display	7
Getting Started.....	8
2. Basic Functions	11
3. Guide To Main Menu Function.....	11
3.1. Dial.....	13
3.2. Phonebook.....	13
3.3 Messages.....	13
3.4 Y- Zone.....	15
3.5 WAP Explorer.....	16
3.6 Music.....	16
3.7 Profiles.....	16
3.8 Photo	16
3.9 File Manager.....	16
3.10 Camera.....	16
3.11 Video Recorder.....	17
3.12 Video Player.....	17
3.13 FM Radio.....	17
3.14 Schedule FM Recording.....	18
3.15 Call Logs.....	18
3.16 Alarm.....	18
3.17 King Movie	18
3.18 Calendar.....	18
3.19 Calculator.....	18
3.20 Settings.....	18
3.21 Converter.....	19
3.22 Clock.....	20
3.23 Bluetooth.....	20
3.24 Timer	20
3.25 World Clock.....	21
3.26 To Do list	21
3.27 Stopwatch.....	21
3.28 BMI	21
3.29 Torch Light	21
3.30 Sound Recorder	21
3.31 E-book.....	21
3.32 Skybuddy.....	21
3.33 Yahoo.....	21
3.34 Facebook.....	21
3.35twitter.....	21
3.36 ebuddy.....	22
3.37 MSN.....	22
3.38 Cricinfo.....	22
3.39 Angry Bird.....	22

3.40 Fruit Ninja.....	22
3.41 Tom Cat.....	22
Technical Specification	23
Warranty Card	24



Important safety precautions

This section contains important information on the safe and efficient operation of your mobile device.
For your safety, please refer to the guideline prior to using the phone.

Note: Failure to comply with the following precautions may be dangerous or illegal.

Drive safely at all times

Do not use a hand-held phone while driving. Park the vehicle first.

Switch off the phone when refueling

Do not use the phone at a refueling point (service station) or near fuels or chemicals.

Switch off in an aircraft

Wireless phones can cause interference. Using them in an aircraft is both illegal and dangerous.

Switch off the phone near all medical equipment

Hospitals or health care facilities may be using equipment that could be sensitive to external radio frequency energy. Follow any regulations or rules in force.

Interference

All wireless phones may be subject to interference, which could affect their performance.

Be aware of special regulations

Meet any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger.

Water resistance

Your phone is not water-resistant. Keep it dry.

Sensible use

Use only in the normal position (held to the ear). Avoid unnecessary contact with the antenna when the phone is switched on.

Keep your phone away from small children

Keep the phone and all its parts, including accessories, out of the reach of small children.

Accessories and batteries

Use only approved batteries and accessories, such as headsets and PC data cables. Use of any unauthorized accessories could damage you and your phone and may be dangerous.

If jewelry, keys, beaded chains, or other conductive materials touch exposed battery terminals, this could complete an electrical circuit (short circuit), become very hot, and could cause damage or injury. Be careful when handling a charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects.

- ❖ Never use a charger or battery that is damaged in any way.
- ❖ Use the battery only for its intended purpose.
- ❖ If you use the phone near the network's base station, it uses less power. Talk and standby time are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.
- ❖ Battery charging time depends on the remaining battery charge, the type of battery, and the charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time is noticeably shorter than normal, it is time to buy a new battery.
- ❖ If left unused, a fully charged battery will discharge itself over time.
- ❖ Use only approved batteries, and recharge your battery only approved chargers. Disconnect the charger from the power source when it is not in use. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.
- ❖ Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.
- ❖ Do not leave the battery in hot or cold places because the capacity and lifetime of the battery will be reduced. Try to keep the battery at room temperature. A

phone with a hot or cold battery may not work temporarily, even when the battery is fully charged.

- ❖ Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object like a coin, clip or pen causes a direct connection between the + and – terminals of the battery (metal strips on the battery). For example, do not carry a spare battery in a pocket or bag where the battery may contact metal objects. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting.
- ❖ Dispose of used batteries in accordance with local regulations. Always recycle. Do not dispose of batteries in a fire.
- ❖ To ensure while using the phone please do not get the battery charge.
- ❖ During the course of charging, it is normal to find the battery and the phone slightly heat-up. The Phone will automatically protect itself when battery temperature rises so as to control temperature variation.

Note: This phone is just charged 50%. Please use up the power and recharge it fully. This is the case with the second recharge. After three repetition, the battery can achieve it's best performance condition.

Operating Environment

Remember to follow any special regulations in force in the area you are in, and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger. When connecting the phone or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the equipment should only be used in the normal operating position (held to your ear with the antenna pointing over your shoulder).

Extreme heat or cold, Avoid temperatures below -10°C/14°F or above 45°C/113°F

Electronic devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone. Consult the manufacturer to discuss alternatives.

Pacemakers

Pacemaker manufacturers recommend that a minimum distance of 15 cm (6 inches) be maintained between a wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research and recommendations of Wireless Technology Research. If you have any reason to suspect that interference is taking place, switch you're your phone immediately.

Hearing aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may wish to consult your hearing aid manufacturer to discuss alternatives.

SIM AT Service

SIM Card provides several value-added services.

These functions will only display and work on the menu of the phone when your SIM card is supported. The content and the terms of the function lists will depend on your network service provider.

Please contact your network service provider (a network operator or the service provider) in regards with availability of any services related to the SIM card, application information and the costs.

Other medical devices

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Switch off your phone in health care facilities when regulations posted in these areas instruct you to do so.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted facilities

Switch off your phone in any facility where posted notices require you to do so.

Potentially explosive environments

Switch off your phone when in any area with a potentially explosive atmosphere, and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch off the phone while at a refueling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants, or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often but not always clearly marked. They include the areas below decks on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas, such as propane or butane, areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

Emergency calls

This phone, like any wireless phone, operates using radio signals, wireless, and landline networks as well as user-programmed functions, which cannot guarantee connection in all conditions. Therefore, you should never rely solely on any wireless phone for essential communications like medical emergencies. To make or receive calls, the phone must be switched on and in a service area with adequate signal strength. Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

To make an emergency call: **(For India example: 112,911,100,101,102)**

1. Key in the emergency number for your present location. Emergency numbers may vary by location.

2. Press the Send Key.

3. Inform your location. Do not end the call until given permission to do so.

Certain features like Call Barring may need to be deactivated before you can make an emergency call. Consult this document and your local cellular service provider.

Other important safety information

- ❖ Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.
- ❖ Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.
- ❖ Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the phone, its parts, or accessories.
- ❖ For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. Improperly installed wireless equipment could result in serious injury if the air bag inflates.
- ❖ Switch off your phone before boarding an aircraft. It is dangerous and illegal to use wireless phones in an aircraft because they can interfere with the operation of the aircraft.
- ❖ Failure to observe these instructions may lead to the suspension or denial of telephone services to the offender, or legal action, or both.

Wynncom Authorized Care Centre

Only qualified service personnel may repair your phone.

It is highly recommended to have a repair service by qualified service personnel.

Use only the approved accessories and batteries.

Note: Please use the original components in order to achieve the best use of effects, as the use of non-original components may cause damage to the machinery, in such case company shall not be responsible.

Introduction

1. Phone Display



1. Power on/off Button
2. USB Port
3. Headset jack- 3.5 mm
4. Access Phonebook
5. Back key
6. Dedicated key for Home Menu
7. Home Menu
8. Shortcut
9. Receive
10. Dedicated Camera Key
- 11 Volume key
- 12.Camera
13. Flash Light
- 14 Battery cover

 
Getting Started

Please read the safety instructions in the "Safety Information and Notices" section before use.

1. Inserting the SIM Card and the battery


1.1 Remove the back cover

Make sure the phone is switched off. You need to remove the back cover of your phone before you can insert the SIM card. Hold the phone with the front facing downwards, pull the battery cover downwards and lift the cover upwards to remove it.

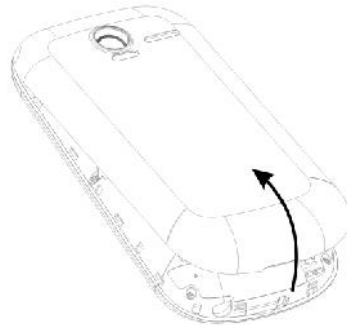

1.2 Remove the battery

 Put your finger on the black holder located at the bottom of the battery slot and lifts the battery up to remove it.

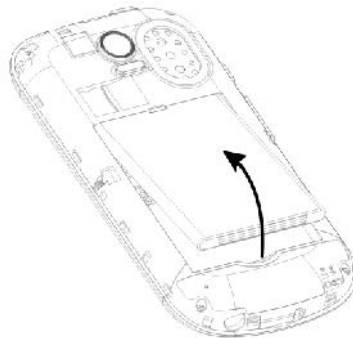

1.3 Insert the SIM card

Make sure that the clipped corner of the SIM card is facing the correct direction (clipped corner at top left) and the metallic contacts are facing downwards. Slide the SIM card into the card slot until it stops. The slot for each network is indicated by 'SIM1' and "SIM2' at the top of the slot.



1.4 Install the battery

With the metallic contacts of the battery facing the metallic contacts in the battery slot, press the battery up until it locks into place.



1.5 Install the back cover

Align and hook the back cover to the top of the battery slot and then push the back cover upwards until it locks into place.



2. Inserting a Micro SD (External Memory) Card

Pull backward micro SD card cover. Then, put inside the micro SD card against the groove with the golden metal contact facing downward.



3. Turning the phone on

To turn the phone on, press and hold the Power on/off key on the top of the Phone. If you have already enabled the Sim Lock function then enter the PIN code (the 4 to 8 digit code of your SIM card). It is preconfigured and provided to you by your network operator or retailer. If you enter an incorrect PIN code 3 times in succession, your SIM card will be locked. To unlock it, you must obtain the PUK code from your network operator.

4. Charging the Battery

Ensure the battery is inserted in the handset. To charge the battery, plug in the charger connector at the top of your phone (USB interface) and then plug the other end into an AC power socket. The battery symbol indicates the charging status. It takes about 4 hours to fully charge the battery.

Disconnect the charger from the phone.

Disconnect the charger from the AC power socket.

Note: If the battery is powerless, the battery icon will reappear after a few minutes of charging.

5. Important Password

Phone lock password is set as 0000 by default.

6. Keypad Lock and Unlock

Menu > Settings > Security setup > Auto keypad lock to select the time for keypad lock.

In idle mode, if the time expires, the keypad will be locked automatically.


7. Keys in the Dialing interface

In idle press Dial key to enter dialing screen.

8. Transfer files to the Micro SD (External Memory) card

Insert your Micro SD card into the phone, and then connect the phone to the USB port of a PC. When the phone is off, the PC will auto detect the phone as a removable disk. You can access the Micro SD card memory now.

Download or upload the files to Micro SD card.

When the transfer is finished, please make sure that you safely remove the card reader by clicking .

Finally, insert your Micro SD card into your cellular phone, you can view the files in Menu >Tools> File manager > Memory card.

Modem: You can use your phone as Internet Modem.

Webcam: You can use your phone as webcam

PC Sync Tool : You can sync you mobile with PC .

Text Entry

1. Input Method

Your cellular phone supports several input methods, which include:

QWERTY Input

Numeric Input

1.1 Changing the input modes

During text editing, you can **tap 12#** For switching input from alphabet mode to numeric mode and **tap EN** to change the input mode from upper case to lower case .

1.2 Entering Symbols

In any input mode, tap **12#** to open the symbols keyboard on screen; and then tap desired symbol to input symbols.

Touch editor using following five commonly used icon function respectively is:



: Input space characters;

1.3 Headset Connection

When you insert headset, mobile phone will automatically switch to earphone mode. You can listen to music or can talk over phone wearing headset.

1.4 Instruction For Touch Screen Calibration

- a. Long press Side Volume Down key ,following display will appear :

 
- b. Select Calibration , following display will be appear:



- c. To Calibrate the display ,precisely press on the “+” sign as per the sequence given below in reference pic:



- d. Receive the message “Calibration finished” , to ensure calibration is

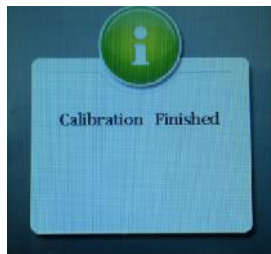

done .

1.5 Security Password

—PIN code

PIN code (Personal Identity Number) prevents unauthorized use of your phone. The PIN code is provided by your network operator with the SIM card.

If you enter the wrong code three times in a row, the PIN code will be blocked. To unblock the PIN code, you need to enter your PUK. Your PUK is provided by your network operator.


—Phone Lock

Activate/Modify/Deactivate phone lock (the length of the password is 4-8 digital numbers). If you activate the "Phone lock", you need to enter the password each time you turn on the phone. If you want to modify or deactivate "Phone lock", enter this function to set. By default password will be 0000.

2. Basic Functions

2.1 Making a call

As in dual SIM mode, before dialing interface may start by clicking the dial-up

icon  to choose SIM 1 / 2 and then tap number to dial out. If you're making a long distance call, add the area code preceding the telephone number. Access “options” to do more operations.

2.2 Emergency Service

You can dial an emergency call without the SIM card. Contact your service provider to get the emergency call number.

2.3 Answering a Call

When you receive a call, the phone will ring or vibrate and will display an incoming call indicator. During the calling, click "Options" to enter: Speaker, Mute, Hold, End call, Volume, DTMF, Record, Phonebook, Messages and Call history. Tap "Dial" to start a new call.

3. Guide to main menu operations

User Can access the Dial-up interface, main menu , camera & message directly without entering the main menu on standby interface.

3.1 Dial

Enter dial-up screen to make call from SIM 1/SIM2 or save contact and send message.

You can also dial number directly from Call Logs or search number from contact.

3.2 Phonebook

This function could help you browse the Phonebook, store, edit and delete the names and phone numbers in the phone and SIM card. To facilitate the management of the records, this phone sets the group function, collecting the similar items into a group. The storage capacity of the SIM card varies.

On the standby interface, press right soft key to enter the interface of the Phonebook. When the record of the Phonebook is not empty, press left soft key for the following operation

The Options are as follows:

1. View – To view contact name and number.
2. Call- To Call directly on selected number.
3. Send-To sends text message or MMS on selected number.
4. Add New- Add New Contact to Phone/SIM1/SIM2.
5. Mark: Mark one /all contact.
6. Copy to SIM: Copy the contact to SIM1/SIM2.
7. Assign Group: Assign the number to particular group/Blacklist.
8. vCard: Send the vCard/Import vCard/Take backup.
9. Additional Search:You can search the number by alphabet and by number.
10. Memory Details: Check the status of memory.
11. Blacklist: You may also put contacts into the Blacklist to block them.

3.3 Message

3.3.1 Create new

SMS

Enter editing screen, you can input words via virtual keyboard. When finishing edit, you can pass the options menu to achieve the following operations: add recipients, save to draft, insert, and convert to MMS, send options, along with input method.

MMS

This function can begin a new MMS. After completing the content and add recipient, click options to access more operations.

3.3.2 Inbox

You can check received messages in Inbox. Select one message and click "Options":

- Reply: Reply SMS or MMS to the sender
- Forward: Forward this message to another recipient.
- Delete: Delete the message
- Call Sender: Make a call to sender directly.
- Save Sender: Save sender to phonebook.

—Copy to phone/SIM

—View details

3.3.3 Draft Box

You can save unsent and edit incomplete messages in draft box.

Select one message and click options as following:

—Add recipient: add recipient from phonebook or enter contact manually.

—Save to draft

—Insert: insert picture, audio, video

—Convert to MMS

—Send options:

—Input menu: include insert symbol, copy and input method.

After you select to read a message, you will enter the message editor.

3.3.4 Out Box

To save the messages sent unsuccessfully.

3.3.5 Sent Box

To save the message that send successfully.

3.3.6 Schedule SMS

You can schedule SMS for specified date and time.

3.3.7 Templates

You can preset frequently used sentences here to avoid repeated input when writing a message.

3.3.8 Voice Mail

Voicemail messages are stored on the network. You can listen to your voicemail messages by calling your network voicemail phone number. You will be asked to enter your mailbox number when you use it for the first time.

3.3.9 Cell Broadcast

The area to services sends different kinds of messages. Change the settings of this service and enquire the area info by using this function.

Reception: Choose to Enable /Disable the broadcasting.

Channel list: Display the channel list.

Auto Display: Set it to Enable /Disable.

3.3.10 Settings

Message Settings :

There are eight options: SIM 1/SIM2 Message Service center number, validity period, Message Type, Delivery report, Direct Reply, Inbox Location, Save sent message.

--SIM1 Service Center No. : Display the Service center number of SIM1.

--SIM2 Service Center No. : Display the Service center number of SIM2.

--Validity period: You can set the validity period of the message for 1 hour, 6 hours, 24 hours, 72 hours, 1 week and the maximum value.

--Message Type: Choose the Type of message text, Paging, Email, Fax.

--Delivery report: Make it on/off.

--Direct Reply: You can make the reply path on/off.

--Inbox Location: You can choose the storage position at SIM card or phone.

--Save Sent message: You can make the Backup in sent box on /off.

MMS Settings

--Page Setting: You can set the duration/Text.

-- Sending option:

--Multimedia Retrieval: When this function is on, after the MMS is successfully received, the user

will receive a delivery report.

--Allow Anonymous message: When this function is on, after the receiver reads your MMS, the sender's name and number are hidden. This function requires the network support.

--Receive advertisement: If this function is on, the advertisements in MMS are allowed.

-- Delivery Report: You could set it on /off.

--Validity period: Set the validity period of the MMS: 12 hours, 1 day, 1 week and maximum period

--Save Sent Message: You could set it on to save the sent message and vice-versa..

3.3.10 Memory Status

You can find memory status for SMS and MMS.

3.4 Y-ZONE

- **Smart Privacy Protection:** You can set protection for phonebook, call history, message and file manager. The default password is **0000**.
- **Smart Auto call record:**
This setting will be ON by default
By this setting all your calls will be recorded automatically and will be saved in your memory card
- **Mobile Tracker:** With this function you can track your mobile phone using a password if lost or stolen. The phone can be tracked only if it is switched on and in use. You must enter a mobile phone number of your choice to act as a tracking number. Also, you can set a 4 digit password of your choice to activate this feature. This protects your phone from unauthorised usage.
- **Games:** You Wynncom W711is provided with five games include: Push Box , Sudoku ,Angry Bird , Tom Cat ,Fruit Ninja
Note: you should take back up of the fat files of these games, so that if your memory card will be formatted, you can put that files again in the card .User can download the necessary file to play Angry Bird , Tom Cat and Fruit Ninja in your W711 from our website : www.wynncom.net
- **NES Games :** .NES format games save to folder /" Games" path ,then application \NES game can be list.In list you can choose the game to play .
- **Ebuddy:** EBuddy is an IM aggregator. Support for MSN, MySpace, ICQ and many other chatting engines with convenient use, then there is no need for the mobile phone to be installed on a pile of chat engines .
- **Cricinfo:** Jump to Cricinfo website directly.
- **Hungama:** You can sign in to hungama by the direct link provided in you mobile phone. This will work only when GPRS service is activated in your SIM.

- **Gmail:** Enter the registered account and password information, you can use the phone for gmail chat, this feature requires network support.
- **STK:** Short for SIM Toolkit, it is a standard for providing value added services and e-commerce over the GSM networks, using the phone to make the necessary transactions. Services depend on your network service provider.






3.5 Wap Explorer

You may browse WAP websites. Make sure you have enabled GPRS network.

3.6 Music

Upon entering the Music Player, Playlist will be displayed. Through All Music you can look up all the music files.

After you have selected music from the Playlist, you will enter the Music Player screen and you can look up the album, name of the song, artist, play time, item number, etc.

You can tap  to Pause and play, tap  to previous, tap  to next,  to increase volume,  decrease volume.

3.7 Profiles

Seven Profiles are available: General Mode, Meeting Mode, Outdoor Mode, Silent Mode, Personal Mode, Headset Mode, Bluetooth mode and Power saving. You can select any of these Profiles or customize your own profile by adjusting the parameters of the Profile. Restore to default settings by using the Restore option.

3.8 Photo

Upon entering the Photo Album, the photos are listed as thumbnails. Several functions are available by Options menu:

View: Preview the selected image.

Set as: Set as Wallpaper, Contact head shot and screen saver.

Send: Send by MMS or Bluetooth.

Rename: Rename the selected image.

Delete: Delete the selected image.

Mark: Mark the selected image or all images.

Slideshow: Display by slideshow.

View detail: Look up the name, file type, size, date, and stored place

3.9 File Manager




The File Manager lists the all the files stored in memory card. You can open folder, rename, delete, create folder, and view memory status.

3.10 Camera

Before using camera, please confirm your memory has inserted, pictures will be on JPG format stored in your memory within.






Enter cameras, camera preview interface will display. you can directly tap to take picture. You can also click other ICONS to go through various different operations.

 Enter setting function

-  Enter photos browsing interface
-  Switching to video recorder
-  Back







3.11 Video Recorder

Before using video recorder, make sure you have inserted a memory card. The video will be saved in 3GP format to your memory card. After entering the Camcorder, the Camcorder Preview screen will appear with status icons. Click

-  To start video record.
-  Enter setting function
-  Enter video preview interface
-  Switching to camera
-  Back

3.12 Video Player

Enter the Video Player and the Video file list is displayed. Select the video and you can do the following:








You can tap  to Pause and play, click  to previous,  to next,  to volume up,  to volume down,  to full screen on/off.

Several functions are available by Options menu: Stop/Play, Full screen, Send, Delete, and Details.

3.13 FM Radio

Your Phone is with FM telescopic antenna, that means if you don't have earphones to listen at any time, just pull out the antenna and listen to FM radio .

Enter the radio interface; you can click on the icon with following features:

-  Power
-  Forward search
-  Back search
-  Increased volume
-  Reduce the volume
-  Will present channel join my channel
-  Background broadcast



Drag the slider switching channel.

You can also achieve the following operating through the Options menu:

Radio off: to set FM on or off.

My Channel: You can find all channels that you search.

Add to my channel: the current channel Add to my channel.

Search: to search channels

View Record files: see your recorded files

Settings :

Background play: On, Off.

Recording format: By here you can change the recording format

In my channel options, you can achieve the following: Play, edit, remove, and remove all.

3.14 FM Schedule Recording

You can use this feature to record to the radio. There are fix groups of schedule recording. Before use to insert a matching headset.

3.15 Call Logs

Call Logs lists all recent calls including all calls, missed calls, dialed calls and received calls. Options are:

View: View the call log

- **Call:** Dial the selected number
- **Send:** Send SMS or MMS to the selected number.
- **Save:** Save the selected number to SIM or phone.
- **Delete:** Delete selected entry
- **Delete all:** Delete all entries, all entries of Card 1 or all entries of Card 2
- **Call timer:** Last Call, Received calls, Dialed calls, Reset (phone password is required)
- **Add to Blacklist:** add the selected number to blacklist and block that user.
- **Call cost:** see the cost of your calls

3.16 Alarm

You can set up to 6 alarm clocks. The Alarm Clock settings include: Title, Time, Status, Frequency and Ringtone. The frequency settings are: Once, Daily, Monday, Tuesday, Wednesday, Thursday, Friday, Saturday and Sunday. The Alarm Clock function is on even when the phone is powered off.

Alarm Dialog will be displayed when the alarm goes off. You can stop the alarm or snooze for 5 minutes.

3.17 King Movie

You can use this function for watching Movies or videos in a compressed format.

Note that this player supports only “.kmv” format.

3.18 Calendar

It shows the present date. Move cursor to select date. Enter calendar after pressing the option menu to create new event, view mode, event list, go to date, setting, delete all, and search event and memory status.

3.19 Calculator

A basic calculator is provided.

3.20 Settings

Enter Settings; there are General, Phone and Connection Settings.

Note: If only one SIM card is installed, your phone will automatically hide the dual card related settings.

3.20.1 General

Personalization

Personal settings include Display, Display language.

- **Time and date**

You can set the time, Time zone, Second time, Time format, date, date format.

- **Power on/off**

You can set the time and condition for the phone to automatically power on/off itself.

- **Information**

You can look up your phone IMEI, Memory details, Software version in this menu.

- **Security**

You can set Phone lock, SIM lock, and Auto keypad lock here.

SIM1/SIM2 PIN code: Change PIN1 and PIN2 passwords. You need to have the default PIN numbers from the network carrier.

1. **Phone lock:** Turn the phone lock on/off and edit your phone password.
Auto
2. **Keypad lock:** You can lock your phone manually, or select auto lock for the phone to lock its screen and keypad automatically after some idle time in the Standby mode. To lock/unlock your phone in idle, press **End key+Send key**.
3. **SMS Blacklist:** Block unwanted messages by keyword or phone number.
4. **Private data protection:** You can set protection for phonebook, call history, message and file manager. The default password is **0000**.

- **Restore settings**

Restore you phone to the factory or default settings through this option. You need to input your phone password (default is **0000**) for this operation.

All data will be deleted when your phone is restored to its factory settings.

3.20.2 Phone

Call settings

- **Call waiting**

You can turn the call waiting on/off and look up the current status. When the call waiting is turned off and your phone is busy, all other incoming calls will hear the busy ring tone.

- **Caller identity**

You can set whether or not to send your phone number with out-going calls.

- **Any key answer**

You can set whether or not to use any key to answer the phone.

- **Minute Reminder**

You can set the duration of the call for the phone to remind you when the time is reached.

- **Auto redial**

You can set whether or not to auto redial the number last called that was

- unanswered.
- **Cost settings**
Set the currency, unit cost and quota.
- **User group**
Set user groups.
- **Answer Machine**
You can setting the greeting voice, auto answer after ring ,voice box and storage ;
If you open this function, when you have call , the opposite can hear the greeting voice.
- **Call divert**
Set the divert methods for the following different types of calls: all, voicemail, data, fax. The divert methods are: divert all, when busy, when no answer, when no service, when power-off, cancel all divert.
- **Call barring**
Set the block methods for the following different types of calls: all, voicemail, data, fax and SMS. Block options are: all outgoing, international outgoing, international outgoing while abroad, all incoming, incoming while abroad, cancel all barring, change password.
- **Network settings**
You can set your priority network, carrier, and airplane mode.
- **Switch mode**
You can set dual mode, enable SIM1 only and enable SIM2 only, or disable SIM and Flight mode.
- **Default SIM**
You can select SIM 1 or SIM 2 as default SIM.

3.20.3 Connection settings

You can set Data accounts, Internet Explorer, MMS settings.

3.21 Converter

This phone provides unit conversion types are: exchange rate conversion, energy, speed, quality, area, volume, power, time, pressure, length, temperature, calendar conversion

3.22 Clock

To Set the clock time.

3.23 Bluetooth

You may do further functions for your Bluetooth settings such as: Turn on/off, Paired devices, Search devices, Settings. Activate the Bluetooth, select "Search Device" to search for the Bluetooth device within the effective range. Enter the agreed password to establish a match between devices before data transfer.

3.24 Timer

The phone's built-countdown function. Set a time, you can click on the icon

located in the center of the bottom of the screen starts to count down the time to post, the phone will automatically prompt.

3.25 World clock

World clock is provided with a world map. You can tap Left and Right to switch to the next time zone. The local time of the city on the map is displayed.

3.26 To Do List

You can add a note to remind important issue with alarm.

3.27 Stopwatch

Stopwatch provides 20 sets of entries with both total and lap timer functions.

3.28 BMI

To access personal body mass index.

3.29 Torch Light

You can set torch to on or off.

3.30 Sound Recorder

Enter voice recorder, click start to record, and click Stop to stop the recording. After finishing recording, you can play back immediately, or through the options menu to achieve the following: new, send, set, rename, delete, and view the file.

New: Start a new recording

Send: send by MMS or Bluetooth, or other contact devices.

Set: set to call ringtones, a contact phone ring tones, alarm clock.

Rename: To rename the picture

Delete: Delete pictures

View Files: View all recordings

You can also change the recording format to MP3 or WAV.

3.31 E-book

You can read txt files saved in T – Flash card.

3.32 skybuddy

you can jump to skybuddy website and login for facebook , yahoo ,twitter chat.

3.33 Yahoo

Same as described under Y-ZONE.

3.34 Facebook

You can sign in to Facebook by the direct link provided in you mobile phone. This will work only when GPRS service is activated in your SIM.

3.35 Twitter

You can sign in to twitter by the direct link provided in you mobile phone. This will work only when GPRS service is activated in your SIM.

3.36 Ebuddy

Same as described under Y-ZONE.

3.37 MSN

Same as described under Y-ZONE.

3.38 Cricinfo

Same as described under Y-ZONE.

3.39 Angry bird

Please copy resource file to root of T-Flash card under funboxctrl.

3.40 Fruit Ninza

Please copy resource file to root of T-Flash card under funboxctrl.

3.41 Tom Cat

Please copy resource file to root of T- Flash card under funboxctrl.

Technical Specification Of W711

GSM Network	900/1800MHz
Display Size	8.9Cm
Battery Capacity	1200mAh
Charger Specification	Input : AC100-300V/50-60Hz Output : DC 5V/500mA
SAR Value	0.813W/kg
Camera Resolution	1.3Mega Pixel With Flash

Limited Warranty Terms and Conditions



Wynncom Digital Devices Pvt. Ltd., (hereinafter referred to as the 'Company') provides this Limited Warranty to the purchaser of the Wynncom mobile handset and original accessories (Battery, Charger, Hands free etc.) supplied in the sales package (hereinafter collectively referred to as the 'Product').

Warranty period

Subject to the conditions specified herein, the Company warrants the Product to be free from defects in design, material and workmanship at the time of its original purchase and for a subsequent period of one year for the Transceiver, six months for the Accessories (Charger/ Battery/ Hands free/ Data cable); all periods commencing from the date of purchase.

How to get warranty service

To obtain warranty services, the purchaser needs to bring the Product to the Company's Authorized Care Centre at his/her own cost, along with the original proof of purchase, bearing unaltered/ unmodified date of purchase and IMEI number.

The Company's Limited Warranty extends only to the original purchaser/ end user of the Product, and is not assignable or transferable to a subsequent purchaser/ end user

Provisions and Exclusions

This Limited Warranty does not cover a) normal wear and tear; b) defects caused by improper handling; c) defects or damages caused by misuse of the Product, including use that is contrary to the instructions provided by the Company set out in the Product's User's Manual; and/or d) other acts beyond the reasonable control of the Company (including but not limited to Force Majeure, Lightening, Voltage surge, etc.)

During the warranty period, the Company or its Authorized Care Centre may repair or replace at its sole discretion, any defective Product(s) or part(s) thereof with new or factory rebuilt/ re-conditioned item(s) and return the Product to the purchaser in working condition. All replaced part(s)/ item(s) shall become the property of the Company.

The repaired or replaced part(s) or item(s) shall stand warranted only for the remaining warranty period since the date of purchase.

The warranty shall cease to exist in the absence of the original proof of purchase, or in case the original serial number/ IMEI is removed, modified or obliterated, or if the Product is damaged due to liquid spillage, exposure to moisture, exposure to extreme thermal or environmental conditions, or if there is a physical damage to the Product, or if the Product was found tampered/ found opened, modified or repaired by anyone other than the Company's Authorized Care Centre.

The warranty terms are subject to change without prior notice.

Except for any liability that cannot be excluded by law, the Company (including its related entities and their respective officers, employees and agents) excludes all liabilities (including negligence), for any loss of profit, business revenue, goodwill, anticipated savings or data, personal injury; or any loss or damage (including loss of opportunity); whether direct, indirect, special or consequential, arising in any way out of the Product.

All disputes are subject to the jurisdiction of courts of Delhi only.

Wynncom Care – 1800 102 9299
9.30 AM to 6.30 PM (Mon-Sat)

Email us at customer@wynncom.net
Visit us at www.wynncom.net