

W716

User Manual



Note: The content of the manual is correct when it is released, but **“Wynncom Digital Devices Pvt. Ltd”** reserves the right to modify the technical specification without additional notification. Some content in the manual may be different from the mobile phone, as the accessory software, SIM card or service varies by providers.

Table of Contents

Important safety precautions	4
<i>Introduction</i>	7
1. Phone Display	7
2. Getting Started	8
3. Call Function	11
4.1 Dialer	14
4.2 Phonebook	11
4.3 Messages	14
<i>Conversations/ Inbox</i>	14
<i>Drafts</i>	14
<i>Schedule SMS</i>	14
<i>Broadcast Message</i>	14
<i>Templates</i>	14
<i>Message Settings</i>	15
<i>SMS Backup</i>	15
<i>SMS Import</i>	15
4.4 CALENDAR	15
4.5 ALARM	15
4.6 CALL LOGS	15
<i>All Calls</i>	15
<i>Dialed Calls</i>	15
<i>Missed Calls</i>	16
<i>Received Calls</i>	16
4.7 SETTINGS	16
<i>Dual SIM Settings</i>	16
<i>Pen Calibration</i>	16
<i>Phone Settings</i>	16
<i>Network Settings</i>	17
<i>Security Settings</i>	17
<i>Notification Settings</i>	17
<i>Call Settings</i>	17

<i>Restore Factory Settings</i>	18
<i>Sound Effect</i>	18
4.8 Browser.....	18
4.9 IMAGE VIEWER.....	18
4.10 CALCULATOR	18
4.11 FILE MANAGER	18
4.12 SOUND RECORDER	19
4.13 CONNECTIVITY.....	19
<i>Data connection SIM</i>	19
<i>Data Accounts</i>	19
4.14TASKS.....	19
4.15 FM RADIO.....	19
4.16 WORLD CLOCK.....	19
4.17SIM TOOLKIT	19
4.18 Screen Lock Style.....	19
4.19 BLUETOOTH.....	19
4.20 Camera	19
4.21 EBOOK READER	20
4.22 Fun	20
4.23 Music.....	20
4.24Notes.....	20
4.25 Profiles	20
4.26 Switch Theme.....	20
4.27 Video Player	21
4.28 Video recorder	21
4.29 Y Zone.....	21
Auto call record.....	21
Privacy Protection	21
Mobile Tracker.....	21
4.30Angry Bird.....	22
4.31 Egypt Password	22
4.32 FACEBOOK	22
4.31 Kin Combat.....	22
4.33 Y! MESSENGER	22
4.34 Twitter.....	22



Important safety precautions

This section contains important information on the safe and efficient operation of your mobile device.

For your safety, please refer to the guideline prior to using the phone.

Note: Failure to comply with the following precautions may be dangerous or illegal.

Drive safely at all times

Do not use a hand-held phone while driving. Park the vehicle first.

Switch off the phone when refueling

Do not use the phone at a refueling point (service station) or near fuels or chemicals.

Switch off in an aircraft

Wireless phones can cause interference. Using them in an aircraft is both illegal and dangerous.

Switch off the phone near all medical equipment

Hospitals or health care facilities may be using equipment that could be sensitive to external radio frequency energy. Follow any regulations or rules in force.

Interference

All wireless phones may be subject to interference, which could affect their performance.

Be aware of special regulations

Meet any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger.

Water resistance

Your phone is not water-resistant. Keep it dry.

Sensible use

Use only in the normal position (held to the ear). Avoid unnecessary contact with the antenna when the phone is switched on.

Keep your phone away from small children

Keep the phone and all its parts, including accessories, out of the reach of small children.

Accessories and batteries

Use only approved batteries and accessories, such as headsets and PC data cables. Use of any unauthorized accessories could damage you and your phone and may be dangerous.

If jewelry, keys, beaded chains, or other conductive materials touch exposed battery terminals, this could complete an electrical circuit (short circuit), become very hot, and could cause damage or injury. Be careful when handling a charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects.

- ❖ Never use a charger or battery that is damaged in any way.
- ❖ Use the battery only for its intended purpose.
- ❖ If you use the phone near the network's base station, it uses less power. Talk and standby time are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.
- ❖ Battery charging time depends on the remaining battery charge, the type of battery, and the charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time is noticeably shorter than normal, it is time to buy a new battery.
- ❖ If left unused, a fully charged battery will discharge itself over time.
- ❖ Use only approved batteries, and recharge your battery only approved chargers. Disconnect the charger from the power source when it is not in use.

Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.

- ❖ Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.
- ❖ Do not leave the battery in hot or cold places because the capacity and lifetime of the battery will be reduced. Try to keep the battery at room temperature. A phone with a hot or cold battery may not work temporarily, even when the battery is fully charged.
- ❖ Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object like a coin, clip or pen causes a direct connection between the + and – terminals of the battery (metal strips on the battery). For example, do not carry a spare battery in a pocket or bag where the battery may contact metal objects. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting.
- ❖ Dispose of used batteries in accordance with local regulations. Always recycle. Do not dispose of batteries in a fire.
- ❖ To ensure while using the phone please do not get the battery charge.
- ❖ During the course of charging, it is normal to find the battery and the phone slightly heat-up. The Phone will automatically protect itself when battery temperature rises so as to control temperature variation.

Note: This phone is charged 50%. Please charge the phone completely with AC Power supply.

Operating Environment

Remember to follow any special regulations in force in the area you are in, and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger. When connecting the phone or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the equipment should only be used in the normal operating position (held to your ear with the antenna pointing over your shoulder).

Extreme heat or cold, Avoid temperatures below -10°C/14°F or above 45°C/113°F

Electronic devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone. Consult the manufacturer to discuss alternatives.

Pacemakers

Pacemaker manufacturers recommend that a minimum distance of 15 cm (6 inches) be maintained between a wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research and recommendations of Wireless Technology Research. If you have any reason to suspect that interference is taking place, switch you're your phone immediately.

Hearing aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may wish to consult your hearing aid manufacturer to discuss alternatives.

SIM AT Service

SIM Card provides several value-added services.

These functions will only display and work on the menu of the phone when your SIM card is supported. The content and the terms of the function lists will depend on your network service provider.

Please contact your network service provider (a network operator or the service provider) in regards with availability of any services related to the SIM card, application information and the costs.

Other medical devices

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Switch off your phone in health care facilities when regulations posted in these areas instruct you to do so.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic

systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted facilities

Switch off your phone in any facility where posted notices require you to do so.

Potentially explosive environments

Switch off your phone when in any area with a potentially explosive atmosphere, and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch off the phone while at a refueling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants, or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often but not always clearly marked. They include the areas below decks on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas, such as propane or butane, areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

Emergency calls

This phone, like any wireless phone, operates using radio signals, wireless, and landline networks as well as user-programmed functions, which cannot guarantee connection in all conditions. Therefore, you should never rely solely on any wireless phone for essential communications like medical emergencies. To make or receive calls, the phone must be switched on and in a service area with adequate signal strength. Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

To make an emergency call: **(For India example: 112,911,100,101,102)**

1. Key in the emergency number for your present location. Emergency numbers may vary by location.

2. Press the Send Key.

3. Inform your location. Do not end the call until given permission to do so.

Certain features like Call Barring may need to be deactivated before you can make an emergency call. Consult this document and your local cellular service provider.

Other important safety information

- ❖ Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.
- ❖ Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.
- ❖ Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the phone, its parts, or accessories.
- ❖ For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. Improperly installed wireless equipment could result in serious injury if the air bag inflates.
- ❖ Switch off your phone before boarding an aircraft. It is dangerous and illegal to use wireless phones in an aircraft because they can interfere with the operation of the aircraft.
- ❖ Failure to observe these instructions may lead to the suspension or denial of telephone services to the offender, or legal action, or both.

Wynncom Authorized Care Centre

Only qualified service personnel may repair your phone.

 
It is highly recommended to have a repair service by qualified service personnel.

Use only the approved accessories and batteries.

Note: Please use the original accessories in order to achieve the best use of device, as the use of non-original accessories may cause damage to the device , in such case company shall not be responsible.

Introduction

1. Phone Display

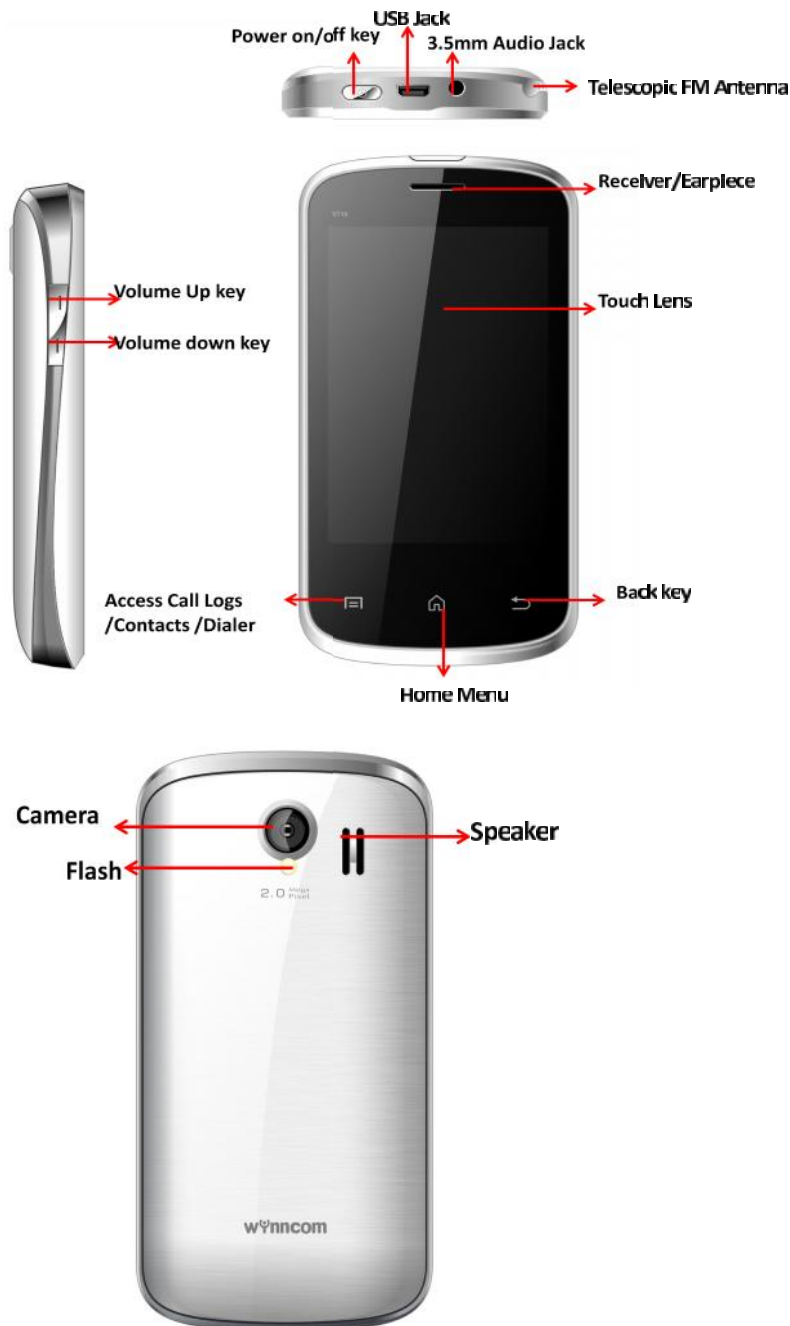

2. Getting Started

Please read the safety instructions in the "Safety Information and Notices" section before use.

2. Inserting the SIM Card and the battery

 
2.1 Remove the back cover

Make sure the phone is switched off. You need to remove the back cover of your phone before you can insert the SIM card. Hold the phone with the front facing downwards, pull the battery cover downwards and lift the cover upwards to remove it.




2.2 Remove the battery

Put your finger on the black holder located at the bottom of the battery slot and lifts the battery up to remove it.

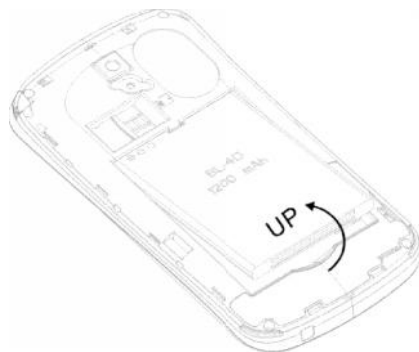

2.3 Insert the SIM card

 Make sure that the clipped corner of the SIM card is facing the correct direction (clipped corner at top left) and the metallic contacts are facing downwards. Slide the SIM card into the card slot until it stops. The slot for each network is indicated by 'SIM1' and "SIM2' at the top of the slot.

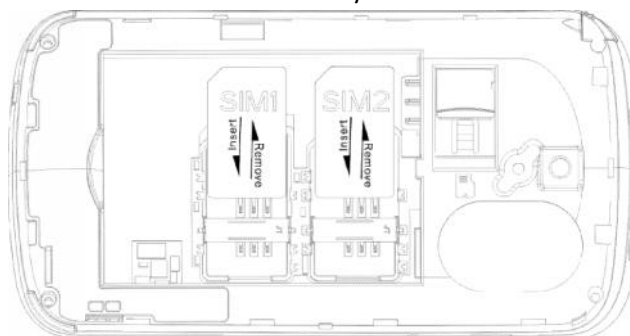

2.4 Install the battery

 
With the metallic contacts of the battery facing the metallic contacts in the battery slot, press the battery up until it locks into place.

2.5 Install the back cover

Align and hook the back cover to the top of the battery slot and then push the back cover upwards until it locks into place.

2. Inserting a Micro SD (External Memory) Card

Pull backward micro SD card cover. Then, put inside the micro SD card against the groove with the golden metal contact facing downward

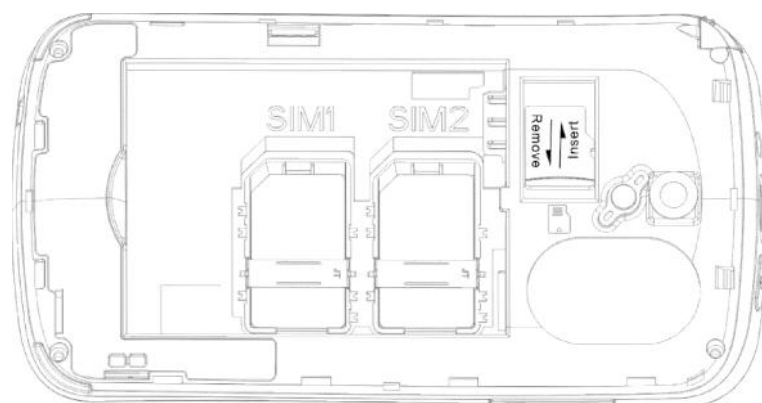


3. Turning the phone on

To turn the phone on, press and hold the Power on/off key on the top of the Phone . If you have already enabled the Sim Lock function then enter the PIN code (the 4 to 8 digit code of your SIM card). It is preconfigured and provided to you by your network operator or retailer. If you enter an incorrect PIN code 3 times in succession, your SIM card will be locked. To unlock it, you must obtain the PUK code from your network operator.

4. Charging the Battery

 Ensure the battery is inserted in the handset. To charge the battery, plug in the charger connector at the top of your phone (USB interface) and then plug the other end into an AC power socket. The battery symbol indicates the charging status. It takes about 4 hours to fully charge the battery.

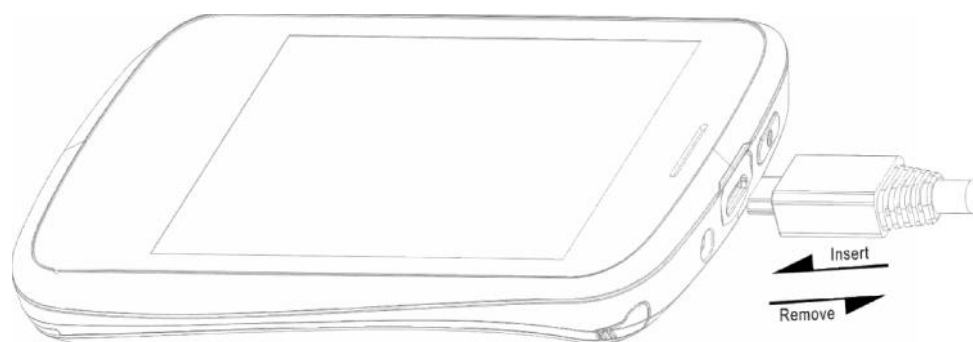

Disconnect the charger from the phone.

Disconnect the charger from the AC power socket.

Note: If the battery is powerless, the battery icon will reappear after a few minutes of charging.

5. Important Password

Phone lock password is set as 0000 by default.

6. Phone Lock

Menu > Settings > Security setup > Phone lock to select the time for keypad lock.

In idle mode, if the time expires, the keypad will be locked automatically.


7. Keys in the Dialing interface

In idle press Dial key to enter dialing screen.

8. Transfer files to the Micro SD (External Memory) card

Insert your Micro SD card into the phone, and then connect the phone to the USB port of a PC. When the phone is off, the PC will auto detect the phone as a removable disk. You can access the Micro SD card memory now.

Download or upload the files to Micro SD card.

When the transfer is finished, please make sure that you safely remove the card reader by clicking .

Finally, insert your Micro SD card into your cellular phone, you can view the files in Menu >Tools> File manager > Memory card.

Modem: You can use your phone as Internet Modem.

Webcam: You can use your phone as webcam.

Text Entry

1. Input Method

Your cellular phone supports several input methods, which include:

Smart (ABC/abc/Abc)

Multitap (ABC/abc)

Numeric Input

Hindi Input

1.1 Changing the input modes

During text editing, you can tap **ABC** or  to switch input modes .

1.2 Entering Symbols

In any input mode, tap **123** to open the symbols keyboard on screen; and then tap desired symbol to input symbols.

Touch editor using following five commonly used icon function respectively is:



: Input space characters;

1.3 Headset Connection

When you insert headset, mobile phone will automatically switch to earphone mode. You can listen to music or can talk over phone wearing headset.

1.5 Security Password

—PIN code

PIN code (Personal Identity Number) prevents unauthorized use of your phone. The PIN code is provided by your network operator with the SIM card.

If you enter the wrong code three times in a row, the PIN code will be blocked. To unblock the PIN code, you need to enter your PUK. Your PUK is provided by your network operator.

—Phone Lock

Activate/Modify/Deactivate phone lock (the length of the password is 4-8 digital numbers). If you activate the "Phone lock", you need to enter the password each time you turn on the phone. If you want to modify or deactivate "Phone lock", enter this function to set. By default password will be 0000.

3 Call Function


After the setup described in the previous sections is completed, you are ready to make and receive calls using the basic information provided in this section.

Note:


- When you are using headset, please plug/unplug the headset gently to avoid damaging the headset jack.

Phone power on/off

Power on

Press and hold  to turn on the phone. If PIN code is required, please refer to the previous section in this guide.

Power off

In Standby mode, press  to turn off the phone.



Dialer

When the network carrier is shown on the screen, your phone has entered the Standby mode and you may make or receive calls. If you have installed two SIM cards, the two network carriers will both appear on the screen.



Direct dial

Press any number key to enter the Dial screen.

Domestic call



Using the stylus, tap the number keys on the touch panel (add area code when calling long distance), and then tap the dial key  or  to make the phone call.

Note:

- In single card mode, Only a dial key activated.
- In dual card mode,  and  will dial out with respect to card 1 and card 2.
- You may also use actual keypad for entering the phone number.

The screen will show the name and phone number of the person that you are calling. After the call goes through, the screen will show a time meter in addition to the phone number and/or the name of the person you are calling.

International call

Key in the symbol "+" by tap-and-hold , followed by the desired country code and the phone number. For example, to make a call to France, tap and hold  until "+" appears then enter the country code and the phone number.

Dial from the Phonebook

Enter Phonebook from the Main Menu. You may use alphabet for quick search of the names.

Unanswered call

If you have set up Auto Redial, your phone will automatically re-dial the last number that you called but unanswered.

Answer call

When there's an incoming call, the phone will notify you through vibration, ringing, vibration plus ringing, etc. The name and phone number of the caller is shown on the screen if the network supports the service. You may answer or reject the call.

If call waiting is on, (You need to apply for this service to your network carrier.) when you are on the phone and there is another incoming call, your phone will notify you with a short tone. You may answer or reject that second call. If you choose to answer the second call, the current call will be on hold.

During a phone call

When you are on the phone, the following functions can be used:

Hold: The current call is on hold and both you and the person you are calling will not hear each other. When the call is on hold, you may pick it up again or end the call through the Options menu.

End single call: End the current call.

Open Homescreen: Enter the main menu interface.

Background call: Returns the current process of menu interface.

Mute: Close the local voice.

You may enter Dial or Phonebook screens to make a new phone call while the current phone call is still on-going.

Note:

- In the dual card mode, if one card is in use, the other card is under no-service state.
- If you want to return to the calling interface, Drop down from the top of the screen, you can select Ongoing, Click to return to the calling interface.

Emergency service

In any GSM network system, if you are in the region covered by the network, you should be able to use the emergency service even without SIM card.

On the Standby screen, press **Menu key** to enter the Main Menu. You can then access the various functions and operations.

4. Guide to main menu operations

User Can access the Dial-up interface, contacts , message directly without entering the main menu on standby interface. Please refer the standby interface as below :




4.1 Dialer

Enter dial-up screen to make call from SIM 1/SIM2 , to check call logs or save contact and send message.

4.2 Phonebook

This menu refers to the directory wherein all the contacts are stored in an alphabetical order. You can view, edit, delete, send message and perform various other functions on each contact of your phonebook.

In the standby mode, Tap  Phonebook.

Add New Contact

Go to main Menu and select phonebook

- Add the required dehingtails i.e number and contact name*

Search Contact

- Input the initials of a name to be searched.*
- Select a desired entry from the list.*


Select a contact from the phonebook and select options to perform the following

functions:

- **View:** view the detailed info of the selected contact.
- **Send Text Message:** send a message to the current contact.
- **Send Multimedia Message:** send a multimedia message to the current contact.
- **Call:** make a call.
- **Edit:** edit the current contact.
- **Delete:** delete the current contact.
- **Copy:** copy the entry to phone, to SIM.
- **Send business Card:** send the contact details as a message etc.
- **Add To Blacklist:** add the contact to the blacklist list.
- **Mark several:** you can mark several numbers.
- **Phonebook Settings:** manage the phonebook with this function.

4.3 Message

Your phone features, sending and receiving of SMS (Short Message Service) and MMS (Multimedia Message Service).

In the standby mode, tap  Messaging.

Write Message

You can create and send SMS/MMS to a particular contact using this sub-menu.

Conversations/ Inbox

Inbox sub-menu enables you to view all the messages received on your SIM.

Drafts

The created messages can be saved to drafts folder for future use. After selecting a message from the Drafts folder, select Options to edit/delete or send the saved message from the desired SIM.

Schedule SMS

The message can be schedule to be sent on particular date and time.

Broadcast Message

This network service enables you to receive all kind of text messages, such as weather reports or transportation information. There are several networks who afford this service in this world. Please consult your network operator for more reference.

Templates

Your phone is provided with some commonly used pre-defined messages. These messages can be edited, removed and send instantly.

Message Settings

1. Text message

Message Settings: You can change the SMS settings, such as profile settings, voicemail server, also, you can check the memory status and choose the preferred storage.

2. Multimedia Message

Data Account: You can set primary account and secondary account for SIM.

Common Settings:

- **Compose:** You can configure Slide Time, Creation Mode, Auto Signature, and Signature.
- **Sending:** You can configure Validity period, Delivery Report, Read Report, Priority, Delivery Time, Send and save.
- **Retrieval:** You can configure Home network, Roaming, Filters, Read report and Delivery Report.
- **Preferred Storage:** You can set phone or memory card for the preferred storage.
- **Memory Status:** You can check the usage, used memory and free memory of phone and memory card.

3. Service Message

- **Enable push:** You can set accept all, disable.
- **Service loading:** You can set prompt, auto launch and disable.

4. Conversations

You can set to on/off to enable/disable the conversation feature.

SMS Backup

You can backup your SMS.

SMS Import

You can import and export the SMS from memory card

4.4 CALENDAR

You can view and edit the memo of a specified date with this function.

4.5 ALARM

The mobile phone provides 5 alarms and you can set them as your need. If you have configured an alarm, an icon indicated that you have configured the alarm will appear. No icon will show if you don't set an alarm. Select "Edit" to set the current alarm

4.6 CALL LOGS

In the standby mode, tap Menu > Call Logs.

All Calls

With this function, you can check all recent calls.

Dialed Calls

With this function, you can check recent dialed calls. In this function, you can Delete, Save to Phone Book, Call, and so on.

Missed Calls

Scroll the Up/Down to select a missed call.

*Press the left soft key to access **Options**, and you can Delete, Save to Phone book, call, and so on.*

Received Calls

With this function, you can check recent received calls. In this function, you can Delete, Save to Phone Book, Call, and so on

4.7 SETTINGS

Dual SIM Settings

You can choose one mode as your desire.

Pen Calibration

Long Press down volume key to go to calibration mode .Click any position on the screen to start calibration. Then follow the prompt and operate, as this operation allows the screen to respond more quickly and correctly.

Phone Settings

Time and Date

You can set Home City, Time/Date, Format and Update with time zone.

Schedule Power On / Off

You can set the time for auto power on /off. Do turn the status on before using that function, and then the time.

Language

Select the desired language for the display text.

Writing language

Select the desired input method for the default input method.

Widget manager

Configure the Widget characteristics would appear including Widget display and Widget order

Shortcut manager

You can set shortcuts for those functions you often use.

Encoding

You can select ASCII and Windows-1252.

Display

With this function you can configure the basic status of display characteristics including Wallpaper, Menu page transition, Lock screen image, Screen auto lock, Power On Display, Power Off Display.

Themes

You can choose themes for your phone as per your choice.

Auto Update Time

It can be set to ON or OFF. (Network Service).

Flight Mode

You can set normal or flight mode.

Misc. Settings

LCD backlight: You can set the LCD backlight.

Network Settings

Please contact the network operator for the following network service.

1. Network Selection

You can choose Automatic or Manual to select the network (Auto is recommended). When you select Automatic, the phone will make the preferential selection according to the network where the SIM card belongs. When you select Manual, you are required to select the same network as the registered network with the network operator by SIM card for your use.

2. Preferences

*Select the Preferred Networks. The default network is the network where the SIM card belongs. Select **Options** to perform the following operations:*

- **Change Priority:** Reset the selected Network Priority.
- **Delete:** Delete the current preferred network.

GPRS transfer preference

You can choose Data prefer or Call prefer.

Security Settings

- **SIM Security:** *You will be asked to input the PIN. It can be configured if the PIN is correct. If SIM card is set on, you will need to input the PIN every time you switch on the power. If you enter incorrect PIN three times, you will be asked to enter PUK. PUK is used to release and modify the locked PIN. If PUK is not provided or missed, please consult your network operator.*
- **Phone security:** *You can lock or unlock the phone. Enter the password to activate or deactivate the phone lock. When the phone is locked, you will be asked to enter the phone password. 4-8 numbers can be used for the phone password. The default phone password is 0000.*

Notification Settings

Configure the Notification settings would include Notification service, Messaging, Call logs, Downloads.

Call Settings

Caller ID (Net work Service)

You can select Set By Network, Hide ID or Send ID. The default state is the Set By Network

Call Waiting

Activate, the network will notify you of a new incoming call while you have a call in

progress (Net work Service).

Call Divert

This network service allows you to divert your incoming calls to another number. For details, contact your service provider.

Call Barring

Activate, this network service allows you to restrict incoming calls from your phone. For details, contact your service provider.

Advanced settings

- **Blacklist:** When this Black list is enabled, you won't receive the calls from the numbers entered in the Blacklist.
- **Whitelist:** When this white list is enabled, you will receive the calls from the numbers entered in the list.
- **Auto redial:** On, the phone will automatically redial the last dialed number after a while if you fail to connect to the number. Press Abort to end Auto Redial.
- **Call Time Display:** You can set Call Time Display as On or Off. The call time will be displayed when set on
- **Call Time Reminder:** This function prompts you to end the call in time to save the call cost. You can select Off, Single, or Periodic.
- **Auto quick end:** You can set ON/ OFF, and set a time (1~9999s) as your desire.
- **Reject by SMS:** You can set on or off.
- **Connect notice:** You can set on or off.
- **Mute SMS Content:** You can set Mute SMS content.
- **Answer mode:** If **Any key** is selected, you can press any key to answer a call.

Restore Factory Settings

All settings can be restored to factory settings with this function. The default password is 0000.

Sound Effect

Select, edit, rename or restore default the audio effect.

4.8 Browser

This feature provided by the network service provider. If SIM card and network service provider does not support this service, this feature cannot be used. For more information, please contact your network service provider.

Note: Home page is your starting the WAP connection settings set in the site, if you do not set will use pre-set by the manufacturer site.

4.9 IMAGE VIEWER

*The Image Viewer provides you with a quick view of the picture functions. Please refer to the **Photos** operations of the Camera for more details.*

4.10 CALCULATOR

The calculator can add, subtract, multiply and divide.

4.11 FILE MANAGER

You can use the function to manage all types of files saved in the Phone or the Memory card.

4.12 SOUND RECORDER

You can record conversations, which can be saved to the Audio folder under File Manager.

4.13 CONNECTIVITY

Data connection SIM

You can select SIM1 or SIM2.


 
 
Data Accounts

You can use this function to edit the account related settings.

4.14 TASKS

*You can View, Add, Edit, Delete, Delete Overdue, Delete All, Jump to date, View uncompleted, Send vCalendar and Save As File as desired. Start up the **Tasks** and press OK. Press **Add** to access to add a new memo.*

4.15 FM RADIO

You can use your phone to listen to FM radio stations once the original Headset is plugged into the connector. Please press the side key to adjust music volume. Tap the () to play/stop the FM radio. Tap the ( ) to select the channels.

4.16 WORLD CLOCK

Scroll to browse every city's time zone in the world map.

4.17 SIM TOOLKIT

This service is offered as the SIM card service provided by the network operator.

4.18 Screen Lock Style

You can use different locking style for Screen lock.

4.19 BLUETOOTH

You can transfer data, such as music to other device using Bluetooth. Search the device and accept/transfer data. The received data is automatically stored in the directory.

4.20 Camera

With this function, you can snap. Tap  to snap under the view-finding window.

Enter Camera Option, Your options include:

- **Switch to video recorder:** Switch to the video recorder
- **Photos:** Enter in the album folder.
- **Camera settings:** Set up the camera.
- **Image settings:** Set up the photo parameters.
- **White balance:** Adjust the color balance of the photo.
- **Scene mode:** Set up the scene mode.
- **Effect settings:** There are four options at your choice: Normal, Sepia, Sepia blue and Color invert .
- **Storage:** Set up the storage of the photos.
- **Restore default:** Recover all settings into the initial values.

4.21 EBOOK READER

 
The E-book reader lets you read TXT files from your phone memory or memory card. To access this, go to **Main Menu** → **Ebook reader** → (choose from Memory Card / Phone Memory) → (select E-book)

4.22 Fun

There are several interesting games in the phone. Please refer to instructions from the menu for more details.

4.23 Music

You can enjoy the music with this function. You can use the following keys during the play.



Your options include:

- **Play:** Play the currently-selected song.
- **Details:** View the detailed information of the currently-selected song.
- **Refresh list:** Refresh the list of current list
- **Settings:** Set up the music player.
 - **Pre. Playlist:** The media player can play the songs according to playlist. You can add or move the play files via playlist.
 - **List auto gen.:** set up to on/off the function.
 - **Repeat:** Set up to open/close the function. If you open the function, you can select repeat Once or repeat All.
 - **Shuffle:** Set up to open/close the function.
 - **Background play:** Set up to open/close the function.
 - **Audio effect:** Selected the audio effect.

4.24 Notes

Notes can record everything you want to record.

4.25 Profiles

Enter in the function, display the profile mode list including **General, Silent, Meeting, Outdoor, My Style.**

Select one mode and enter the option menu:


- **Activate:** Activate the profile mode.
- **Customize:** Users can set Alert type, Ring type, Incoming call, Ringtone volume and so on.
- **Reset:** Reset the setting to the default.


Note: After plugging in the headset, ringtone will output from the headset as well as the phone, when there is incoming call or message.


4.26 Switch Theme

You can switch between Theme 1 and Theme 2 .

4.27 Video Player

You can play the video with this function. Select a video and tap  begin to play. You can use the following keys during the play.


 Go backwards

 Full screen

 Play/Pause



 Stop

 Go forwards

Your options include:

- **Play:** Play the selected Video file with the video player.
- **Send:** Send the selected video file to MMS or Bluetooth.
- **Rename:** Change the name of the current video file.
- **Delete:** Delete the currently-selected video file.
- **Delete all files:** Delete all the currently-selected video files.
- **Sort by:** Sort the video files by menu: Name, Type, Time and Size etc.
- **Storage:** Set the storage of the files.

4.28 Video recorder

In video recorder, your options include:

- **Switch to camera:** To switch to the camera.
- **Camcorder settings:** Set up the video recorder.
- **Video settings:** Set up the video parameters.
- **White balance:** Adjust the color balance of the photo.
- **Effect settings:** There are four options at your choice: Normal, Sepia, Sepia blue and Color invert.
- **Storage:** Set the storage for the recording files.
- **Restore default:** Recover all settings into the initial values.

4.29 Y Zone

Auto call record

Open auto call record, When the call after connect will automatic recording.

Privacy Protection

Input the correct password first.

- **Setting:** Set the modules of the privacy protection. If you select this modules for Data security, you must input the correct password when you want to view this modules .

Mobile Tracker

Now do not panic, even if your handset is misplaced. The Mobile Tracker feature in W716 allows you to keep a track of your handset if it is lost. Just activate Mobile Tracker application and assign the numbers, so that if you lose your handset, you can receive a warning SMS on those pre-defined numbers.

1) Tracker Mode

This function requires your network support. You can set ON or OFF. When the function ON and the phone change a SIM card, the phone will send a message to the number which you set in **Y ZONE > Mobile Tracker > Number**. The message will tell you that which number is using your phone now. The default password is 0000.

2) Number

You can set Tracker number.

TIP: This function requires your network support. When you set Tracker Mode OFF, and then you can set the tracker number you want.

3) Change Password

You can change Tracker Password.

4.30 Angry Bird

Angry Bird is preloaded MRE game .

4.31 Egypt Password

Egypt Password is preloaded MRE game .

4.32 FACEBOOK

Facebook is a very popular social networking site around the world giving people the power to share and make the world more open and connected. Millions of people use Facebook everyday to keep up with friends uploads an unlimited number of photos, share links and videos, and learn more about the people they meet. Please ensure that you have GPRS settings in your phone to open Facebook. Contact your operator for GPRS settings.

4.33 Kin Combat

Egypt Password is preloaded MRE game .

4.34 Y! MESSENGER

This menu launches the Yahoo! Messenger site by clicking on the Yahoo Messenger icon. GPRS connection charges may apply

4.35 Twitter

This menu launches the twitter ! Messenger site by clicking on the twitter icon. GPRS connection charges may apply.

Technical Specification Of W716

GSM Network	900/1800MHz
Display Size	8.9 Cm
Battery Capacity	1200mAh
Charger Specification	Input : AC100-300V/50-60Hz Output : DC 5V/500mA
SAR Value	0.715W/kg
Camera Resolution	2.0 Mega Pixel With Flash

Limited Warranty Terms and Conditions



Wynncom Digital Devices Pvt. Ltd., (hereinafter referred to as the 'Company') provides this Limited Warranty to the purchaser of the Wynncom mobile handset and original accessories (Battery, Charger, Hands free etc.) supplied in the sales package (hereinafter collectively referred to as the 'Product').

Warranty period

Subject to the conditions specified herein, the Company warrants the Product to be free from defects in design, material and workmanship at the time of its original purchase and for a subsequent period of one year for the Transceiver, six months for the Accessories (Charger/ Battery/ Hands free/ Data cable); all periods commencing from the date of purchase.

How to get warranty service

To obtain warranty services, the purchaser needs to bring the Product to the Company's Authorized Care Centre at his/her own cost, along with the original proof of purchase, bearing unaltered/ unmodified date of purchase and IMEI number.

The Company's Limited Warranty extends only to the original purchaser/ end user of the Product, and is not assignable or transferable to a subsequent purchaser/ end user

Provisions and Exclusions

This Limited Warranty does not cover a) normal wear and tear; b) defects caused by improper handling; c) defects or damages caused by misuse of the Product, including use that is contrary to the instructions provided by the Company set out in the Product's User's Manual; and/or d) other acts beyond the reasonable control of the Company (including but not limited to Force Majeure, Lightning, Voltage surge, etc.)

During the warranty period, the Company or its Authorized Care Centre may repair or replace at its sole discretion, any defective Product(s) or part(s) thereof with new or factory rebuilt/ re-conditioned item(s) and return the Product to the purchaser in working condition. All replaced part(s)/ item(s) shall become the property of the Company.

The repaired or replaced part(s) or item(s) shall stand warranted only for the remaining warranty period since the date of purchase.

The warranty shall cease to exist in the absence of the original proof of purchase, or in case the original serial number/ IMEI is removed, modified or obliterated, or if the Product is damaged due to liquid spillage, exposure to moisture, exposure to extreme thermal or environmental conditions, or if there is a physical damage to the Product, or if the Product was found tampered/ found opened, modified or repaired by anyone other than the Company's Authorized Care Centre.

The warranty terms are subject to change without prior notice.

Except for any liability that cannot be excluded by law, the Company (including its related entities and their respective officers, employees and agents) excludes all liabilities (including negligence), for any loss of profit, business revenue, goodwill, anticipated savings or data, personal injury; or any loss or damage (including loss of opportunity); whether direct, indirect, special or consequential, arising in any way out of the Product.

All disputes are subject to the jurisdiction of courts of Delhi only.

Wynncom Care - 1800 102 9299
9.30 AM to 6.30 PM (7 days a week)

Email us at customercare@wynncom.net
Visit us at www.wynncom.net