
Wynncom W720

User Manual



Note: The content of the manual is correct when it is released, but “**Wynncom Digital Devices Pvt. Ltd.**” reserves the right to modify the technical specification without additional notification. Some content in the manual may be different from the mobile phone, as the accessory software, SIM card or service varies by providers

CONTENTS

1. Safety Precautions	Error! Bookmark not defined.
2. Phone Overview	4
3. Getting Started	7
4. Text Entry	8
5. Calling	9
6. MENU	10
6.1 Dialpad	10
6.2 Contacts	10
6.3 Call logs	11
6.4 Settings	11
6.4.1 Phone Settings	11
6.4.2 Display	12
6.4.3 Security	12
6.4.4 Call settings	12
6.4.5 Connections	13
6.5 Main menu style	14
6.6 Screenlock	14
6.7 Y-Zone	14
6.8 Internet	14
6.8.1 Input URL	15
6.8.2 Bookmarks	15
6.8.3 History	15
6.9 Message	15
6.9.1 Chat mode	15
6.9.2 Write message	15
6.9.3 Inbox	15
6.9.4 Outbox	16
6.9.5 Drafts	16
6.9.6 Sentbox	16
6.9.7 Templates	16

6.9.8 Broadcast message	16
6.9.9 Voice mail server.....	16
6.10 Email.....	16
6.11 Camera	17
6.12 Video recorder.....	17
6.13 U zone	17
6.14 Profiles	17
6.15 Calendar	18
6.16 Audio.....	18
6.17 Video player	18
6.18 King Movie	18
6.19 E-book.....	18
6.20 My files	18
6.21 Bluetooth.....	18
6.22 Java	18
6.23 Image	18
6.24 FM radio	24
6.25 Calculator.....	19
6.26 Recorder.....	19
6.27 Games	19
6.28 Clock.....	19
6.29 Local search	19
6.30 Unit convertor	19
6.31 Backup	19
6.32 STK.....	25
6.33 Application.....	25
6.34 Memo	25
6.35 System switch	20
6.36 Fruit.....	20
6.37 Skybuddy	20
6.38 Torch	20
7 Additionalfunction	20

7.1 Mass storage function	20
7.2 Web cam.....	20
8 .Appendix I Troubleshooting	21



Important safety precautions

This section contains important information on the safe and efficient operation of your mobile device.

For your safety, please refer to the guideline prior to using the phone.

Note: Failure to comply with the following precautions may be dangerous or illegal.

Drive safely at all times

Do not use a hand-held phone while driving. Park the vehicle first.

Switch off the phone when refueling

Do not use the phone at a refueling point (service station) or near fuels or chemicals.

Switch off in an aircraft

Wireless phones can cause interference. Using them in an aircraft is both illegal and dangerous.

Switch off the phone near all medical equipment

Hospitals or health care facilities may be using equipment that could be sensitive to external radio frequency energy. Follow any regulations or rules in force.

Interference

All wireless phones may be subject to interference, which could affect their performance.

Be aware of special regulations

Meet any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger.

Water resistance

Your phone is not water-resistant. Keep it dry.

Sensible use

Use only in the normal position (held to the ear). Avoid unnecessary contact with the antenna when the phone is switched on.

Keep your phone away from small children

Keep the phone and all its parts, including accessories, out of the reach of small children.

Accessories and batteries

Use only approved batteries and accessories, such as headsets and PC data cables. Use of any unauthorized accessories could damage you and your phone and may be dangerous.

If jewelry, keys, beaded chains, or other conductive materials touch exposed battery terminals, this could complete an electrical circuit (short circuit), become very hot, and could cause damage or injury. Be careful when handling a charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects.

- ❖ Never use a charger or battery that is damaged in any way.
- ❖ Use the battery only for its intended purpose.
- ❖ If you use the phone near the network's base station, it uses less power. Talk and standby time are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.
- ❖ Battery charging time depends on the remaining battery charge, the type of battery, and the charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time is noticeably shorter than normal, it is time to buy a new battery.
- ❖ If left unused, a fully charged battery will discharge itself over time.
- ❖ Use only approved batteries, and recharge your battery only approved chargers. Disconnect the charger from the power source when it is not in use. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.
- ❖ Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.
- ❖ Do not leave the battery in hot or cold places because the capacity and lifetime of the battery will be reduced. Try to keep the battery at room temperature. A phone with a hot or cold battery

may not work temporarily, even when the battery is fully charged.

- ❖ Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object like a coin, clip or pen causes a direct connection between the + and – terminals of the battery (metal strips on the battery). For example, do not carry a spare battery in a pocket or bag where the battery may contact metal objects. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting.
- ❖ Dispose of used batteries in accordance with local regulations. Always recycle. Do not dispose of batteries in a fire.
- ❖ To ensure while using the phone please do not get the battery charge.
- ❖ During the course of charging, it is normal to find the battery and the phone slightly heat-up. The Phone will automatically protect itself when battery temperature rises so as to control temperature variation.

Note: This phone is just charged 50%. Please use up the power and recharge it fully. This is the case with the second recharge. After three repetition, the battery can achieve it' s best performance condition.

Operating Environment

Remember to follow any special regulations in force in the area you are in, and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger. When connecting the phone or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the equipment should only be used in the normal operating position (held to your ear with the antenna pointing over your shoulder).

Extreme heat or cold, Avoid temperatures below -10°C/14°F or above 45°C/113°F

Electronic devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone. Consult the manufacturer to discuss alternatives.

Pacemakers

Pacemaker manufacturers recommend that a minimum distance of 15 cm (6 inches) be maintained between a wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research and recommendations of Wireless Technology Research. If you have any reason to suspect that interference is taking place, switch you're your phone immediately.

Hearing aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may wish to consult your hearing aid manufacturer to discuss alternatives.

SIM AT Service

SIM Card provides several value-added services.

These functions will only display and work on the menu of the phone when your SIM card is supported. The content and the terms of the function lists will depend on your network service provider.

Please contact your network service provider (a network operator or the service provider) in regards with availability of any services related to the SIM card, application information and the costs.

Other medical devices

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Switch off your phone in health care facilities when regulations posted in these areas instruct you to do so.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted facilities

Switch off your phone in any facility where posted notices require you to do so.

Potentially explosive environments

Switch off your phone when in any area with a potentially explosive atmosphere, and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch off the phone while at a refueling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants, or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often but not always clearly marked. They include the areas below decks on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas, such as propane or butane, areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

Emergency calls

This phone, like any wireless phone, operates using radio signals, wireless, and landline networks as well as user-programmed functions, which cannot guarantee connection in all conditions. Therefore, you should never rely solely on any wireless phone for essential communications like medical emergencies. To make or receive calls, the phone must be switched on and in a service area with adequate signal strength. Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

To make an emergency call: **(For India example: 112,911,100,101,102)**

1. Key in the emergency number for your present location. Emergency numbers may vary by location.

2. Press the Send Key.

3. Inform your location. Do not end the call until given permission to do so.

Certain features like Call Barring may need to be deactivated before you can make an emergency call. Consult this document and your local cellular service provider.

Other important safety information

- ❖ Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.
- ❖ Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.
- ❖ Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the phone, its parts, or accessories.
- ❖ For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. Improperly installed wireless equipment could result in serious injury if the air bag inflates.
- ❖ Switch off your phone before boarding an aircraft. It is dangerous and illegal to use wireless phones in an aircraft because they can interfere with the operation of the aircraft.
- ❖ Failure to observe these instructions may lead to the suspension or denial of telephone services to the offender, or legal action, or both.

Wynncom Authorized Care Centre

Only qualified service personnel may repair your phone.

It is highly recommended to have a repair service by qualified service personnel. Use only the approved accessories and batteries.

Note: Please use the original components in order to achieve the best use of effects, as the use of non-original components may cause damage to the machinery, in such case company shall not be responsible.

1.Phone Overview



1. Receiver	2. Screen
3. Search key	4. Return key










5. Menu key	6. Home key
7. Volume keys	8. Camera
9. Flash	10. Speaker
11. Headphone jack	12. Power key
13. USB jack	14. FM antenna


Each button instructions	
Home key	Unconditional return to the home screen.
Menu key	"Options" function.
Return key	"Back" function.
Search key	"Search" function
Power key	1、 Long press turns on/off the phone. 2、 Once press screen lock.
Volume keys	The key to change the volume level.

Icons

Icons displayed on the main screen (Icons may be changed without further notice)

The following icons may be displayed in the first line of the screen.

	Signal strength of SIM1 & SIM2.
	Battery status
	Alarm activated
	Unread messages
	A new MMS has not read
	Download MMS in
	New missed calls
	Connected to the GPRS network
	Earphone

	Flight mode
	Bluetooth is on
	Silent mode
	Meeting mode
	Indoor mode
	Outdoor mode

3. Getting Started

What is a SIM card

When registering your mobile phone number, you will have a SIM card (Subscriber Identity Module) provided by the network operator.

The SIM card has information reserved for your use. It includes your phone number, PIN (Personal Identification Number), PIN2, PUK (password to unlock PIN), PUK2 (password to unlock PIN2), IMSI (International Mobile Subscriber Identity) number, network information, phonebook data, SMS data and so on. If it is lost, contact your network operator immediately for help.

PIN code

PIN is the password provided by your network operator. It is usually 4 digits. When you input the PIN code, the screen displays “*” to replace the number entered.

PIN is used to access the SIM card. If the PIN protection function is enabled, the screen will display “Enter PIN” each time the phone switched on. You can deactivate this feature but risk unauthorized use of the phone. Some network operators do not permit deactivating the control.

PIN2 code

PIN2 is required for some specific functions provided by the network, such as the fixed dialing.

Note: If you enter the PIN incorrectly three times in a row, the SIM card will be locked. Please contact your network operator immediately for decoding. Attempting to decode by you may result in the permanent failure of the SIM card.

PUK code

PUK (Personal Unblocking Key, 8-digit) unlocks a locked PIN. If you enter the PUK incorrectly ten times in a row, the SIM card will become invalid. Please contact your network operator for a new SIM card.

Installing the SIM card

1. Press and hold the power key to turn off the phone.
2. Remove the battery cover and then the battery.
3. Insert the SIM card into the card holder. Ensure that the metal contacts face the phone.
4. Re-install the battery. Place the battery cover into the back of your phone and slide it forward until the latch catches the cover.

Note: A SIM card can be easily damaged if its metal contacts become scratched. Therefore, take special care when holding or inserting it and keep it away from children.

Charging the battery

The battery is not fully charged when first unpacked. It takes three charging-discharging cycles for the battery to reach its peak performance. The battery can be charged and discharged hundreds of times. However, the capacity of the battery will be reduced each time it is charged/emptied, and it will eventually wear out. When the talk time and the

standby time are noticeably shorter than normal, replace the battery. Use original batteries and charging devices only.

Unplug the charger from the outlet and the phone when not in use. Do not leave a fully-charged battery connected to a charger because overcharging may shorten the lifetime of the battery. If unused, a fully-charged battery will lose its charge over time.

If the battery is completely discharged, the charging may not start immediately when you plug in the connector. Wait 10 to 15 minutes for the phone to begin charging. Use the battery only for its intended purpose. Never use any charger or battery that is damaged.

Do not short-circuit the battery. An accidental shortcircuit may occur when a metallic object such as a coin, clip or pen causes the direct connection of the positive (+) and negative (-) terminals of the battery, for example, when you carry a spare battery in your pocket or purse. Shortcircuit may damage the battery and the connecting object.

Storage at too high or low temperatures will result in a gradual capacity loss. As a result the operating time of your mobile phone may be considerably reduced, even though the battery is fully charged.

Do not dispose of batteries into fire as they may explode. Batteries may also explode if damaged. Dispose of unwanted batteries and phones as permitted in the law in your countries.

Note: The actual operation time of a battery varies based on the operation mode, network settings and call settings.

Charge a battery according to the following steps:

1. Connect the charger to the connection jack of the phone in proper direction, and connect the charger to a main socket.
2. The phone displays "Charger Connected!" and starts charging after properly connected. The battery icon dynamically displays the charging process. In switch-off state, the phone dynamically displays the charging process.
3. When the battery is fully charged, the charging process stops automatically, and the battery icon indicates full grid on the screen. After the battery is fully charged, remove the charger from the phone and socket as soon as possible.

Note:

- Do not change the parts and accessories of the battery or take off the battery cover for safety.
- Use only original batteries and charging devices. Otherwise you will risk serious damage to health and property.
- Do not charge batteries in too high or too low temperature.
- Do not use the phone while charging.
- After pulling out the battery system date and time will be reset to default values (factory settings).

T-Flash card

T-Flash card is a kind of multimedia memory card

Switching the Phone on and off

To switch on and off the phone, please press and hold the power on/off key to power off / on your handset. If you switch the phone on without inserting the SIM card, then the phone will remind you to Insert SIM Card.

Even though INSERT SIM CARD comes on screen user can use all other features except SIM features.

Then the following notices will appear on the screen in sequence after inserting the SIM card and switching on the phone:

Enter the phone lock password—if you have set phone lock password on.

Enter PIN—if you have set SIM card password on.

Search the network—the phone will automatically search the network until it connects to the appropriate network.

4. Text Entry

Changing the input method

Press the “Switch button” key repeatedly to switch an input method.

Inserting symbols



Press the “123*” key and select the required symbols. For example: input “?”. You need to first press “123*” key, and then fast click the “?” key.

Numeric

Press “123*” key to select numeric mode in keypad.

Note: To insert a space press space key in keypad.

ABC

Press the key “A ” to switch the writing type. Press the key “” to go to the next row.

After ABC/Abc/ abc is chosen, you can input letters or words by pressing the corresponding letters or words.

Press any key associated with the letter you want to enter. Touch the delete key to delete the last character in the display.

5. Calling

Making a call

Enter Phone Screen, Touch dialpad to enter a phone number and press the calling key to make a call. To make a call by SIM1, or SIM2 just press SIM 1 or SIM 2 dial key.

Touch hang up key to end a call.

Making an international call

1. Press the “*” key twice quickly to enter “+”.
2. Enter the country code, area code and phone number.
3. Press the SIM1calling key to make a call by the SIM1 card, or press the SIM2 calling key to make a call by the SIM2 card.

Correcting a key-in error

Touch the delete key to delete the last character on the display.

Making a call from phone book

1. In idle screen, Touch the contacts to enter Phonebook list, or enter the menu and select Contacts
2. Allow you to scroll the phonebook list and select a contact person press the SIM1/ SIM 2 to make a call by the SIM1/ SIM 2 card.

Dialing a previous number

In idle screen, touch the dial pad to see Call Logs of SIM1 and SIM2.

Press the calling key to make a call by the SIM1/SIM 2 card.

Listening to voicemail

Press and hold number key “1”.

You need to set the voicemail number and store it on your SIM card. To set the number, go to **Messaging > Voice mail server > SIM1 / SIM2 > Select Edit**.

Answering a call

Press answer key to answer the call.

Ending a call

Press the hang up key.

Rejecting a call

Press the hang up key.

Silent the ringtone

Press “Disable ring” option or press volume key to silent the call ringtone.

Call options

Press **Options** during a call for more options. Options depend on the current situation.

Add new call	Add a new call and talk with more than one party at a time.
Keypad	Select keypad to enter number.
Hold	Hold the current call.
Record	Record active call.
Mute	Mute your voice.
Hands-free	Put your phone on speaker mode.
Hang up call	End the current call.
Adjust volume	Increase and decrease the volume.
Contacts	Use Phonebook to search for numbers.
Call logs	Select the call log.
Message	Read/write a message during a call.

Dual-SIM card dual-standby call



When both the master and slave cards of a mobile phone are under standby state on the network, meanwhile the master/slave SIM card is being used for a call; any call of the other slave/master SIM card cannot be connected.

6. MENU

6.1 Dialpad

Into the main menu, open dial pad.

Standby interface touch , Input the area code and the phone number。

Touch  (dial key) Use SIM card 1 call, or Touch  (dial key) Use SIM card 2 call.

Enter “contacts”, the number of the dial can be deposited in the mobile phone or a SIM card

Click on the interface "options", which can through the function tip for operation.

6.2 Contacts

The phone provides two kinds of storage media: SIM card and phone. The phone can store 500 entries. The capacity of the phone book on your SIM card depends on the type of SIM card provided by your network operator.

Enter the number in dialpad, press options and select “Add to contacts”. Select the storage location then edit interface will appear. If SIM1 or SIM2 is selected, you need to edit the name and number. If phone is selected, you need to edit the items that you set in the settings of phonebook, including the name, number, caller picture, caller ringtone, caller group.

The phone book allows quick search through it. Input what you want to search, Enter the first letter to the white blank box, then all the records starting with such letter will be displayed.

Press Option under contacts menu :

Add new contact: This option is at top in the phonebook or select from options. You can add a new phone number to SIM1, SIM2 or phone.

Delete Multiple: You can delete multiple contacts.

Copy: You can copy contacts in phone memory, SIM1 memory and SIM2 memory.

Import / Export: Import and Export contacts to memory card.

Groups: A caller group is the combination of phone settings used to identify a particular group of records. The phone provides five call groups: Friends, Family, VIP, Business and Classmates. You can manage and edit details of caller groups using Group setting option.

Settings:

- **Storage :** Select contact storage to SIM1 , SIM2 or Phone.
- **Display options :** Display contacts from SIM1 , SIM2 or Phone.
- **Own number :** Save your own numbers.
- **Service number :** Select service numbers.
- **Memory status :** Check the available and used memory of Phone , SIM1 and SIM2.

View: View the detailed information of the saved number.

Options :

- **Edit :** Edit the contact.
- **Delete :** Delete the saved contact.
- **Send vCard :** Share contact via SMS , MMS and Bluetooth.
- **Edit before dialing :** Edit contact before dialing.
- **Add to favorites / Remove favorites :** Add the contact to favorites / Remove the contact from favorites.

Note : Long press on the contact for more options.

6.3 Call logs

Shows all call records, for example: Missed Calls, Dialed Calls, Received Calls.

All Calls

With this function, you can check all recent calls.

Missed Calls

With this function, you can check recent missed calls. Press the menu key to access **Options**, and you can Delete, Save to Phone book, call, and so on.

Received Calls

With this function, you can check recent received calls. In this function, you can Delete, Save to Phone Book, Call, and so on.

Dialed Calls

With this function, you can check recent dialed calls. In this function, you can Delete, Save to Phone Book, Call, and so on.

Rejected Calls

With this function you can check the rejected calls.

Note : You can also access options via long pressing.

To call functions, you can go to [Settings Call Settings Dual-SIM] choose according to need SIM1 or SIM2

6.4 Settings

6.4.1 Phone Settings

1. Time and date

Set time	Set the time
Set date	Set the date.
Time format	Set the time format
Date display type	Set the date display format
Update with time settings	Update date and time automatically from network

2. Language

Select the language for your handset.

3. Input method settings

Set input method for text entry.

4. Adjust touch screen

If the touch does not work properly then you must do the calibration to adjust the touch screen.

5. Auto power on/off

Set the time to power off/on the phone automatically.

6. Power saving mode

Set the power saving mode when your battery power is low.

7. Restore factory settings

Reset the phone to default values (factory settings).

The phone password is required, which is "0000" by default.

6.4.2 Display

Animations effect	Select the animation effect.
Wallpaper settings	Set a wallpaper of your choice.
Main menu style	There are Matrix menu/U menu two menu for your choice.
Screen lock	There are a variety of ways to unlock for your choice
Screen saver settings	Set the waiting time and image for the screen saver.

Contrast	Set the backlight brightness
Keypad backlight time	Set the Keypad backlight time. Have "20 seconds", "10 seconds", "5 seconds," "night mode" and "off" five ways to choose
Auto lock screen	Keypad lock prevents the inadvertent phone usage. However, you can still be called and you can make emergency calls.

6.4.3 Security

The phone provides several security options to protect your phone from misuse.

1. PIN

You can enable / disable the SIM lock.

Warning:Warning: please careful use this function, such as forget PUK password, and please consult the network operators. If for 10 times PUK yards input errors, SIM card will be scrapped.

2.Modify PIN2:

PIN2 (Personal Identification Number2) code is in some special function into (such as in setting fixed number) will enter personal identification number2.

Warning: please careful use this function, if continuous 10 times PUK2 yards input errors, SIM card will be scrapped.

3. Phone locked

If the phone lock is activated, the phone lock password is requested after the phone switched on. The default password is "0000". If the phone is locked, only emergency calls can be made.

4. Modify the cell phone password

The password of mobile phones can be changed.

5. Fixed dial number

Open the fixed dial-up function. If not you should find an operator for help.

6. Blacklist

To reject the call / message from a particular number , save the number in blacklist.

6.4.4 Call settings

Dual SIM setting

Set standby mode , Reply by original SIM , Set SIM name and colour.

Call divert

You can specify the conditions under which calls should be diverted to your voicemail box or another number.

Call forwarding unconditional	All calls are diverted.
Call forwarding on busy	A call is diverted if the phone is switched off or is out of range.
Call forwarding on no reply	A call is diverted if not answered.
Divert if unreachable	A call is diverted if another call is in progress.
Cancel all divert	Cancel all call divertsettings.

Call waiting

Activate	If activated, an incoming call is signaled by a call waiting tone when you are on another call. The number/name of the incoming call is displayed.
Deactivate	Cancel the call waiting function.
Query status	Inquire the current status from the network.

Call barring

Restrict the dialing or receiving of certain calls. To activate or cancel call barring, you have to enter the network password provided by your network operator.

Select Line

This function is supported by operator to switch to Line 1 or Line 2.

Note: If you select Line2, whether you can make calls which depend on the network operator.

Hide ID

When you make a call, your number can be shown or hidden on the display of the called party. Select **Set by network** to use the default setting provided by the network operator.

You may not be able to make calls if you select **Hide ID**, depending on the network setting.

Others

Call time minute reminder: If activated, the phone beeps at the interval time you set during a call.

Auto redial: You can on/off this function. When it is on, a failed dialing will automatically redial.

Vibration when connect: When activated, Phone will vibrate when the call is connected.

Reply SMS after reject: When activated, you can reject a call by sms.

Auto record voice call: You can on/off this function. If it is on call will be recorded automatically.

Auto answer in headset: You can on/off this option. If this option is on then the call will be automatically answered when the headset is connected with phone.

6.4.5 Connections

1、 Network account

Customize the Internet account

New connection: You can add a new connection profile.

Add from list: You can add a connection from list.

Search: You can search a network profile.

Download network account: You can download network account from internet.

2, GPRS services

You can activate / deactivate GPRS services.

3, DATA roaming

You can enable/disable data services while roaming.

4, DATA roaming

Set data connection settings.

5, Network selection

You can set network selection automatic or manual.

6.5 Main menu style

You can choose the main menu display style.

6.5.1 U menu

You can choose the special main menu display style.

6.6 Screen lock

You can choose the screen lock style of your choice.

6.7 Y ZONE

Auto call Record

You can set Off or On. If you set this option as on active call will be recorded automatically.

Privacy

You can set the privacy password for Audio, Video, File manager Message, Call log etc. Default password is "0000".

Mobile Tracker

Now do not panic, even if your handset is misplaced. The Mobile Tracker feature in W720 allows you to keep a track of your handset if it is lost. Just activate Mobile Tracker application and assign the numbers, so that if you lose your handset, you can receive a warning SMS on those pre-defined numbers.



Games

Link game

Enter the game center to download the new games.

In many of the images in search for design the same images matching, as long as they are less than or equal to the connections between two turning point can disappear and to win the point.

Sokoban

All the boxes will be pushed to the specified destination can pass. Click on the space can move a porter, click on the game's interface 、 Close to the chosen.

Click on an icon  to the operation quickly.

Gobang

- 1, Gobang between two people is the competitive activities, because of black white different rules, black to go first.
- 2, The special dish for 15 Gobang by 15, even the son for five horizontal, vertical direction, inclined.
- 3, The hand is match was convicted of negative HangQi means. White has no forbidden moves.

Facebook

You can use facebook.

Twitter

You can use twitter.

Yahoo

You can access your yahoo mails.

Cricinfo

Any where any time you can access the cricket information.

Hungama

You can download wallpapers, images etc.

6.8Internet

This function allows you to acquire or visit diversified services on the internet through message or network, please contact your network operator for more information.

Note: Your Internet service provider may not support some functions. In order to guarantee the normal operation of the browser line, please confirm your SIM card which can support the Internet and open up the function.

6.8.1Input URL

Input web page address, you can understand the world convenient.

6.8.2 Bookmarks

You can edit the bookmark on your own way. Set specific operation as follows: add new bookmarks , add folder , mark.

6.8.3 History

Record the web addresses you have visited.

Options :

Homepage

It will open the web page , you set as your homepage.

Settings

You can change the settings of the browser.

Exit

Exit from browser.

6.9 Message

6.9.1 Chat mode

Sent and received messages will display as a chat list.

6.9.2 Write message

New SMS

Create a new short message.

1. Enter text.
2. Press the menu key (**Options**) and select the required items, including **insert template, add contact info, add phiz, open send timing, save to drafts.**

New MMS

Write MMS

Create a new multimedia message.

1. Enter recipients in **To**, Confirm with **Ok**.
2. Enter a subject in **Subject**. Confirm with **Ok**.
3. Enter text in **text field**.

Options :

- Add : Press the menu key (**Options**) and select add to add the items which you want to send, including text, next slide, previous slide, images (**Add picture**), audios (**Add audio**), **attachment**(files in other formats) so on.
- Delete : to delete the message.
- Save as draft : Save the message as draft.
- Set slide time : Set the slide time.
- Text layout : Set the text layout of your choice.

Tap on play icon to preview the mms slide show.

Tap on attachment icon to attach files

Tap on send icon to send the message.

6.9.3 Inbox

Incoming short messages are saved in inbox. Press menu key to select the following options.

Mark	Mark multiple / all messages.
Sort	Sort the messages by time/contact/subject/type.

Tap on the message to view. Press menu key to select the following options.

View (Tap on message)	To have a view of the message content.
Reply (Tap on reply icon)	Reply the short message.
Forward (Tap on forward icon)	Forward this short message to others.
Delete (Tap on delete icon)	Delete the short message.
MMS (Press options)	Reply via MMS
Call	To make a dial of the sender.
Move	Move the message to SIM/Phone.
Copy	Copy the message to SIM/Phone.
Details	Watch the details of the message.

Note: You cannot receive new messages if the memory for messages is full. Delete the unnecessary messages.

6.9.4 Outbox

Message store to outbox that have not sent successfully.

6.9.5 Drafts

Save messages in draft.

6.9.6 Sentbox

Save the successfully sent text messages and MMS

6.9.7 Templates

There are several short sentences as default SMS which is used most frequently. You can use & edit it.

6.9.8 Broadcast message

Broadcast messages are messages that your network operator broadcasts to all users within a particular area, such as area information and transportation conditions.

Press options and select **Settings:**

On/Off	Enable or disable the function.
Select Languages	Set languages for cell broadcast information. Only information in the set language can be received.
Channel settings	Select the channel of cell broadcast.

For more information about available channels and the information they provide, contact your network operator.

6.9.9 Voice mail server

Save the voice mail number.

6.10 Email

Start: Tap on start to add an account.

When account is already added in email then tap on email account:

Write Email: To write an email and send.

Inbox: All received emails are stored in the Inbox. Allow you to perform the operations towards the current email, such as view, sort, and mark as deleted, delete.

Outbox:The Outbox saves all emails that are sent while selecting the entry Save.

Sent:The Outbox saves all emails that are sent.

Drafts:The messages unprepared for sending are stored in the Draft, waiting to be modified and sent.

Press Options:

Receive email :To receive your email.

Account settings: You can edit the account settings.

System settings: You can restore the system settings.

6.11 Camera

The phone is provided with a built-in mega pixel camera at the back, which supports the photographing and video shooting functions. Pictures are saved in the file system of the phone. You can send the taken pictures by the MMS/Bluetooth function provided by the phone.

Tap on > Icon for more options :

Tap on camera icon : You can select camera or video recorder.

Image property : You can change brightness , contrast etc.

White balance : You can choose Incandescense , Fluorescent, Sunny day, Cloud.

Effect : You can set effects like B&W, Blue, Green, Yellow, Red, Sepia, Negative.

Settings :

Quality : You can set the quality low,normal,advanced.

Size : You can select different image sizes.

Night mode : You can on / off this function.

Cont. Shot : You can capture more than one picture with the help of this function.

Delay : You can set the delay.

Banding : You can change the band.

Shutter sound : You can on / off this function.

Auto save : You can on / off this function.

Storage : You can set the storage memory to phone or memory card.

Flash : You can enable or disable this function.

6.12 Video recorder

Video recorder is used for video shooting. Press the red button to start recording, pause or resume.The video clip is saved to the phone or T-Flash card.

Options for Video recorder are listed below.

Switch mode	Can switch camera and recorder direct.
image property	Change the brightness , contrast etc.
Effect	Select the effect of video.
Settings	Set size, Banding, audio, video format, storage

6.13 U zone

Under the menu has Camera ,Record, E book, King movie, Audio player, FM, Image, Video player for your choice.

6.14 Profiles

The phone provide five pre-defined user profiles that allow the operations of the phone to best suit the environment you are in. The profiles are Normal, Silent, Meeting, Indoor, Outdoor.

Note: You can directly access the silent mode via long pressing # key.

You can customize the following options for new profiles.

Rename:	Change the profile name.
Ring settings	You can change ringtones for call and message.
Adjust volume	Set volume for caller ringtone, message ringtone, call volume, power ringtone etc.
Ring type	You can change the ring type in Ringtone, Vibrate, Silent, Vibrate then ring, Ring and vibrate.
Other alert rings	Set key tone, touch tone, battery low alert, power ringtone, dial pad vibrate, dial pad tone, screen lock tone.

6.15Calendar

Options :

Add new schedule	You can add a new schedule.
View schedule	You can view the already saved schedule.
All schedule	You can view all schedules.
Clear today's task	Delete today's schedule.
Clear all	Clear all saved schedules.
Go to date	Go to date.
Indian calendar	Select Indian calendar to see tithi, festival etc.
Onscreen prompts	Set onscreen prompts.

6.16Audio

Audio player allows you to play mp3 audio files by making playlist.

Now Playing: To play songs from preloaded list.

Options :

Music list	It will open all the playlists.
Set as incoming call ringtone	Set the current playing file as ringtone.
Display settings	Set display settings.
Add to saved playlist	Add the song to saved playlist.
Set as alarm ringtone	Set the current playing song as alarm ringtone.
Add to new play list	Add the current playing song to new playlist.
Settings	Player Settings include Repeat, Shuffle & Equalizer. BT stereo output.

6.17 Video player

Video player allows you to browse or process video files.

Press Options under video player menu :

Local playlist	Play videos from playlist.
Local browse	Browse videos from memory card and phone.
Settings	In settings there are options repeat , shuffle etc.
Set as screen saver	Set the video as screen saver.
Set as power on anime	Set the video as power on anime.
Set as power off anime	Set the video as power off anime.
Adjust brightness	Increase and decrease the brightness of the video.
File attributes	See the details.
Exit	Exit from video player.

6.18 King Movie

You can save and watch movies in this application.

6.19 E-book

The phone supports reading files in the ***.txt** format.

Store the ***.txt** files in the **EBook** folder, and then you can read them in **E-Book**.

6.20 My files

You can use **File manager** to save your files.

If a memory card is inserted, the files stored on it are organized separately.

Select **Phone** or **Memory card** and select **Following options** new folder, search , sort, mark, memory status etc.

6.21 Bluetooth

■ Bluetooth : Allow you to switch on/off Bluetooth.

■ Bluetooth visibility : Allow you to switch on/off Bluetooth visibility.

■ Paired Device : Paired devices will be listed.

■ Shared folder settings: Set the folders to share.

■ Device name : Set your device name.

■ Bluetooth file storage : Set the Bluetooth file storage to phone or memory card.

■ Help : It will all the information how to use the Bluetooth.

6.22 Java

You can install java applications from your memory cards of your own choice.

6.23 Image

Pictures can be accessed quickly in **Image viewer**.

Camera : Tap on camera icon to capture a picture.

Settings : Tap on settings icon to access settings. In settings you can change effect in slide show , delay time and folder.

Tap on folder to view all images :

Slide show (Play icon)	Tap on the play icon to play slide show.
Mark	Tap on mark icon to mark multiple files.

Tap on single image to view and press Options :

Set as wallpaper	Set the image as wallpaper.
Set as contact icon	Set the image as contact icon.
Share	Share the image via MMS and Bluetooth.
Edit image	Edit image.
Delete	Delete the image.
Slide play	Play the slide show.
Rename	Rename
Details	See the details of the image.

6.24FM radio

This option allows you to listen FM radio.

Options :

Auto search and save	Auto search channels and save.
Record	Record FM.
Save	Save the channel.
Open speaker	Open speaker.
Manual search	Search the channel manually.
Record file list	Watch the recorded file list.
Storage	Set the recorded file storage to phone or memory card.
File format	Save the file format.

6.25Calculator

You can calculate the mathematical calculations using calculator.

6.26Recorder

Your phone supports recording .You can record your voice with the help of this function.

6.27 Games

You can access games from here.

6.28 Clock

1、 World clock

User can check the current local date and time of major cities in the world.

2、 Alarm

User can set three types of alarm clock time if required. Then the alarm icon will be displayed on the idle screen.

3、 Stopwatch

This function is used to measure time.

4、 Timer

Enter the function list and select Countdown timer.

.

6.29 Local search

Search files, folders, phonebook contacts etc.

6.30 Unit conversion

The unit includes length and weight of the conversion of the conversion unit.

Weight

This option for “kg<-> pounds” , “kg <-> ounces” conversion

Length

This option for “kilometers <-> miles” , “m <->yard”, “m<->foot” , “cm <-> inches” conversion.

6.31 Backup

Backup your phone, call records, the text messages, calendar task.

6.32STK

6.33 Application

Help you to check the background applications

6.34 Memo

Help you to record your task.

6.35 System switch

Switch to other menu style with this function.

6.36 Fruit

Fruit ninja is an interesting game. In this game you need to cut the fruit in two parts.

Note: Cut the fruit only , don't cut to the bomb.

6.37Skybuddy

It has Facetalk, Gemstone, Twitter, Facebook, MSN, Yahoo messenger.

6.38Torch

You can on and off the torch.

4. Additional function

7.1Mass storage function.

Mass storage is used as follow :

Link mobile phone to computer with the USB data line provided to the mobile phone.

The mobile phone is linked to computer, select [Mass storage] at the end of mobile phone. After the computer successfully identify Mass storage, you can exchange the data with your computer.

Open “My computer”, now see “Removable disc”.

Note:

1. When the mobile phone is in the status Mass storage, you can see files. Once deleted, the default files in mass storage will be lost forever.

2. When the transferring is completed remove the USB.
3. Support USB1.1.

7.2 Web cam

The mobile phone can be used as Web cam; you can have a video communication with friends to enrich your life.

Web cam : link USB line then it can be used as web cam.

8. Appendix I Troubleshooting

If you find any problems while using the phone, or if it performs erratically, you can consult the information in the following table. If a particular problem cannot be resolved by using the following information, contact the dealer where you purchased the phone.

Problem	Possible causes	Possible solution
Poor reception	The network signal is too weak at your current location, for example, in a basement or near a tall building, because wireless transmissions cannot effectively reach.	Move to a location where the network signal can be received properly.
	The network is busy at the current time, for example, during peak times, because there may be too much network traffic to handle additional calls.	Avoid using the phone at such time, or try again after waiting a short time.
	You are too far away from a base station for your service provider.	You can request a service area map from your service provider.
Echo or noise	Poor network trunk quality on the part of your service provider.	Press the ending key and dial again. You may be switched to a better-quality network trunk or phone line.
	Poor local telephone line quality	Press the ending key and dial again. You may be switched to a better-quality network trunk or phone line.
Battery will not charge.	The battery or battery charger is damaged.	Contact the dealer.
	The temperature of the phone is below -10°C or higher than 55°C.	Adjust the battery charging environment to avoid extremes of temperature.
	Poor contact between the battery and charger.	Check all connectors to make sure all connections have been properly made.
Shortened standby time	The standby time is related to your service provider system configuration. The same phone used with different service providers' systems will not provide exactly the same length of standby time.	If you are located in an area where signaling is weak, switch off the phone temporarily.
	The battery is depleted. With high temperature environments, battery life will be shortened.	Use a new battery.
	If you are not able to connect to the network, the phone will continue to send out signals as it attempts to locate a base station. Doing such consumes battery power; it will consequently shorten standby time.	Change your location to the network accessibly, or turn off your phone temporarily.
You cannot switch your phone on.	Battery power has been depleted.	Recharge the battery.
SIM card error	SIM card malfunction or damage	Take the SIM card to your service provider for testing.
	SIM card is inserted improperly.	Insert the SIM card properly.
	Debris on the SIM card contacts	Use a soft and dry cloth to clean the SIM card contacts.
Unable to connect	SIM card invalid.	Contact your service provider.

to the network.	You are not within the service area of the network.	Check the service area with your service provider.
	Poor signal.	Move to an open space, or if you are inside a building, move closer to a window.
You cannot answer incoming calls.	You have activated the call barring feature.	Go to Settings> Call settings>SIM1/SIM2 call settings>Call barring , and then select Cancel all .
You cannot make outgoing calls.	You have activated the call barring feature.	Go to Settings>Call settings>SIM1/SIM2 call settings>Call barring , and then select Cancel all .
	You have activated the fixed dial number feature.	Go to Settings>Security>Fixed dial , and select Off to disable this feature.
PIN Code is blocked.	You have entered an incorrect PIN code three consecutive times.	Contact your service provider. If the service provider provides the PUK code of the SIM card, use the PUK code to unlock the SIM card.
Unable to enter information into the phone book.	The memory of the phone book is already full.	Delete unnecessary data from the phone book.
Unable to select certain features.	Your service provider does not support these features, or you have not applied for services that provide these features.	Contact your service provider.

9. Appendix II Abbreviations and Explanation

GSM	Global System of Mobile Communication
GPRS	General Packet Radio Service
SMS	Short Message Service
WAP	Wireless Application Protocol
FDN	Fixed Dialing Numbers
SIM	Subscriber Identity Module
PIN	Personal Identification Number
PUK	Personal Unblocking Key
IMEI	International Mobile Equipment Identity
MCC	Mobile Country Code
MNC	Mobile Network Code
Call waiting	A service provided by the network, which allows you to answer another incoming call without interrupting the active call, but it is different from conference call. You can only talk to one party while another party is held at the same time.

Call divert	A service provided by the network, which allows you to divert an incoming call to a specified number according to different circumstances.
Roaming	The phone is not used in the area of its local registered network. It includes international and domestic roaming. In this manual it refers to international roaming only.
STK	SIM Toolkit

Technical Specification of W720	
GSM Network	900/1800 MHz
Display Size	10.1 Cm
Battery Capacity	1200 mAh
Charger Specification	Input: AC100-300V/50-60Hz Output: DC 5V /500mA
SAR Value	0.803 W/Kg
Camera Resolution	1.3 Mega Pixel

Limited Warranty Terms and Conditions



Wynncom Digital Devices Pvt. Ltd., (hereinafter referred to as the 'Company') provides this Limited Warranty to the purchaser of the Wynncom mobile handset and original accessories (Battery, Charger, Hands free etc.) supplied in the sales package (hereinafter collectively referred to as the 'Product').

Warranty period

Subject to the conditions specified herein, the Company warrants the Product to be free from defects in design, material and workmanship at the time of its original purchase and for a subsequent period of one year for the Transceiver, six months for the Accessories (Charger/ Battery/ Hands free/ Data cable); all periods commencing from the date of purchase.

How to get warranty service

To obtain warranty services, the purchaser needs to bring the Product to the Company's Authorized Care Centre at his/her own cost, along with the original proof of purchase, bearing unaltered/ unmodified date of purchase and IMEI number.

The Company's Limited Warranty extends only to the original purchaser/ end user of the Product, and is not assignable or transferable to a subsequent purchaser/ end user

Provisions and Exclusions

This Limited Warranty does not cover a) normal wear and tear; b) defects caused by improper handling; c) defects or damages caused by misuse of the Product, including use that is contrary to the instructions provided by the Company set out in the Product's User's Manual; and/or d) other acts beyond the reasonable control of the Company (including but not limited to Force Majeure, Lightening, Voltage surge, etc.)

During the warranty period, the Company or its Authorized Care Centre may repair or replace at its sole discretion, any defective Product(s) or part(s) thereof with new or factory rebuilt/ re-conditioned item(s) and return the Product to the purchaser in working condition. All replaced part(s)/ item(s) shall become the property of the Company.

The repaired or replaced part(s) or item(s) shall stand warranted only for the remaining warranty period since the date of purchase.

The warranty shall cease to exist in the absence of the original proof of purchase, or in case the original serial number/ IMEI is removed, modified or obliterated, or if the Product is damaged due to liquid spillage, exposure to moisture, exposure to extreme thermal or environmental conditions, or if there is a physical damage to the Product, or if the Product was found tampered/ found opened, modified or repaired by anyone other than the Company's Authorized Care Centre.

The warranty terms are subject to change without prior notice.

Except for any liability that cannot be excluded by law, the Company (including its related entities and their respective officers, employees and agents) excludes all liabilities (including negligence), for any loss of profit, business revenue, goodwill, anticipated savings or data, personal injury; or any loss or damage (including loss of opportunity); whether direct, indirect, special or consequential, arising in any way out of the Product.

All disputes are subject to the jurisdiction of courts of Delhi only.

Wynncom Care – 1800 102 9299
9.30 AM to 6.30 PM (Mon-Sat)

Email us at
customer care@wynncom.net
Visit us at www.wynncom.net