

# G3

## User's Manual



**Note:** The content of the manual is correct when it is released, but “**Wynncom Digital Devices Pvt. Ltd.**” reserves the right to modify the technical specification without additional notification. Some content in the manual may be different from the mobile phone, as the accessory software, SIM card or service varies by providers

# Table of Contents

<i>Important safety precautions</i> .....	3
1. Getting to know your touch phone .....	10
2. Starting up the device .....	11
3. Introduce the basic phone function.....	13
7. Basic Functions .....	16
1. Make a Call.....	16
8. Phone book.....	17
9. Message .....	19
10. Call log .....	21
11. E-mail.....	21
12. Multi-Media.....	23
13. Browser .....	27
14. Clock .....	28
15. Calculator .....	29
16. Calendar .....	29



### ***Important safety precautions***

This section contains important information on the safe and efficient operation of your mobile device.

For your safety, please refer to the guideline prior to using the phone.

Note: Failure to comply with the following precautions may be dangerous or illegal.

#### **Drive safely at all times**

Do not use a hand-held phone while driving. Park the vehicle first.

#### **Switch off the phone when refueling**

Do not use the phone at a refueling point (service station) or near fuels or chemicals.

#### **Switch off in an aircraft**

Wireless phones can cause interference. Using them in an aircraft is both illegal and dangerous.

#### **Switch off the phone near all medical equipment**

Hospitals or health care facilities may be using equipment that could be sensitive to external radio frequency energy. Follow any regulations or rules in force.

#### **Interference**

All wireless phones may be subject to interference, which could affect their performance.

#### **Be aware of special regulations**

Meet any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger.

## **Water resistance**

Your phone is not water-resistant. Keep it dry.

## **Sensible use**

Use only in the normal position (held to the ear). Avoid unnecessary contact with the antenna when the phone is switched on.

## **Keep your phone away from small children**

Keep the phone and all its parts, including accessories, out of the reach of small children.

## **Accessories and batteries**

Use only approved batteries and accessories, such as headsets and PC data cables. Use of any unauthorized accessories could damage you and your phone and may be dangerous.

If jewelry, keys, beaded chains, or other conductive materials touch exposed battery terminals, this could complete an electrical circuit (short circuit), become very hot, and could cause damage or injury. Be careful when handling a charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects.

- ❖ Never use a charger or battery that is damaged in any way.
- ❖ Use the battery only for its intended purpose.
- ❖ If you use the phone near the network's base station, it uses less power. Talk and standby time are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.
- ❖ Battery charging time depends on the remaining battery charge, the type of battery, and the charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time is noticeably shorter than normal, it is time to buy a new battery.
- ❖ If left unused, a fully charged battery will discharge itself over time.
- ❖ Use only approved batteries, and recharges your battery only approved

chargers. Disconnect the charger from the power source when it is not in use.

Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.

- ❖ Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.
- ❖ Do not leave the battery in hot or cold places because the capacity and lifetime of the battery will be reduced. Try to keep the battery at room temperature. A phone with a hot or cold battery may not work temporarily, even when the battery is fully charged.
- ❖ Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object like a coin, clip or pen causes a direct connection between the + and – terminals of the battery (metal strips on the battery). For example, do not carry a spare battery in a pocket or bag where the battery may contact metal objects. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting.
- ❖ Dispose of used batteries in accordance with local regulations. Always recycle. Do not dispose of batteries in a fire.
- ❖ To ensure while using the phone please do not get the battery charge.
- ❖ During the course of charging, it is normal to find the battery and the phone slightly heat-up. The Phone will automatically protect itself when battery temperature rises so as to control temperature variation.

**Note:** This phone is just charged 50%. Please use up the power and recharge it fully. This is the case with the second recharge. After three repetition, the battery can achieve it' s best performance condition.

## Operating Environment

Remember to follow any special regulations in force in the area you are in, and

always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger. When connecting the phone or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the equipment should only be used in the normal operating position (held to your ear with the antenna pointing over your shoulder).

Extreme heat or cold, Avoid temperatures below -10°C/14°F or above 45°C/113°F

### **Electronic devices**

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone. Consult the manufacturer to discuss alternatives.

### **Pacemakers**

Pacemaker manufacturers recommend that a minimum distance of 15 cm (6 inches) be maintained between a wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research and recommendations of Wireless Technology Research. If you have any reason to suspect that interference is taking place, switch you're your phone immediately.

### **Hearing aids**

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may wish to consult your hearing aid manufacturer to discuss alternatives.

### **SIM AT Service**

SIM Card provides several value-added services.

These functions will only display and work on the menu of the phone when your SIM

card is supported. The content and the terms of the function lists will depend on your network service provider.

Please contact your network service provider (a network operator or the service provider) in regards with availability of any services related to the SIM card, application information and the costs.

### **Other medical devices**

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Switch off your phone in health care facilities when regulations posted in these areas instruct you to do so.

### **Vehicles**

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

### **Posted facilities**

Switch off your phone in any facility where posted notices require you to do so.

### **Potentially explosive environments**

Switch off your phone when in any area with a potentially explosive atmosphere, and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch off the phone while at a refueling point (service station).

Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants, or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often but not always clearly marked. They include the areas below decks on boats, chemical transfer or storage facilities, vehicles using liquefied

petroleum gas, such as propane or butane, areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

### **Emergency calls**

This phone, like any wireless phone, operates using radio signals, wireless, and landline networks as well as user-programmed functions, which cannot guarantee connection in all conditions. Therefore, you should never rely solely on any wireless phone for essential communications like medical emergencies. To make or receive calls, the phone must be switched on and in a service area with adequate signal strength. Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

To make an emergency call: **(For India example: 112,911,100,101,102)**

1. Key in the emergency number for your present location. Emergency numbers may vary by location.
2. Press the Send Key.
3. Inform your location. Do not end the call until given permission to do so.

Certain features like Call Barring may need to be deactivated before you can make an emergency call. Consult this document and your local cellular service provider.

### **Other important safety information**

- ❖ Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.
- ❖ Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.
- ❖ Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the phone, its parts, or accessories.
- ❖ For vehicles equipped with an air bag, remember that an air bag inflates with



great force. Do not place objects, including installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. Improperly installed wireless equipment could result in serious injury if the air bag inflates.

- ❖ Switch off your phone before boarding an aircraft. It is dangerous and illegal to use wireless phones in an aircraft because they can interfere with the operation of the aircraft.
- ❖ Failure to observe these instructions may lead to the suspension or denial of telephone services to the offender, or legal action, or both.

### **Wynncom Authorized Care Centre**

Only qualified service personnel may repair your phone.

It is highly recommended to have a repair service by qualified service personnel.

Use only the approved accessories and batteries.

**Note:** Please use the original components in order to achieve the best use of effects, as the use of non-original components may cause damage to the machinery, in such case company shall not be responsible.

# 1. Getting to know your touch phone

---



## **2. Starting up the device**

---

### **To remove the back cover :**

- Make sure your device is turned off.
- Firmly hold the device with the front panel facing down.
- Slide your finger into the groove at the top of the phone and gently pull open the back cover.

### **To install the SIM card :**

- Remove the battery if it is installed.
- Locate the SIM card slot, and then insert the SIM card with its gold contacts facing down and its cut-off corner facing out of the card slot as shown in the diagram.
- Slide the SIM card completely into the slot (See picture1).

Note: The phone can support one SIM cards. The card will support 3G card and a 2G card. If you need to use 3G operation, please insert a 3G card in the card slot

### **To install a memory card:**

To have additional storage

for your images, videos, music, and files, you can purchase a memory card and install it in your device.

Locate the memory card slot on the upper part of the exposed right panel.

Insert the memory card into the slot with its gold contacts facing down until it clicks into place (See picture2).

### **To install the battery :**

1. Align the battery's exposed copper contacts with the battery connectors at the bottom part of the battery compartment.
2. Insert the contacts side of the battery first and then gently push the battery into place. Replace the back cover.

#### **Charging the Battery**

New batteries are shipped partially charged. Before you start using your device, it is recommended that you install and charge the battery. Some batteries perform best after several full charge/discharge cycles.

Note: Only the AC adapter and USB sync cable provided with your device must be used to charge the device.

Connect the USB connector of the AC adapter to the sync connector on your device, and then plug in the AC adapter to an electrical outlet to start charging the battery.

As the battery is being charged while the device is on, a charging icon appears in the title bar of the Home screen. After the battery has been fully charged, a full battery icon appears in the title bar of the Home screen.

Warning: • Do not remove the battery from the device while you are charging it using the AC or car adapter.

• As a safety precaution, the battery stops charging before it overheats.

Power on/off

To power off your phone, press & hold POWER. On release, the Phone options menu opens. Select 'Power off' and confirm.

To power on again, press & hold power

### 3. Introduce the basic phone function

 
---

#### 1. Switch Main Menu style

- (1) In default Home screen, slide your fingertip left and right along the screen to reveal the more home screen.



- (2) On Home screen, click icon on the bottom of the screen (Main menu icon) to enter the main menu screen, slide your fingertip left and right along the screen to reveal the more applications.

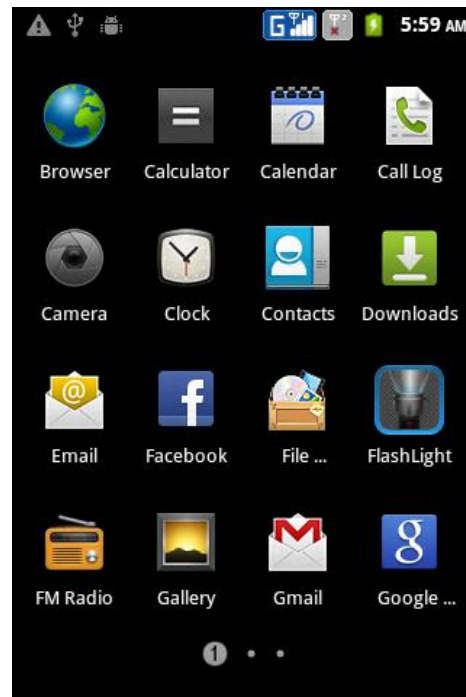

## 2. Home screen

### (1) Read your notifications

When you see a notification in the status bar, touch the bar and slide your finger down the screen to open the list of notifications displayed in the sliding window. Ongoing notifications report activities such as call forwarding ON, current call status, song playing.

 
Notifications report the arrival of new messages, calendar events, and alarms. You can clear notifications list by selecting 'Clear' notifications at the top of the

notifications window.

To open the message, reminder, or other notification, you can touch the items. To close the notifications window, slide your finger up the screen.

## **(2) Create Home screen shortcuts and widgets:**

From the Home screen, touch and hold the blank screen, or click MENU Key and select 'Wallpaper'. Enter the main menu screen, slide your fingertip left to reveal the widget, select a shortcut to some of your saved information (such as a play list), a widget (a clock) for your Home screen.

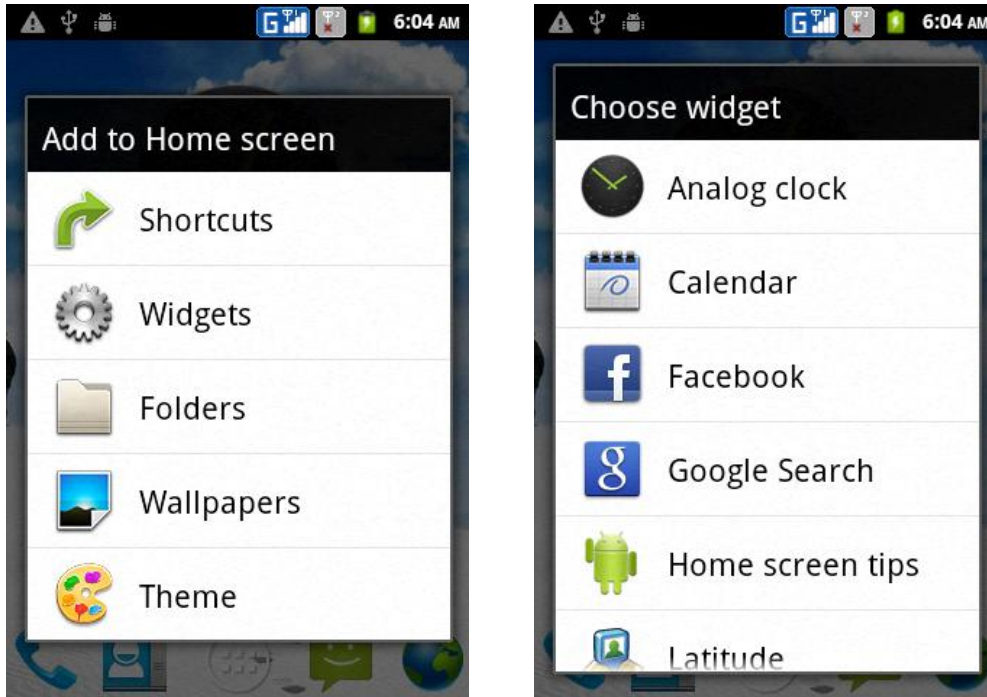

## **(3) Move objects on the Home screen**

·To move an icon or other item on the Home screen, you must first touch & hold it to enter move mode. The object will magnify when it's ready to be moved.

·Without lifting your finger (or you'll drop out of move mode), drag the object to the new position. To move an item to a section of the Home screen not in view, move it to the edge of the screen and hold it there for a moment. The screen view will shift; position the object and release.

## **3. Camera**

All the pictures you can capture or view on your phone are stored on a memory card, which must be installed in your phone. Before you can use the Camera or view pictures in Pictures, make sure you have a card installed.

## 4. GPRS/WLAN network

 
Your device's networking capabilities allow you to access the Internet or your corporate network through WLAN, GPRS, EDGE (if available), or WCDMA (if SIM card supported).

You can also add and set up a VPN or proxy connection.

To use WLAN on your device, you need access to a wireless access point or "hotspot".

Note: The availability and range of your device's WLAN signal depends on the number, infrastructure, and other objects through which the signal passes.


To open the Browser you need to be connected to a network.

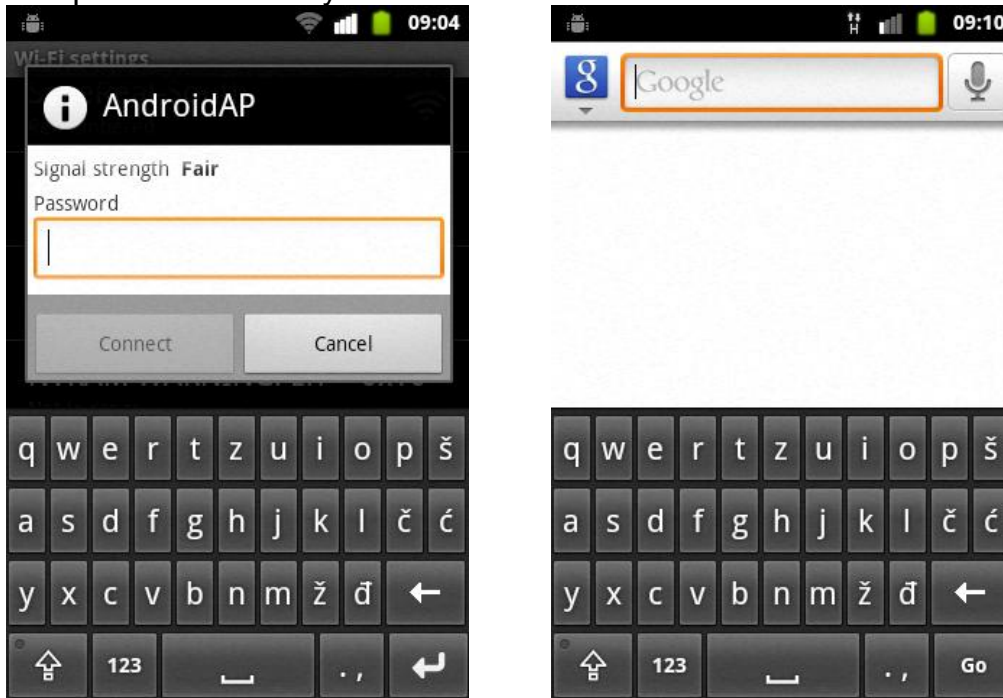

## 5. U-disk storage


This phone supports movable storage, i.e., the U-disk function.

 When the phone is switched on, you see the icon in the status bar on the top of the screen when its connected to a PC by a data line. Touch the bar and slide your finger down the screen to open the list of notifications displayed in the sliding window. Select [USB connected] and touch [Turn on USB storage] to confirm, you can use the phone as a U-disk.

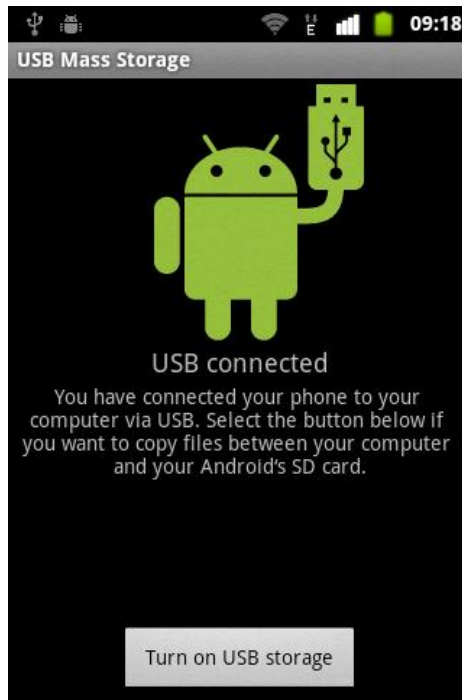

## 6. Music

 Your music is organized into four categories: Artists, Albums, Songs, and Play lists. Select a category to view the lists within each. Once in a category, keep selecting until you reach the music you want to play.

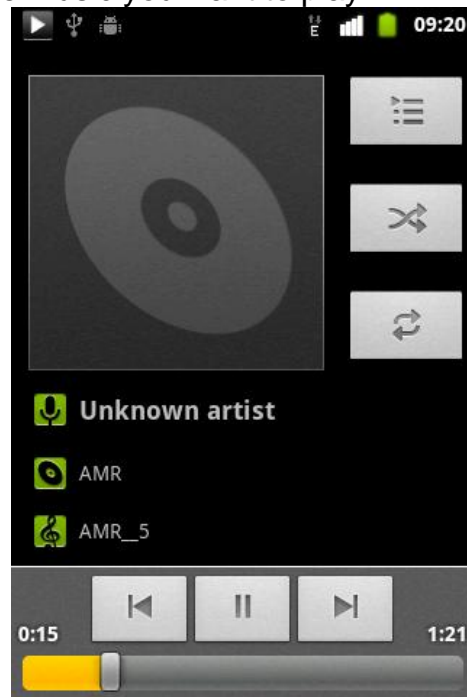

## 7. Basic Functions


### 1. Make a Call

#### 1.1 Emergency Call

 


You can directly dial an emergency service call without SIM card. Different network uses different emergency numbers, please consult your network operations company for more details.

## 1.2 Domestic Call

Enter a phone number, click  make a call by SIM1 or SIM2. If you want to make a long-distance call, please add the area code before the telephone number.

## 1.3 International call

Enter country code & area code (usually area code without "0") & telephone number, click  to make an international call by SIM1 or SIM2.

## 1.4 Answer a Call

When an incoming call arrives, slide  rightward, answer this call.

## 1.5 Refuse a Call

When a call is coming in, slide  leftward, refuse this call.

## 1.6 End a Call

After finishing a call, click  to end this call.

# 8. Phone book

This feature allows you to browse the contacts in the phone book store, edit, delete, call or message. In order to facilitate the records management, the G3 sets a group function. The SIM card storage capacity depending on the card set, the storage capacity of mobile phone memory as the T-flash card installed in the mobile phone set.

- ✧ Search contacts

Mail list interface fixed with a search box, this feature allows you to browse by name. In " search" input to find the name of the first phonetic alphabet; the screen automatically displays contacts containing the letters of the record number.

You can carry out the following operations:

- 1、 View contact: You can view contact details.
- 2、 Call contact : From SIM card 1 or SIM card 2 call contacts.
- 3、 Edit number before call: You can edit number before calling.
- 4、 Text contact: You can add contacts to the recipient.
- 5、 Add to favorites: You can add contacts to favorites.
- 6、 Edit contact: Edit the contact information .Such as: name、 phone

number、 email address.

7、 Delete contact: Delete contact.

8、 Send contact via SMS: Send contact information in short message form

✧ Fast operation

Click the contact image, can use shortcut operations: dialing, sending message.

✧ Long press the menu

Long press contacts menu options include: view contact、 call contact、 edit number before call、 text contact、 add to favorites、 edit contact、 delete contact、 send contact via SMS.

✧ Add contact

1、 press“+”add contact, add contacts can be saved to mobile phone or SIM card

2、 Import contacts: Import from SIM card/SD card.

✧ Delete contacts

With this feature, you can delete one、 several、 or all contacts.

✧ Import/Export contact

1、 Import from SIM card(SIM1/SIM2)

2、 Import from SD card

3、 Export to SIM card(SIM1/SIM2)

4、 Export to SD card

✧ Groups

1、 Long press the added grouping, you can set the group name and

dissolve the group.

2、 Entry for the group, press [ Menu ],you can set “remove members”、 “add members”、 “ringtone”、 and “notification” .

✧ Preferred storage location

Set the preferred business card storage location, can choose:

mobile ,card 1,card 2.

Display options

1、 Only contacts with phones: The only display contacts that have phone numbers

2、 Phone contacts: Display contacts saved in Phone

3、 SIM1 contacts: Display contacts saved in SIM1

4、 SIM2 contacts: Display contacts saved in SIM2

Remarks: When you have added account, you can also display account contact.

5、 Sort list by: You can choose the first name or the last name.

6、 View contact names as: You can choose First name first or Last name first.

## 9.Message

✧ New message

1、 add contact: Direct input number or press“+”,from contact to add, can add one、 many or all.

2、 add content: Input text content or add message templates (The default is four).

3、 send message: press” send by SIM1”/”send by SIM2” or click the menu to send.

✧ New MMS

1、 add contact: Direct input number or press“+”,from contact to add, can add one、 many or all.

2、 add content: Input text content or add message templates (The default is four).

3、 add subject: Click the menu and add subject

4、 add attach: Click the menu add attach, The attach includes: pictures、 capture picture、 videos、 capture video、 audio、 record audio、 slideshow.

5、 send MMS: press” send by SIM1”/”send by SIM2” or click the menu to send.

✧ Insert smiley

This function can insert expression in the content of the text.

✧ Discard

These functions abandon the SMS or MMS.

✧ SMS or MMS save as draft

Pressing the return key causes MMS or SMS to be saved as draft.

✧ Search message

The function can search information matching the message session.

✧ Information session shortcut operation

Click on the image of information session that you can conduct fast operation: Dial、 View contact、 Send a message

✧ Long press a single message options menu

1、 Lock message: You can lock information

2、 Call: You can call the number

3、 Forward: You can forward the message

4、 Copy message text: Can copy the message text content

5、 View message details: You can review the message detail (receiver、

send time、 error code and so on).

6、 Delete message: You can delete individual information.

✧ Long press information session options menu

Long press information session options menu to: View thread、 View contact、 Delete thread

✧ Delete thread

This function can delete all conversations.

✧ Message settings

1、 Storage settings: delete old messages、 Text message limit、 multimedia message limit

2、 Text message(SMS) settings: delivery reports、 message template、 store message in SIM card、 manage SIM card messages.

3、 Multimedia message(MMS) settings: delivery reports、 read reports、 auto-retrieve、 roaming auto-retrieve、 restricted mode.

4、 Notifications: notification、 select ringtone、 vibrate、 broadcast message.

## 10. Call log

- ✧ All calls  
This function can review all calls.
- ✧ Received calls  
This function can review received calls.
- ✧ Outgoing calls  
This function can review outgoing calls.
- ✧ Missed calls  
This function can review missed calls.
- ✧ Both SIMs  
This function can review the SIM card calls.
- ✧ SIM1  
This function can review the SIM 1 calls.
- ✧ SIM2  
This function can review the SIM 2 calls.
- ✧ Long press the options menu
  - 1、 call: You can call contact
  - 2、 edit number before call: You can edit number before calling.
  - 3、 send text message: You can send text message.
  - 4、 view contact: The stored contacts can view the contacts
  - 5、 add to contact: A strange number can add to contacts.
  - 6、 remove from call log: This record can be removed from the mail list.
- ✧ Clear all call log  
This function can clear all call logs.

## 11. E-mail

Learn how to synchronise personal or corporate email account to send email or view email information.

- ✧ Account settings
  - 1、 Standby mode, open up the application list and select an email.
  - 2、 Input address and password, and then select “ next step” .
  - 3、 Follow the on-screen instructions.
- ✧ Send email messages

- 1、 While on Standby mode, open the application list, select “email” “email account”.
- 2、 Press[ **Menu** ] compose.
- 3、 Choose recipient field and enter the name or email address.
- 4、 Select the subject field and enter the subject .
- 5、 Enter text
- 6、 If you want to add sound or picture attachment, press [ **Menu** ] “add attachment” select the file and add
- 7、 Select send to send message

**Precaution:**

If the user is disconnected or not in service area, information will be kept in the information session list.

✧ Check email information

Open the email account, for viewing email that was retrieved earlier, connect to a server to check for new messages. After extracting mail, you can view email offline.

- 1、 While on Standby mode, open the application list, select email
- 2、 Press[ **Menu** ] Refresh, a new email message will be updated to your inbox
- 3、 Select the email message from the information list.

In view of the mail, following options can be carried out:

- 1、 to reply to the message, select reply
- 2、 to forward the mail to other people, press [ **Menu** ] “forward”.
- 3、 to delete message, press [ **Menu** ] “delete”.
- 4、 to mark as unread mail, press[ **Menu** ] “Mark as unread”.
- 5、 to see pictures in the message, select “show pictures”.

✧ To delete the email account

- 1、 Standby mode, open up the application list, select email
- 2、 Touch and hold the account that will be deleted.
- 3、 Choose to delete account.

✧ Add other account

Add a new email account

- 1、 While on Standby mode, open the application list, select “email” “email account”.

- 2、 Press [ **Menu** ] “account”.
- 3、 In the account list interface, press [ **Menu** ] “Add account”.

✧ Custom email account settings

- 1、 While on Standby mode, open the application list, select “email” “email account”.
- 2、 Press[ **Menu** ] “Account settings”.
- 3、 Customize the following options:

General settings:

- (1) Account name: Change the account name.
- (2) Your name: Change your name.
- (3) Signature: set signature to send mail
- (4) Inbox check frequency: setting email check frequency.
- (5) Default account: The mobile phone is set to default for the selected account to send emails.
- (6) Sync size per mail: Set the single message buffer size.

Notification settings

- (1) Email notifications: Notify in status bar when email arrives
- (2) Select tone: choose a new email message tone
- (3) Vibration: phone will vibrate when email arrives.

Server settings

- (1) Incoming settings: Change incoming setting.
- (2) Outgoing settings: Change outgoing setting.

## 12. Multi-Media

Learn to use music, video, camera and picture library.

✧ Music

Use the music player to listen to music. Add music files to mobile phone; download over a network or copy to memory card.






To copy the file to the memory card:

- 1、 Insert a memory card
- 2、 Connect the mobile phone to the computer using the USB port.
- 3、 Open the notification bar and select “USB mass-storage”.
- 4、 After a successful connection, a pop-up window will appear on the computer.
- 5、 Open folder to view files.

6. Copy file from the computer to the memory card.

Play music files

1. While on the standby screen, open the application list and select music.
2. Choose various categories of label card Select the music file.
3. Use the following icons and buttons to control the playing process:

Icon/Button	Function
	Pause playback; Select  continue to play
	Open playlist
	Start random mode
	Change the repeat mode
<b>The volume keys</b>	Adjust the Volume
<b>Menu key</b>	Access options
<b>The progress bar</b>	Moving figure from progress, you can play document from a particular

Create a playlist:

1. While on the standby screen, open the application list and select music.
2. Choose various categories of label card Select the music file.
3. Press [ Menu ] “Add to playlist” “New playlist”.
4. Enter the new name for the playlist, and save.

Using party shuffle:

All the music files can be added to the current playing playlist.

1. While on the standby screen, open the application list and select music.
2. Choose various categories of label card Select the music file.
3. Press [ Menu] “Party shuffle”



4、 If you want to close the party shuffle function, select

The music file is set as a ring tone

If you want to play a playlist as ringtone:



 

- 1、 While on the standby screen, open the application list and select music.
- 2、 Choose various categories of label card Select the music file.
- 3、 Touch and hold the music file, then select “Use as ringtone”.

For the current play music files to set as a ring tone, In the music player screen, press[ Menu ] “Use as ringtone”.



✧ Camera





All the images and videos will be saved in the SD card.

Shoot video

- 1、 While on the standby screen, open the application list and select camera.
- 2、 Hold polka dot  of slid bar, and drag it to the .
- 3、 Take camera lens shootings at objects and adjust.
- 4、 Select  and shoot video.
- 5、 Select  and end the video.The video will automatically save.



Camera definition set




- 1、 In the standby screen, open the application list and select camera.
- 2、 Hold polka dot  of slid bar, and drag it to the .
- 3、 Click on the icon to customize the following options:

Icon/Button	Function
	Select camera
1.0 X	Set the zoom
	Set the white balance
	Set store location (If you want to set location, you need select “Use C
	Set exposure、 picture size、 picture quality、 color effect、 select ISO camera settings

Video recorder definition set

- 1、 In the standby screen, open the application list and select camera.

- 2、 Hold polka dot  of slid bar, and drag it to the .
- 3、 Click on the icon to customize the following options:





Icon/Button	Function
	Select camera
High	Set video quality
	Set white balance
	Set color effect and camera settings

✧ Video player

Learn how to use the video player to play a variety of video.

**Precautions:**

- 1、 Some files are not supported, depending on the mobile phone software.
- 2、 If the file size exceeds the available memory, when opening the file, it will not show.
- 3、 In the standby screen, open the application list and select video player.
- 4、 Choose the video that is to be played.
- 5、 Use the following icons to control the playback process:

Icon/Button	Function
	The full screen video
	Normal mode to display video
	Pause to play the full screen video
	Continue to play



✧ Gallery

Understanding how to administrate all photos and video files from the gallery

## View photos

- 1、 In the standby screen, open the application list and select Gallery.
- 2、 Select folder.
- 3、 Choose the photo to be viewed.

### To view photos:

- 1、 to view more photos, scroll left or right.
- 2、 to zoom in or out , select  or .
- 3、 to start in the selected folder continuous broadcast picture, choose to play slide. Click on the screen to stop the continuous playback.

### ✧ Play video

- 1、 In the standby screen, open the application list and select Video.
- 2、 Choose the video to be played.




## Sharing pictures or video

- 1、 In the standby screen, open the application list and select Gallery.
- 2、 Select the folder and click[ Menu ].
- 3、 Select the picture or video file to be shared.
- 4、 Select "share". You can select file via MMS, e-mail sent or uploaded to the community.

### ✧ Sound recorder

to use mobile phone recorder, set the voice memo as an incoming call ring.

#### Voice memo

- 1、 In the standby screen, open the application list and select sound recorder.
- 2、 Select  to begin recording.
- 3、 Speak to the microphone
- 4、 Select  to end recording and select save.
- 5、 To record more memos, choose again .

## Play voice memos

- 1、 In the standby screen, open the application list and select music.
- 2、 In the play list, choose the voice memo that you want to play.

## 13. Browser

Access common Internet pages, and bookmark them:

### ✧ Browsing the Internet page

- 1、 In the standby screen, open the application list and select Browser.
  - 2、 Access the Internet page:
  - 3、 Press[ Menu ] “Bookmarks” select a bookmark.
  - 4、 Touch screen above the address bar, enter the Internet address, and then click
  - 5、 If you want to return to the previous page, press [ return key ]
- ✧ Open multiple pages
  - ✧ To open multiple pages, and switch between pages:
    - 1、 In the standby screen, open the application list and select Browser.
    - 2、 If you want to open more Internet page, press [ Menu ] “windows” “New window”.
    - 3、 Open in a new window to another web page.
    - 4、 Press [ Menu ] “windows”.
    - 5、 Select the page that you want to visit or press to close the page.
  - ✧ Internet page search text:
    - 1、 In the standby screen, open the application list and select Browser.
    - 2、 Press [ Menu ] “more” “find on page”.
    - 3、 Enter the keyword. Web page will display the text that confirms to the input content.
  - ✧ Copy text from web pages.  
To copy text available from the internet page and insert it into another application
    - 1、 Browse the Internet page, press [ Menu ] “More” “Select Text”.
    - 2、 Drag the finger to select the text that it is required. The highlighted text is copied to the clipboard.
    - 3、 In another application, touch and hold the text input field.
    - 4、 Choose the paste option to insert text into the field.

## 14.Clock

To set event and alarm:

- ✧ Set a new alarm
  - 1、 In the standby screen, open the application list and select Clock.
  - 2、 Press[ Menu ] “Add clock”.
  - 3、 Input each field in the set alarm details ( time, bell, vibration, repetition and label).

4、 Select “Done”.

✧ Stop alarm clock.

The alarm clock rings, choose “Cancel” to end alarm, choose to suspend rings again in 10 minutes snooze alarm.

✧ Remove the alarm clock.

1、 In the standby screen, open the application list and select Clock.

2、 Press [ Menu ] Clock.

3、 Touch and hold to delete an alarm clock.

4、 Select “delete alarm” “OK”

✧ Play alarm even when the phone is in silent mode.

1、 In the standby screen, open the application list and select Clock.

2、 Press[ Menu] “settings” “Alarm in silent mode”.

## 15. Calculator

to carry out basic mathematical operations:

1、 In the standby screen, open the application list and select Calendar.

2、 Use button and contact the basic arithmetic operations.

3、 As for advanced computing, press [ Menu ] “Advanced panel”.

## 16. Calendar

Use the calendar to create activities

In the calendar interface ,press [ Menu ],Click the day 、 week、 month or the calendar to switch view mode.

✧ Create activity

1、 In the standby screen, open the application list and select Calendar.

2、 Press[ Menu] “More” “New event” ,or hold the certain time or date and click “New event”.

3、 Set active items.

4、 Click “Done”.

✧ Viewing activities.

Enter the program, day, week, month view. the activity can be viewed in detail.

✧ Delete activity

1、 In the standby screen, open the application list and select Calendar.

2、 Press[ Menu ] “Day” ,switch to the schedule view.

3、 Click to the event that would be deleted.

4、 Press[ Menu ] “Delete event”.

5、 Click “OK”.

Technical Specification G3	
GSM Network	2G:GSM 900/1800/850/1900 (Quad) MHz
	3G: UMTS/WCDMA 2100(1)/900(VIII) MHz
Display Size	8.9Cm
Battery Capacity	1200mAh
Charger Specification	Input :AC100-240V/50-60Hz Output: DC 5V/550mA
SAR Value	0.563 W/Kg
Camera Resolution	3.0 Mega Pixel With Flash

## **Limited Warranty Terms and Conditions**

Wynncom Digital Devices Pvt. Ltd., (hereinafter referred to as the 'Company') provides this Limited Warranty to the purchaser of the Wynncom mobile handset and original accessories (Battery, Charger, Hands free etc.) supplied in the sales package (hereinafter collectively referred to as the 'Product').

### **Warranty period**

Subject to the conditions specified herein, the Company warrants the Product to be free from defects in design, material and workmanship at the time of its original purchase and for a subsequent period of one year for the Transceiver, six months for the Accessories (Charger/ Battery/ Hands free/ Data cable); all periods commencing from the date of purchase.

### **How to get warranty service**

To obtain warranty services, the purchaser needs to bring the Product to the Company's Authorized Care Centre at his/her own cost, along with the original proof of purchase, bearing unaltered/ unmodified date of purchase and IMEI number.

The Company's Limited Warranty extends only to the original purchaser/ end user of the Product, and is not assignable or transferable to a subsequent purchaser/ end user

### **Provisions and Exclusions**

This Limited Warranty does not cover a) normal wear and tear; b) defects caused by

improper handling; c) defects or damages caused by misuse of the Product, including use that is contrary to the instructions provided by the Company set out in the Product's User's Manual; and/or d) other acts beyond the reasonable control of the Company (including but not limited to Force Majeure, Lightning, Voltage surge, etc.)

During the warranty period, the Company or its Authorized Care Centre may repair or replace at its sole discretion, any defective Product(s) or part(s) thereof with new or factory rebuilt/ re-conditioned item(s) and return the Product to the purchaser in working condition. All replaced part(s)/ item(s) shall become the property of the Company.

The repaired or replaced part(s) or item(s) shall stand warranted only for the remaining warranty period since the date of purchase.

The warranty shall cease to exist in the absence of the original proof of purchase, or in case the original serial number/ IMEI is removed, modified or obliterated, or if the Product is damaged due to liquid spillage, exposure to moisture, exposure to extreme thermal or environmental conditions, or if there is a physical damage to the Product, or if the Product was found tampered/ found opened, modified or repaired by anyone other than the Company's Authorized Care Centre.

The warranty terms are subject to change without prior notice.

Except for any liability that cannot be excluded by law, the Company (including its related entities and their respective officers, employees and agents) excludes all



liabilities (including negligence), for any loss of profit, business revenue, goodwill, anticipated savings or data, personal injury; or any loss or damage (including loss of opportunity); whether direct, indirect, special or consequential, arising in any way out of the Product.

All disputes are subject to the jurisdiction of courts of Delhi only.

**Wynncom Care – 1800 102 9299**

**9.30 AM to 6.30 PM (Mon-Sat)**

**Email us at**

**[customercare@wynncom.net](mailto:customercare@wynncom.net)**