

## User Manual

# G11



Note: The content of the manual is correct when it is released, but “**Wynncom Digital Devices Pvt. Ltd**” reserves the right to modify the technical specification without additional notification. Some content in the manual may be different from the mobile phone, as the accessory software, SIM card or service varies by providers..

# Table of Contents

<b>1. Welcome</b> .....	<b>4</b>
<b>2. Phone Layout</b> .....	<b>4</b>
<b>3 Getting Started</b> .....	<b>5</b>
3.1 Getting to know your touch phone.....	5
3.2 Installing the SIM card, battery, and storage card .....	5
3.3 Charging the Battery .....	8
3.4 Starting up the device .....	8
3.5 Status Icons .....	9
<b>4 Using phone features</b> .....	<b>12</b>
4.1 Turning the phone function on and off.....	12
4.2 Making a call .....	13
4.3 Answering and Ending a call .....	13
4.4 In-call options .....	13
4.5 Using call history .....	14
<b>5 Setting on your device</b> .....	<b>14</b>
<b>6 ActiveSync</b> .....	<b>18</b>
<b>7 Contacts</b> .....	<b>21</b>
<b>7 Exchanging Messages</b> .....	<b>23</b>
<b>8 Internet</b> .....	<b>29</b>
8.1 Ways of Connecting to the Internet.....	29
8.2 Browser.....	29
<b>9 Experiencing Multimedia</b> .....	<b>32</b>
9.1 Camera & Picture.....	32
9.2 Music .....	34
9.3 FM Radio .....	37
9.4 Sound record .....	37
<b>10 Other applications</b> .....	<b>37</b>

10.1 Alarm Clock.....	37
10.2 Calendar.....	38
10.3 Calculator.....	41
10.4 Download.....	42
10.5 SIM card .....	42
<b>Health and Safety Precautions .....</b>	<b>43</b>
<b>Taking Care of Your Device.....</b>	<b>46</b>
<b>How To Resolve Malfunction .....</b>	<b>49</b>
<b>Warranty Card.....</b>	<b>54</b>
<b>DISCLAIMER.....</b>	<b>56</b>

# 1. Welcome

## 1.1 Exciting Features

Congratulations on becoming a proud owner of the Wynncom Wiz G11Android mobile phone. You have now joined the millions of satisfied Wynncom customers spread across the Globe. Your G11 device offers you these exciting features and much more:

- Android 2.3 (Gingerbread)
- 8.9 cm (3.5) Display
- DualCamera(3.0 MP + VGA)
- 1GHz Processor
- External Memory (Expandable up to 32 GB)
- Dual SIM
- 2G Network Support
- Multimedia

## 2. Phone Layout



## 3 Getting Started

### 3.1 Getting to know your touch phone

Use the control buttons on your phone to do the following:

**POWER KEY:** Press POWER to lock the screen and put the phone to sleep on the right side of the phone, press again to wake up the screen and you must slide the lock icon rightward to unlock the screen.

Press and hold POWER to open the phone options menu, from which you can select to power off, restart, or silent mode, airplane mode.

**VOLUME KEY:** Press up or down to open the sound volume controls. Volume is controlled separately for the incoming call ringer and audio/video files:

- On idle screen, when you press the volume controls, the incoming call ring volume slider will open.

- If you are on a phone call when you press the volume controls, the in-call volume slider will open.

- If you are listening to an audio or video file when you press the volume controls, the Media volume slider will open.

While an incoming call is ringing, press the up or down volume control to immediately silence the phone. The caller will continue to hear the ringing until you answer the call.

- Press Volume button to show the volume screen.

If the phone is in vibrating mode, the voice will be muted automatically and the device will vibrate when there is an incoming call.

- To silence your phone quickly, press & hold the down volume button to zero volume.

**BACK/ HOME/MENU KEY:** Press HOME to return the idle screen.

Press MENU to open a list of actions you can take on the current screen.

Press BACK to go back to the previous screen, or to dismiss a dialog box or menu.

### 3.2 Installing the SIM card, battery, and storage card

You need to remove the back cover before you can install the SIM card and battery. Also, make sure to always turn off the power before installing or replacing the SIM card and battery.

#### To remove the back cover

1. Make sure your device is turned off.

2. Firmly hold the device with both hands and the front panel facing down.
3. Push the back cover up with your thumbs until it disengages from the device and then remove.

### **To install the SIM card**

The SIM card contains your phone number, service details, and phonebook/ message memory.

Note: •The phone can be supported the double SIM cards.

•Some old SIM cards may not function with your device. You should consult with your service provider for a replacement SIM card. There may be fees for this service.

1. Remove the battery.
2. Locate the SIM card slot, and then insert the SIM card with its gold contacts facing down and its cut-off corner facing out the card slot.
3. Slide the SIM card completely into the slot.


### **To install the battery**

Your device comes with a rechargeable Lithium-ion battery and is designed to use only manufacturer-specified original batteries and accessories. Battery performance depends on many factors, including network configuration, signal strength, and usage patterns.

Warning: To reduce risk of fire or burns:

- Do not attempt to open, disassemble, or service the battery pack.
- Do not crush, puncture, short external contacts, or dispose of in fire or water.
- Do not expose to temperatures above 60°C (140°F).
- Replace only with the battery pack designated for this product.
- Recycle or dispose of used battery as stipulated by local regulations.

1. Align the battery's exposed copper contacts with the battery connectors at the bottom part of the battery compartment.
2. Insert the contacts side of the battery first and then gently push the battery into place.
3. Replace the back cover.

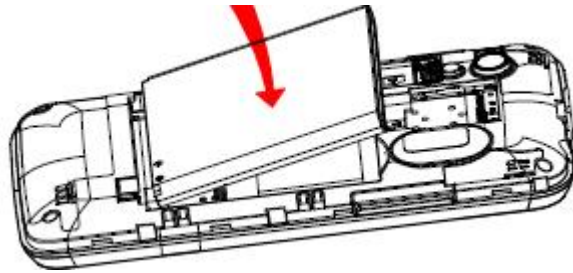

### **To remove the battery**

1. Make sure your device is turned off.
2. Remove the back cover.
3. The bottom of the phone has a notch. Lift the battery by the notch to remove it.

### **To install a memory card**

To have additional storage for your images, videos, music, and files, you can purchase a memory card and install it into your device.


1. Make sure that your device is turned off, and then remove the back cover.
2. Locate the memory card slot.
3. Insert the memory card into the slot with its gold contacts facing down until it clicks into place.

### 3.3 Charging the Battery

New batteries are shipped partially charged. Before you start using your device, it is recommended that you install and charge the battery. Some batteries perform best after several full charge/discharge cycles.

Note: Only the AC adapter and USB sync cable provided with your device must be used to charge the device.

Connect the USB connector of the AC adapter to the sync connector on your device, and then plug in the AC adapter to an electrical outlet to start charging the battery.

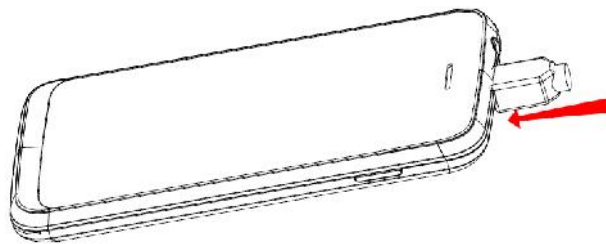

As the battery is being charged while the device is on, a charging icon appears in the title bar of the Home screen. After the battery has been fully charged, a full battery icon appears in the title bar of the Home screen.

Warning: • Do not remove the battery from the device while you are charging it using the AC or car adapter.

- As a safety precaution, the battery stops charging before it overheats.

### 3.4 Starting up the device

#### Power on/off


To power off your phone, press & hold POWER. On release, the Phone options menu opens. Select 'Power off' and confirm.

To power on again, press & hold POWER.

#### Screen sleep

After a period of inactivity, your screen will go to sleep (display will turn black). In sleep, your phone uses less battery power. You can control this behavior:


#### Set screen timeout period

1. On the Home screen, touch  and select Settings.
2. Select Display option.



3. Select Screen timeout. Select a time from the menu.


#### Prevent sleep while charging

1. On the Home screen, then touch  and select Settings.
2. Select Applications, and then select Development.
3. Select 'Stay awake' check box.

#### Lock screen & put phone to sleep

Except when on a phone call, on any screen, press POWER (immediately). While not on a call, to lock your control buttons and screen from accidental touch activation, press POWER.

You can increase the security of your phone by setting a screen unlock pattern. Once set, in order to unlock your screen, you'll have to draw the correct unlock pattern. You can set your screen unlock pattern as follows:

1. On the Home screen, touch  and select Settings.
2. Select Location & Security -> Screen unlock pattern.
3. Set or change your unlock pattern by selecting either Set unlock pattern or Change unlock pattern, as applicable.
4. Follow the prompts to define your pattern.



Note: You must slide your finger along the screen to create the pattern, not select individual dots. Connect at least four dots.












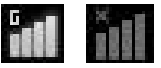






When you unlock your screen, if you want your pattern to be hidden as you draw it, clear 'Use visible pattern' check box.

### **3.5 Status Icons**
 
#### **Connection status icons**

Along the top of your phone screen is the status bar. On the left side, icons will appear, notifying you of a new message, upcoming calendar event, or something else you should notice. On the right side of the status bar, you'll see connection status icons.

	New SMS or MMS		Sign-in/sync error
---	----------------	---	--------------------

	GSM signal, no signal		Song is playing
	GPRS service connected, data flowing		WLAN service connected
	Edge service connected, data flowing		Wireless services are off (Airplane mode)
	Call in progress		Silent mode
	Missed call		Battery is low
	Speakerphone is on		Battery is very low!
	Connected the PC		Battery is charging,
	Connected the earphone		Bluetooth is on
	No SD card		Alarm is on

### Read your notifications

When you see a notification in the status bar, touch the bar and slide your finger down the screen to open the list of notifications displayed in the sliding window.

Ongoing notifications report activities such as call forwarding ON, current call status, song playing.

Notifications report the arrival of new messages, calendar events, and alarms. You can clear notifications list by selecting 'Clear' at the top of the notifications

window.

To open the message, reminder, or other notification, you can touch the items. To close the notifications window, slide your finger up the screen.

**Notes: On the home screen, touch the bar and slide your finger down the screen to open the list of notifications displayed in the sliding window, you can touch the icon on the top of the screen (such as WLAN, Bluetooth, Airplane mode, Brightness) to open or close the selected function, sliding your finger left or right to select more functions.**



: Adjust the brightness



: Adjust the timeout



: Activate or deactivate Auto-rotates



: Activate or deactivate WLAN



: Activate or deactivate Bluetooth




: Activate or deactivate the airplane mode

## Home screen

The Home screen is your starting point for using all the applications on your phone.

You can customize your Home screen to display applications, shortcuts, and widgets as you like.

1. Touch the application tab () with your fingertip to reveal the application icons.


2. The Home screen actually extends beyond the screen width. On Home screen, slide your fingertip left and right along the screen to reveal the full width of the Home screen. This additional space gives you more room to customize Home with applications,

shortcuts, and widgets.

### 3. Create Home screen shortcuts and widgets:

- From the Home screen, press MENU to select 'Add', The Add to Home screen menu opens.
- Select an Application shortcut, a Shortcut to some of your saved information (such as a play list), a Widget (a clock or picture frame), Folders or Wallpapers for your Home screen.
- The application, shortcut, folder, or widget appears on the screen. If you selected Wallpaper, you'll be asked to select a picture.

Tip: To create an application shortcut quickly, touch the application tab to reveal all the application icons, then touch & hold an application icon. Its shortcut is added to the Home screen; close the application tab to see it.

4. To remove a shortcut or widget from your Home screen, touch & hold the item to enter "move mode". The application tab turns into a Trash button . Drag the item to the Trash button and release. You'll know when your item is in the Trash because the item and the tab will turn red.

### 5. Move objects on the Home screen

- To move an icon or other item on the Home screen, you must first touch & hold it to enter move mode. The object will magnify when it's ready to be moved.
- Without lifting your finger (or you'll drop out of move mode), drag the object to the new position. To move an item to a section of the Home screen not in view, move it to the edge of the screen and hold it there for a moment. The screen view will shift; position the object and release.


## 4 Using phone features

### 4.1 Turning the phone function on and off

#### To enable or disable Airplane Mode

In many countries, you are required by law to turn off the phone while on board an aircraft. Another way to turn off the phone function is to switch your device to Airplane Mode.



When you enable Airplane Mode, all wireless radios on your device are turned off, including the phone function, Bluetooth, and WLAN.

1. Touch  -> Settings -> Wireless & networks -> Airplane mode.
2. Touch 'Airplane mode' to enable or disable.

When you disable Airplane mode, the phone function is turned back on and the previous state of Bluetooth and WLAN are restored.

#### 4.2 Making a call

On Home screen, touch  icon to enter the dial screen.

Touch the on-screen dial pad to enter a number, touch  button to delete numbers you've entered. Touch & hold  to delete all the numbers in the field.

To dial a number, touch 'Call' button (Green icon) to select SIM1 card or SIM2 card to make a call. To end a call, touch 'End' button (Red icon).

1. Call log tab: Select an entry listed in the log to call the number.
2. Contacts tab: Contacts with phone numbers are listed. Select a contact, and then select the phone number to dial the call.
3. Favorites tab: Favorite contacts with phone numbers are listed. Select a favorite, and then select the phone number to dial the call.

#### Calling voice mail

Number 1 is generally reserved for your voice mail. Tap and hold this button on the Phone screen keypad to call voice mail and retrieve your voice mail messages.

#### 4.3 Answering and Ending a call

When you receive a phone call, the incoming voice call screen will appear, allowing you to either answer or ignore the call.

1. To answer an incoming call, drag right to answer (Green icon) the incoming call.
2. To reject a call, drag left to decline (Red icon) the incoming call.

#### 4.4 In-call options

While on a call, reveal the in-call options: Speaker, Mute, Hold, End and More.

Note that if Bluetooth services are on and you are connected to a hands-free device, the more menu indicator will show Bluetooth on.

1. Speaker: To use the speaker, select 'Speaker' so it shows a green bar. To turn it off, select it again so the bar is unfilled. The status bar will display this icon when the speaker is on.
2. Mute: To mute your side of the conversation, select 'Mute' so it shows a green bar.

To turn it off, select it again so the bar is unfilled. The status bar will display this icon when Mute is on.

3. Hold: To put an active call on hold, select 'Hold' so it shows a green bar. To resume the call, or take the call off hold, select it again so the bar is unfilled. If you take a call while already on a call, the first call will be placed on hold automatically. The status bar will display this icon when a call is on hold.

4. Add call: If you need to dial the phone number while on a call, touch 'Add call'.


5. Incoming call: During call in progress, if you are on a call when another call comes in ("incoming call"), you have a few choices:

- Answer the incoming call and place the call in progress on hold. To switch calls at any time, touch 'Swap' icon.
- If you don't want to interrupt your call in progress, then touch 'End'.
- If you have one call in progress and one caller on hold, to end both calls, press MENU and touch 'End all calls'.


6. While on a call, you can be conference callers.

Note: Whether the group call function can be used depends on whether the network operator supports and provides such function as well as whether you have applied for such function. Please contact network operator for details.

#### 4.5 Using call history

1. The missed call icon  appears in the title bar when you missed a call.
2. Use 'Call log' tab to check who the caller was, or view all your dialed numbers, and received calls. To open 'Call log' tab, touch 'Call log' button in the phone screen to enter the call history list.
3. Scroll to select the contact or number you want to dial, touch 'Call' button.
4. Tap and hold the selected contact you want to call, and then you can make to do the following options of call, edit number before call, send text message, add to contacts or remove from call log phone on the shortcut menu.


## 5 Setting on your device

Control phone-wide settings from the Home settings screen: touch  and select Settings.

### 5.1 Dual SIM settings

You can select to activate or deactivate the SIM card you want to open.

## 5.2 Wireless & networks

**Airplane mode on/off:** When airplane mode is selected, all wireless connectivity is off. This icon  will display in the status bar when airplane mode is selected.

**WLAN on/off:** Select this check box if you prefer to use WLAN for your data connection.

**WLAN settings:** Open the WLAN settings screen; select it from the network list. Provide your username or password if required.

**Bluetooth on/off:** Use this check box to turn Bluetooth services on or off.

**Bluetooth settings:** With Bluetooth services on, you can open the Bluetooth settings screen to:

- Rename your device.
- Select to be discoverable for up to 120 seconds, or not discoverable.
- Set how long device will be discoverable.
  - Rescan for devices.

**VPN settings:** Add or edit network Access Point Names (APNs) - Do not change this setting unless advised to do so by your wireless operator!

### Mobile network:

- Select data roaming capability.
- Select a wireless operator network - Scan for all available networks, or select a network automatically.

## 5.3 Call settings

Note that when you open 'Call settings' for SIM1 or SIM2, your current settings are fetched, which can take a few moments.

**Fixed Dialing Numbers:** This feature allows you to restrict outgoing calls to a fixed set of numbers. To enable this feature you must know the SIM PIN2 code for your phone. You can get this number from your wireless operator, assuming this feature is supported.

**Voicemail service:** Select to set a voicemail number that isn't being read from the SIM card.

**Call forwarding:** Select how you want busy, unanswered, and unreachable calls to be handled. There is also an option to Always forward.

**Call barring settings:** Restrict to answer or dial the call in any situation. You need to apply to the network operator for opening the international long-distance function and get network restricting code for barring setups.

**Additional settings:** From this setting you can set your Caller ID preference and turn on/off call waiting.

## **5.4 Basic phone settings**

### **Sound**

Select one user profile and enter the following options:

**Vibrate:** Select to have your phone vibrate for incoming calls.

**Volume:** Select to open the volume control, and then slide your finger along the volume bar to set ringtone, an incoming call ring, in-call, alarm, media or notification volume.

**Phone ring tone:** Select to decide on a ring tone to use for incoming calls. Note that you can override this setting for individual contacts in the Edit contact details screens.

**Notification ring tone:** Select a ring tone to use for a notification (e.g., new message). Note that you can override this setting for new Calendar event notifications, text and multimedia message notifications. Go to the applications settings screens to select specific ring tones.

**Audible touch tones:** Select to have a tone sound when you use the on-screen Dialer.

**Audible selection:** Select to have a sound play when you select an item on the screen either using touch.

**Screen lock sounds:** Select to have a sound play when locking and unlocking the screen.

### **Display**

**Brightness:** Select to open the brightness control, and then slide your finger along the brightness bar to set the level. In sunlight, increase the level.

**Auto-rotate:** Activate or deactivate the auto rotate.

**Screen timeout:** Select to decide how long your phone must be inactive before the screen turns off.

### **Location & Security**

**Use wireless networks:** Select a source for determining your location: Wireless networks.



**Set up screen unlock:** Create a pattern you will be asked to draw before your screen will unlock. You can select to make the pattern visible or invisible as you draw it. Or you can set the PIN, password to lock your phone.

**Set up SIM card lock:** Lock your SIM card for extra security. You can also change your SIM card PIN from this screen. If you don't know your SIM PIN, you can obtain it from your wireless operator.

**Visible passwords:** Select to have your password display as you type it.

### **Applications**

**Unknown sources:** Select this check box if you want the ability to download applications from the Web. To ensure your personal data and phone remain secure; it is recommended you not select this check box.

**Manage applications:** View all the applications stored on your phone and how much space they occupy. Select a specific application to:

1. Clear your user data (if you have any associated with a particular application).
2. Disassociate the application with any actions.
3. Uninstall- If you've downloaded an application from the other sources, you will be able to uninstall it from this screen by selecting Uninstall.

**Development:** If you are an application developer, you may be interested in these settings:

1. USB debugging: If you want to be able to communicate with your phone directly via USB, select 'USB debugging' check box.
2. Stay awake: To prevent your phone from sleeping while charging (via power adapter or USB), select 'Stay awake' check box.

### **Accounts & sync**

Turn on/off synchronization for all services.

### **Privacy**

You can select to reset your phone to factory settings. This will erase all your data from the phone and require you to sign in and go through the setup screens to use any of the applications.

### **Storage**

View and manage the data storage on your phone.

Monitor and manage the use of your memory card from this screen:

1. View how much space you are using on your memory card.
2. Select to use your memory card as USB mass storage when your phone is connected to your computer (selected by default)
3. Unmount/eject your memory card from your phone. Note that when your phone is connected to your computer via USB, you cannot view pictures or play any media stored on the card from your phone.

Internal storage: Reports how much internal storage is free.

### **Date & time**

Set time, time zone, and date: Use Automatic unless you need to override the network values.

Time format: Select from 12 or 24 hour formats.

Date format: Select from a variety of formats.

### **About phone**

View your phone Status: This screen lists a variety of information, including your phone number, the network you are currently using, the type of network, signal strength, whether you are roaming or not, any WLAN addresses you're connected to, and more.

View the model number and version information for your phone.

## **6 ActiveSync**

### **6.1 Data synchronization**



Some applications on your phone (Calendar, and Contacts) give you access to the same personal information that you can add, view, and edit on your computer using Web applications. This means that when you add, change, or delete your information in any of these applications on the Web, the updated information also appears on your phone, and vice versa. Also, if you lose your phone or if your phone is destroyed, your personal information is not lost and will appear, as before, on a replacement phone.

This mirroring of information happens through over-the-air data synchronization, or data "syncing". Data syncing occurs in the background and shouldn't ever get in your way. You'll know your data is being synchronized when you see this icon in the status bar:

Because sending large amounts of data back and forth over the air can take time and require considerable bandwidth, there are some settings on the phone that allow you to control data sync.

### **Sync by application**

To control synchronization for Calendar, and Contacts, you can do the following:

1. On the Home screen, then touch  and select Settings.
2. Select Accounts & sync. When any of the applications are synchronizing, you will see the “sync” icon . You will also see the last time your data was synchronized.
3. By default, the personal information in Calendar and Contacts will sync whenever you make a change or receive a new message. You can change this behavior:


Auto-sync: When selected, Auto-sync will sync Calendar and Contacts automatically, as you make changes or receive new messages.

When OFF, information will not be synced automatically, although you can force sync by using the individual application check boxes described below.

Calendar: Clear this check box to exclude Calendar from auto-sync.

Contacts: Clear this check box to exclude Contacts from auto-sync.


4. Sync problems:

If you see this icon  to the left of the sync check box, then there was a temporary problem with the data synchronization. Check your data connection and try again later.

## **6.2 Bluetooth**

You can use Bluetooth to send and receive calls using a headset or hands-free car kit.

### **Turn on Bluetooth services**

1. On the Home screen, then touch  and select Settings.
2. Select Wireless & networks, and then select ‘Bluetooth’ check box to turn on Bluetooth services.
3. When on, the Bluetooth icon appears in the status bar.

### **Discoverability**

By default, your phone is not “discoverable”. This means other Bluetooth devices will not see your phone in their scans for Bluetooth devices. If you make your phone discoverable, it will be visible to other Bluetooth devices for up to 120 seconds.

To make your phone discoverable:

1. Make sure you have turned Bluetooth on.
2. Select Settings > Wireless & networks> Bluetooth settings.
3. Select 'Discoverable' check box to make your phone visible to other Bluetooth devices for 120 seconds (as default).
4. Select 'Discoverable' again during the 120 seconds to make your phone undiscoverable.

### **Name your Bluetooth device**

1. Make sure you have turned Bluetooth on.
2. Select Settings > Wireless & networks> Bluetooth settings > Device name.
3. Type the name for your device in the dialog box, and then select 'OK'.
4. Your new device name appears on the Bluetooth settings screen.

### **Pair & connect with Bluetooth devices**

Before your phone can communicate with a Bluetooth headset or hands-free car kit, the devices must "pair", then "connect":

1. Make sure you have turned Bluetooth on.
2. Select Settings > Wireless & networks> Bluetooth settings.
3. Your phone starts scanning for Bluetooth devices within range. As they are found, the devices appear in the list of Bluetooth devices.
4. To pair with a device in the list, select it.
5. Type the device's PIN, and then select 'OK'.
6. Once paired, select the device name to connect. You can also touch & hold the name to open the context menu, and then select Connect.
7. Pairing and connection status appear under the device name.
8. Once the other Bluetooth device shows "connected" status, you can start using it to make and receive phone calls.
9. To disconnect or unpair with a device, touch & hold the device to open the context menu. Select Disconnect or Unpair, as appropriate. If you select 'Unpair' when connected, you will be disconnected as well.

Notes: The phone supports only the headset and hands-free Bluetooth profiles, so if you try to connect to a device that is not a headset or hands-free car kit, then you will receive an "unable to connect" message.


If you pair with a second headset while connected to the first, the first headset will

remain connected. To switch connection to the second headset you must manually select that headset again after pairing.

### **Rescan for Bluetooth devices**

If you want to update the list of Bluetooth devices, select 'Scan for devices'.

## **7 Contacts**

The contacts on your phone are synced with your account contacts stored on the Web. To view the contacts on your phone, touch .

Contacts belonging to a specific group (you can choose which group) are listed in the Contacts tab. Only those contacts you star as "favorites" are listed in the Favorites tab. Browse through your contacts by sliding your fingertip up and down on the screen. Another way to find a contact quickly is to use "Search" (touch MENU and select "Search"), the quick search tab appears on the top of the screen, input the first letter of the name you're looking for, the matching contacts are appeared on the screen.

From the Contacts tab, you can:

1. Take action on a contact: Touch & hold the contact's name to open the context menu. From the menu you can select to view the Contact details screen, call the contact's number, send a text message, add or remove to favorites, edit the contact details, or delete the contact.
2. Go to Contact details: Select the contact's name to open the Contact details screen, where all screen the information you've saved for this contact is displayed.

### **Add a contact**

1. Enter the contact list, press MENU and select 'New contact'.
2. Select the account you want to store.
3. Add all the information you want to store for this contact in the appropriate fields. You must add some information to save a contact. To change a default label, select the label name to open the label menu. Select a different label or create a custom label. To add more fields, select + more info.
4. Create a contact in your phone memory; you can assign a Caller ID icon to your contact by touching Caller ID icon. The Pictures application opens. Navigate to a picture and select it, size the cropper with your fingertips. When finished, select 'Save'.

The picture is associated with your contact. If you do not assign an icon, a default android icon will be assigned.

5. To save your contact, press BACK, or touch 'Done'.

### **Assign favorites**

Use Favorites as a way to display only those contacts you contact most frequently. To add a contact to Favorites:

1 From Contacts, touch & hold the contact you want to add to Favorites. The context menu opens.

2. Select 'Add to favorites'.

3. Now your contact will be listed in Favorites. Their details screen will also display the colored star.

### **Edit contact details**

You can always make changes to the information you've stored for a contact:

1. From Contacts, touch & hold the contact whose information you want to edit. The context menu opens.

2. Select 'Edit contact'. The Edit contact screen appears.

3. Make your edits, then press 'Done'.

### **Communicate with a contact**

From Contacts you can quickly call or text a contact's default number, as displayed below their name on the screen. However, to view all the information you've stored for a contact, and to initiate other types of communication with that contact, open the Contact details screen. To open a contact's details screen, simply select their name from Contacts.

1. Call a contact: From the contact list, touch & hold the contact you want to call. Select 'Call contact' to dial that contact's primary number (first in the list on their details screen).

2. To dial a different number for the contact, select the contact's name, and then select the number on their details screen and then touch 'Call' icon.

3. Send a text or multimedia: To send a text or multimedia message to a contact, you must have a message to a contact mobile number stored for them in contact details. From the Contact details screen, select a phone number and click 'Message' icon, A Compose screen opens for your new message. Complete your message and select

'Send'.

4. Send email to a contact: To send an email message to a contact, you must have an email address stored for them in their contact details.


- Select the contact you want to email. Their Contact details screen opens.
- In the Send email section, select the email address. If you are fetching POP3 or IMAP email accounts to your phone, then select the account you wish to use to send. A Compose screen opens for your new message.
- Complete your message, select 'Send'.

### **SIM contacts importer**

If you have stored names and phone numbers on your SIM card, you can add these to the Contacts stored on your phone by selecting this settings option. From the contact list, press MENU to select 'More >Import/Export'.

## **7 Exchanging Messages**

### **7.1 SMS and MMS messaging**

To open the SMS & MMS Messaging application, on the Home screen, then touch  to enter the messaging list.

#### **About text and multimedia messages**

SMS messages are also know as "text" messages and can each be around 160 characters. If you continue to type after the limit is reached, your message will be delivered as one, but count as more than one message. These are called "concatenated" messages.

MMS messages are also known as "multimedia" or "picture" messages and can contain text, picture, audio, and video files.

When you compose a message, the phone will automatically convert a text message into a multimedia message as soon as you add a subject or an attachment, or if you address the message using an email address rather than a phone number.

#### **View the message from the message list**

Select a message thread in the list to open it for reading. When open, the individual messages appear stacked on the screen, much like with instant messaging conversations (or chats).

Note that messages you send are also listed in the Read view.

## 1. Reading multimedia messages

If you have selected to auto-retrieve your multimedia messages, then both the message header and body will download.

If you are downloading only the headers, then you must first select the Download button to retrieve the message body. If you are concerned about the size of your data downloads, you can check the message size before you download.

Once the message has downloaded, select the “play” button to view the message.

From a message read view, you can do the following:

1. To view details about a particular message, in the Read view, touch & hold the message to open the context menu. Select View message details.

2. Reply to a message: Simply start typing your message in the text box at the bottom of the screen to reply to a message. You can always press MENU and select to add a subject or an attachment to convert it to a multimedia message. Select ‘Send’ when ready.

3. Links in messages: If a message contains a link to a Web page, it will be selectable. To view the Web page in the Browser, simply select it.

4. Delete messages: Your messages will be saved until you explicitly delete them.

Delete one message in a thread - With the message thread open in Read view, touch & hold the individual message you want to delete to open the context menu. Delete

all messages in a thread - With the message thread open in Read view, press MENU > Delete threads. You can also delete an entire thread from the message list by pressing & holding the thread to open the context menu, then select ‘Delete’.

Delete all message threads - From the message list, press MENU and select Delete threads.

## **Compose text and multimedia messages**

1. Press MENU and select ‘Compose’. The Compose screen opens.

2. Add recipients by typing a name, phone number, or email address in the ‘To’ field. Matching contacts will appear. Select the recipient or continue typing. Add as many recipients as you wish. If you send the message to an email address, the message will automatically convert from a text to a multimedia message.

3. To add a subject, press MENU and select ‘Add subject’. If you add a subject, the message will convert to a multimedia message.



4. To add an attachment, press MENU and select 'Attach'. Adding an attachment will always convert the message to a multimedia message. Select from audio or picture files. You can select to take a new picture if you want, or record an audio file. Any recordings you make will be stored automatically in the Music application in a play list named "My recordings". To remove an attachment, select the attachment's 'Remove' button.

5. Type your message. As you type, you'll be able to track how many characters/messages you're creating. Remember that text messages have a limit around 160 characters. Once you go over that limit, a new message is actually created but automatically joined into one when received.

6. Select 'Send' when ready. You can also save a draft.

7. As your message sends, progress displays in the title bar. If you see this icon to the right of the message, it means your message is still being delivered.

### **Save message as draft**

While composing, press BACK, your message automatically saves as a draft.

### **Text and multimedia message settings**

To set text and multimedia message preferences, from the message list, press MENU and select 'Settings'. You can set the following from this screen:

#### 1. Storage settings

Delete old message: Delete old message as limits are reached.

Text /multimedia message limit: Set Text /multimedia message per conversation.

#### 2. Text message settings

Delivery reports: To receive a report on the delivery status of your message, select this check box.

Manage SIM card messages: Text messages can also be stored on your SIM card. The exact SIM card number depends on your card, but it is usually around 25-50. To view messages on your SIM card, delete them, and copy them to your phone memory, select this setting.

#### 3. Multimedia message settings

Delivery reports: To receive a report on the delivery status of your message, select this check box.

Read reports: To receive a report on whether each recipient has read or deleted the

message without reading it, select this check box.

**Auto-retrieve:** To retrieve all your MMS messages automatically (the header plus the message will download to your phone), select this check box. If you clear this check box, then only the message headers will be retrieved and display in your message list. You can retrieve the full message by selecting the Download button that displays in the header. Once the message has downloaded, select the “play” button to expand the message.

**Roaming auto-retrieve:** If you are concerned about data traffic and just want the message headers to download while roaming, clear the Roaming auto-retrieve check box. Otherwise, you can select this check box to have your messages download even while roaming.

#### 4. Notification settings

You can receive a notification each time you receive a new message.


Select ‘Notifications’ check box to receive a notification in the status bar when a new message arrives. If you want your phone to ring when a new message arrives, select that check box as well. Select Ring tone to open the ring tone menu and select a ring tone specific to new text and multimedia message notifications. Note that when you check a ring tone, it plays briefly.

If you want your phone to vibrate when you receive a new message, select ‘Vibrate’ check box.

## 7.2 POP3 and IMAP email accounts

### Add an email account

You can fetch messages from up to five POP3 or IMAP accounts. Follow these steps:

1. On the Home screen, then touch  and select Email application.
2. The Set up new account screen appears.
3. Type your account email address and password.
4. If you want, select the Send email from this account by default check box. This setting only applies if you have more than one POP3 or IMAP account set up.
5. Select ‘Next’.

If you have a popular email account, the application will set everything up for you! Before you go to your Inbox, you can name the account (if you don’t, your email address will be used). You are also asked to type your name as you want it to display

on outgoing messages. You must complete this field before you can select 'Next' and go to your Inbox.

For less popular accounts, follow the prompts to type the email server, protocol, and other account information yourself. After your account settings have been verified, select 'Next' to go to your Inbox.

6. To add more accounts (up to five), from an Inbox or your Accounts screen, press MENU and select 'Add account'.

### **Use your POP3 and IMAP email account**

Once you've set up an account, you can do the following:

1. Refresh Inbox: From the Inbox, press MENU and then select 'Refresh' to update your Inbox with any previously-unfetched email.

2. Read email: You can display or collapse the messages in your Inbox by selecting Inbox. Unread messages display with a colored band. (Each account you add will use a different color.)

3. Forward, Reply, Reply all: You can forward, reply, or reply all to an email message from the Inbox. From the Inbox, touch & hold the message to open its context menu. Select the action you want to take.

4. Compose new

From the Inbox, press MENU and select 'Compose'.

Add recipients by typing a name or address in the 'To' field. Matching contacts will appear. Select the recipient or continue typing the address. Add as many as you wish.

Type a subject and message.

Select 'Send', 'Save as draft', or 'Discard'. Pressing BACK will also save as draft unless you have not typed anything.

5. Delete message

From the Inbox, Expand the Inbox to display the messages.

Touch & hold the message you want to delete.

Select 'Delete'. Your message is moved to the Trash.

6. Empty Trash: Once you've moved a message to the Trash, to empty messages in the Trash you must delete each message individually. Press MENU and select 'Folders' to enter the Trash.

Note that the message is only deleted from your phone, not from the account server.

7. Remove an email account: You can always remove a POP3 or IMAP email account from your phone. Go to your Inbox, press MENU and select 'Accounts'. Your Accounts screen opens. Touch & hold the account you want to remove to open the context menu. Select 'Remove account'. You will be asked to confirm before the account is removed.

### **Edit account settings**

To open your Account settings screen, do the following:

1. From your account Inbox, press MENU and select 'Account settings'.

2. The Account settings screen appears. You can do the following from this screen:

Account name: Select to change the name of your account as it appears on your Accounts screen.

Your name: Select to change your name as it appears in outgoing email.

Email check frequency: Select this pop-up menu to set how frequently your email account is checked for new messages. Note that whenever you open a folder, email is refreshed, regardless of this setting.

Default account: If you have more than one POP3 or IMAP email account set up on your phone and want to use this account by default when selecting Compose from the Accounts screen, select this check box.

Email notifications: If you want an icon to appear in the status bar when a new message arrives, select this check box.

Incoming server settings: Select Incoming settings if you need to edit the username/password, server, port, or option to delete email from server.

Outgoing server settings: Select Outgoing settings if you need to edit the SMTP server, port, security type, option to require sign-in, or username/password.

### **Add another POP3 or IMAP**

To add another account (you can add up to five), go to your Inbox, press MENU and select 'Accounts'. Your Accounts screen opens.

Press MENU and select 'Add account' another account.

# 8 Internet

## 8.1 Ways of Connecting to the Internet

Your device's networking capabilities allow you to access the Internet or your corporate network through WLAN, GPRS, or EDGE (if available).

You can also add and set up a VPN or proxy connection.

### WLAN

WLAN provides wireless Internet access over distances of up to 100 meters (300 feet).

To use WLAN on your device, you need access to a wireless access point or "hotspot".

Note: The availability and range of your device's WLAN signal depends on the number, infrastructure, and other objects through which the signal passes.

## 8.2 Browser

To open the Browser, touch  and select Browser icon.

The Browser always opens to the last Web page you were viewing. The first time you enter the Browser after powering on, your home page will display.

You can change your home page by pressing MENU and selecting More > Settings > Set home page.

### Zoom and navigation in Web pages

While viewing a Web page, you can press MENU and select More > Settings > Default zoom to set the zoom controls.

Slide your fingertip in any direction to shift your page view.

### The Browse screen

From the Browse screen you can do the following:

1. Go to a Web page: Make sure the focus is not on a text box and then start typing the URL.
2. Add a bookmark: Bookmark the Web page you are currently viewing:
  - Press MENU and select 'Bookmarks'.
  - From the Bookmarks screen, select 'Add'.
  - Confirm the URL and name, and then select 'OK'.

To view all your bookmarks, press MENU and select Bookmarks.

3. Refresh a Web page: To refresh the contents of the current page, press MENU and select 'Refresh'.

## **Open pages in separate windows**

You can keep more than one Web page open by using multiple windows to display the pages. You can open up to eight windows.

Open a new window: From a Web page, press MENU and select 'Windows'. The Current windows screen opens, showing the Web page you started from, plus a "new window". Select 'New window'. Your home page opens in a new window. To return to one of the other windows, press MENU and select 'Windows'. Select the page you want to view.

## **Manage bookmarks**

You can store as many bookmarks as you want on your phone.

Press MENU and select 'Bookmarks'. The Bookmarks screen opens.

1. Bookmark any page: Select 'Add bookmark'. Type a name and location (URL) in the dialog box. Select 'OK'.
2. Send bookmarked page's URL: Touch & hold the bookmark you want to open. The context menu opens. Select 'Share link'. An email Compose screen opens with the URL as the message. Address your message and finish composing and select 'Send'.
3. View bookmarked page: Touch & hold the bookmark you want to open. The context menu opens. Select View page or Open in new window.
4. Edit bookmark: Touch & hold the bookmark you want to e open. The context menu opens. Select 'Edit bookmark'. The edit bookmark dialog box opens. Type your change and select 'OK'.
5. Delete a bookmark: Touch & hold the bookmark you want to open. The context menu opens. Select 'Delete bookmark'. You will be asked to confirm.

## **Set your home page**

You set your home page from the Settings screen:

1. Press MENU and select More > Settings. The Settings screen opens.
2. In the Page content section, select 'Set home page' to open the dialog box.
3. Type the URL of the page you want to set as home, and then select 'OK'.

## **Download Web files and applications**

Before you download any files or applications using the Browser, note the following:

1. All items downloaded form the Web are stored on your memory card, so be sure you have a card installed in your phone before you download from the Browser.

2. The Browser will only allow you to download items that are supported by an application installed on the phone.

Warning! Applications downloaded from the Web can be from unknown sources. You must explicitly “allow” downloading from the Home > Settings > Applications > ‘Unknown sources’ check box.

To protect your phone and personal data, only download applications from sources you trust, such as Android Market.

### **View your downloads**

To see which files or applications you’ve downloaded:

1. From the Browse screen, press MENU and select More > Downloads.
2. The Download history screen appears with the list of downloads. If you have no downloads, nothing will be shown on this screen.

### **Browser settings**

From the Browser screen, press MENU and select More > Settings.

#### **1. Page content settings**

Text size: Select to open the Text size menu. Default setting is Normal, but you can increase the size to Larger or Largest, or decrease to Smaller or Smallest. Note that this text size setting only affects pages you view through the Browser.

Block pop-up windows: Select this check box if you want pop-up windows to be blocked.

Load images: Select this check box if you want images on Web pages to load. For faster page loading, clear this check box.

Auto-fit pages: Select to size pages to the screen automatically.

Open in background: Select if you want links to new pages to open in a new window in the background.

Set home page: Your currently-set home page is shown on the Settings screen. To change your home, select Set home page, type the URL for your home page, then select OK.

#### **2. Privacy settings**

Select one of the privacy settings to clear the following:

Accept cookies: Select this check box if you want the Browser to save cookies. Some Web sites might not work properly with cookies disabled.

Remember form data: Select this check box if you want the Browser to remember text you have typed in forms, so that you can select the same text later rather than retyping it.

### 3. Security settings

Remember passwords: Select this check box to save usernames and passwords to various Web sites.

Clear passwords: Select Clear passwords to clear all your saved passwords.

Show security warnings: Select this check box if you want a warning to be displayed when you are going to an insecure Web site.

## 9 Experiencing Multimedia

### 9.1 Camera & Picture

All the pictures you can capture or view on your phone are stored on memory card, which must be installed in your phone. Before you can use the Camera or view pictures in Pictures, make sure you have a card installed.

#### Load pictures onto your memory card

Read the instructions below to add pictures to your Memory card.


1. Mount your memory card to your computer by doing one of the following: Remove the memory card and insert it into a card reader attached to your computer; or attach your phone to your computer using a USB cable that came in the box.
2. On your computer, find the mounted USB drive and open it.
3. Create a folder at the top-level called "Gallery" or some other descriptive name and open it.
4. Copy .jpg or other image files into this folder. To organize pictures into albums that will display in the Pictures application, create a folder and copy pictures there for each album you want to display.
5. When finished, close the USB drive window and unmount or eject the drive as required by your computer's operating system. You can also go to Home > Settings > Storage, and clear the Use for USB storage check box. Remove the USB cable from your phone and computer.

#### Take a picture

Captured pictures are saved to the "DCIM" folder on your memory card.




Tip: Before you take a picture, wipe the sensor window (on the back cover) to remove any small amounts of oil.

1. To open the Camera, on the Home screen, touch  and select the Camera icon.
2. The Camera opens in capture mode. Frame your picture within the screen and hold the phone steady. Touch Camera button to capture. Continue to hold the camera steady for a second after you hear the shutter sound.
3. Touch the picture and enter the Gallery, you select to save, set as, or share, your picture.

### **View your pictures**

To view the pictures you've captured, as well as any you've stored on your memory card, go to the Gallery application:

1. To open Pictures, on the Home screen, touch  and select Gallery icon.
2. Depending on how many pictures you've stored, they may take a few minutes to load.
3. If you've stored your pictures in folders on your Memory card, then the folders will display as separate "albums". The top left album always contains all the pictures in all the albums.
4. The individual pictures display in a grid in thumbnail format. You can select to display smaller or large thumbnails in Settings.
5. To open a picture in full-screen view, touch the picture. Once in full-screen, select the arrows to scroll through the pictures within that album. If the arrows disappear, touch the picture again to reveal the arrows and zoom controls.

### **Picture options**

You can do the following while in Pictures.

Note: In all the instructions below, you can touch & hold a picture to open the context menu to access all actions, rather than open the picture in full-screen view.

1. View full-screen: Select a picture to open it in full-screen view.
2. Share a picture: In full-screen view, press MENU and select Share.

Select to share your picture via Messaging (MMS), Bluetooth, Email or another application (if you have another application installed on your phone that supports sharing).

3. Set as wallpaper: In full-screen view, press MENU and select Set as.

From the menu that opens select Wallpaper. Touch & hold an edge of the cropper to reveal the sizing arrows, then drag the edge in or out to size. Touch & drag the center of the cropper to move it within the picture. When you're happy with the cropped area, select 'Save'.

4. Set as contact picture: In full-screen view, press MENU and select Set as.

From the menu that opens, select Contact icon. Your contact list opens. Select the contact you want to associate with the picture. Touch & hold an edge of the cropper to reveal the sizing arrows, then drag the edge in or out to size. Touch & drag the center of the cropper to move it within the picture.

When you're happy with the cropped area, select 'Save'. The picture will now appear in the Contact details screen, as well as on any incoming call notifications.

7. Crop picture: In full-screen view, press MENU and select More > Crop.

Touch & hold an edge of the cropper to reveal the sizing arrows, then drag the edge in or out to size. Touch & drag the center of the cropper to move it within the picture. 3 When you are happy with the cropped area, select 'Save'. Select Discard to cancel the crop. The cropped picture is saved to Pictures as a copy. Your original is not touched.


8. Rotate picture: In full-screen view, press MENU and select Rotate. Select from Rotate left (counter-clockwise) or Rotate right (clockwise). Your picture rotates and is saved automatically.

9. Delete picture: In full-screen view, press MENU and select Delete.

The picture will be removed from the Memory card after you confirm.

10. View picture details: In full-screen view, press MENU and select More > Details. The picture details window opens.

## 9.2 Music

To open your music Library, on the Home screen, touch  and select Music icon. Your music is organized into four categories: Artists, Albums, Songs, and Playlists. Select a category to view the lists within each. Once in a category, keep selecting until you reach the music you want to play.

For example, if you select the Artists category, you will see a list of artists in A-Z order. If you select an artist, the list opens to display that artist's albums. Select an album, and the album's song list displays.

## **Load music onto your Memory card**

All the music you can listen to on your phone is stored on memory card. Read the instructions below to add music to your memory card.

1. Mount your memory card to your computer by doing one of the following:  
Remove the memory card and insert it into a card reader attached to your computer; or, attach your phone to your computer using a USB cable that came in the box.
2. On your computer, find the mounted USB drive and open it.
3. Although your phone will find all music files on your memory card, it's advisable to keep the number of files or folders at the root level to a minimum. So, if you wish, create a folder at the top-level called "music" (or whatever you want) to store your files.
4. Open this folder and copy music files into it. If you want, create folders within "music" to organize your music further. If you want to use certain music files as phone, notification, or alarm ring tones.  
Note: If you do not want a ringtone to appear in your music Library but you do want it to be available as a ringtone, and then create the "ringtones", "notifications", or "alarms" folder outside your "music" folder.
5. When finished copying, close the USB drive window and unmount or eject the drive as required by your computer's operating system. Remove the USB cable from your phone and computer.

## **Play back music**

At any level in your Library, touch & hold a listing (a song, artist, album, or playlist) to open the context menu. Select Play to begin play and go to the Playback screen. You can do the following using the Playback screen:

1. Shuffle songs: Shuffle plays songs in random order. Touch to toggle shuffle on and off. When the icon is grey, shuffle is off.
2. Repeat mode: Touch to step through repeat modes: repeat all songs, repeat current song, don't repeat (grey icon).
3. Go to any point in song: Slide fingertip in progress bar to desired point in a song.
4. Playback control: from left to right icons: Go to beginning song, Pause/ resume play and Go to next of song.

If a song is playing while you are on the Library screen, you can switch to the Playback

screen quickly by selecting the lower song bar.

### **Playlists**

You can create as many playlists as you wish. Note that the “Recently added” playlist is a system playlist and cannot be deleted or renamed. Also, if you make any voice recordings as part of a MMS message, they will be stored automatically in a playlist called “My recordings”.

### **Create a playlist on your phone**

1. From the Library, select a category. From the list that appears, navigate to the artist, album, or song that you want on a playlist.
2. Touch & hold the artist, album, or song to open the context menu.
3. Select Add to playlist.
4. In the Add to playlist menu that opens, select New to create a new playlist, or one of the existing playlists.
5. The song(s) are added.

### **Manage your playlists**

Go to the Library screen and select ‘Playlists’. All your playlists appear.

Touch & hold the playlist to open the context menu. You can do the following from this screen: Play, Delete and Rename.

### **Create ringtones from songs**

You can set any of your songs as a phone ringtone:

1. From the Library, navigate to a song you want to use as a phone ringtone.
2. Touch & hold the song in the list to open the context menu.
3. Select Use as phone ringtone. The ringtone is set as your default incoming call ringtone.
4. Now, when you go to Home > MENU > Settings > Audio profiles > phone ringtone, your song will be listed as an option.

### **Delete music from memory card**

All the music you play on your phone is stored on the inserted memory card. From your phone, you can delete music stored on the card:

1. From the Library screen, select the Artists, Albums, or Songs category.
2. Go to the screen that shows the artist, album, or song that you want to delete.
3. Touch & hold the item to open the context menu.

4. Select 'Delete'. You will be asked to confirm that you want to delete the item from your memory card.

### **9.3 FM Radio**

This device provides radio function.


Note: Within doors or shielded environment, the receiving effect of radio may be affected. You can improve the effect in the following ways: Near window, adjust the position of earphone cable or adopt manual adjustment.

### **9.4 Sound record**

The phone can be as sound record.

## **10 Other applications**

### **10.1 Alarm Clock**

To open Alarm Clock, on the Home screen, then touch  and select Clock icon. The Alarm clock offers as many alarms as you want.

#### **Set an alarm**

Two alarms are set up for you, ready to customize. All alarms are turned off by default. Select the check box to turn on the alarm. If no day shows under the set time, the alarm will go off once when the set time is reached.

To begin, select one of the default alarms to open Alarm settings.

Set the following options:

Alarm: Select the check box to turn alarm on (checked) or off (cleared). This is the same check box that appears on the main Alarm Clock screen.

Time: The time the alarm will go off is shown. To change this time, select Time to open the time selector. Tap the + or – buttons and the AM/PM button to set the time you want, and then select Set.

Tip: Touch & hold the + or – buttons to move through the numbers quickly.

Ring tone: The current ring tone selection is shown. Select Ring tone to pick another ring tone that will play when the alarm rings. (When you select a ring tone, it plays briefly.)

Vibrate: Select this check box to have your phone vibrate when it goes off.

Repeat: The current repeat selection is shown. To change the setting, select Repeat and make a selection from the menu. To have your alarm will only go off once at the

set time, don't select any of the options. A one-time alarm is shown on the Alarm Clock screen without any days under the set time.

Delete alarm: To delete the alarm, press MENU and select Delete alarm.


Once your alarm goes off, you will receive an alert with the options to Snooze (for 10 minutes) or Dismiss.

### **Add more alarms**

To add more than alarms, from the main Alarm Clock screen, press MENU and select 'Add alarm'.

### **Change date & time display**

You can change the format of the time displayed in your alarms from the global Settings screen:

1. On the Home screen, touch  > Settings. Scroll down and select 'Date & time'. The Date & time settings screen appears.
2. Use the network-provided values by selecting 'Automatic' check box.
3. Select 'Use 24 hour format' check box if you wish to use that rather than 12 hour format.
4. Select t 'Select date format' option to open the menu of various date formats.

## **10.2 Calendar**

### **Calendar views**

You can view multiple calendars on your phone, so each calendar event is coded with a color. You can view your calendar in a variety of ways. Press MENU to select from Month, Agenda, Week, or Day.

#### **1. Month view**

Days are shown in a month grid. Busy time slots are shown as vertical bars in the corresponding part of the day.

View event details - Select a day to view all the events in that day. This will take you to either the Agenda or Day view, depending on which you last visited. Select the event to view its details.

Edit an event - First select a day to go to either the Day or Agenda view. From there, select the event to view its details. Assuming you have write privileges on an event, press MENU and select 'Edit event' to open the event for editing. Navigate months -

Slide your fingertip up/down, through the days and past the beginning/end of the month to move to the previous/next month.

Create new event- Touch & hold a day to open the context menu. Select 'New event'. You can also press MENU and select 'New event'.

Jump to current day - Press MENU and select 'Today'.

## 2. Agenda view

Events in the current month are shown vertically in a list, one event after the other. Days with no events are not displayed.

Repeating events - Marked with icon following the time or date.

View event details - Select the event to view its details.

Edit an event - First, select the event to view its details. Assuming you have write privileges on an event, press MENU and select 'Edit event' to open the event for editing.

Navigate within the current month - Slide your fingertip up/down.

Jump to current agenda - Press MENU and select 'Today'.

## 3. Week view

Days are shown vertically within the Week view. Time slots are defined horizontally in rows. Events are shown as blocks.

Navigate within the current week -Slide your fingertip up/down.

Navigate to a past or future week - Slide your fingertip left/right.

Jump to current day - Press MENU and select 'Today'. The current time is highlighted.

## 4. Day view

Days are divided into hour time slots. Events are shown tiled and span the time they last. All-day events are displayed at the top of the day list.

Navigate within the current day - Slide your fingertip up/down.

Navigate to a past or future day - Slide your fingertip left/right.

Jump to current day - Press MENU and select 'Today'. The current time is highlighted.

Create new event - Touch an empty time slot to open the new Event details screen.

### **Create an event**

From any of the views, press MENU and select 'New event' to open the new Event details screen.

- Type the information in the fields.

- Select date & time. You can type directly in the date fields if you don't want to step through using the + and – buttons.
- Name that appears in Day view.
- Description can be as long as you like.
- Select a calendar if you display more than one.
- Set a default reminder time.

Press MENU to select 'Show extra options' to set presence and privacy:

- Set online presence: available or busy.
- Select calendar privacy from Default (as defined when calendar was created), Private, or Public.

When finished, select 'Done'. Pressing BACK also saves the event.

### **The View event screen**

From the View event screen, you can do the following:

**View details:** All the information you've entered about the event is displayed on the View event screen.

**Reset reminder:** Select the Reminders pop-up menu to select a new reminder time.

**Add reminder:** Press MENU and select 'Add reminder' to create another reminder for the event. This will not replace existing reminders. You can have up to five reminders per event.

**Delete reminder:** Either select the “-” to the right of a reminder, or press MENU and select 'Delete event' to remove the event from your calendar.

**Edit event:** Press MENU and select 'Edit event' to open the event for editing.

### **Event reminders**

If you have set at least one reminder for an event (you can set up to five), the upcoming event icon will appear in the left side of the status bar to remind you. To view, dismiss, or snooze the reminder, do the following:

1. Touch the status bar and slide your finger down the screen to open the notifications list. The upcoming event name is displayed. If you have only one reminder, the place is also displayed.
2. To read more details about the event, select the reminder. If you have other reminders pending, they will be listed on this screen as well. You can Snooze or Dismiss the reminder(s), or press BACK to keep the reminder(s) pending in the



notifications bar. The snooze time is five minutes.

### **Edit an event**

To edit an event, you must have the View event screen open and you must have created, or have write privileges, for the event.

1. Navigate to the View event screen.
2. Press MENU and select 'Edit event'. If Edit event isn't an option, then you cannot make any changes to that particular event.


Note: If your event repeats, you will be asked to choose which events you want changed (only the current one you're editing, all events in the series, or the current event plus future events).

3. Once you have finished your edits, select 'Done'.
4. To delete the event, from the View event screen, press MENU and select 'Delete event'.

### **Go to today**

From any view, to jump to the screen that shows "today", press MENU and select 'Today'. If you are in the Day or Week view, the current time will be highlighted.

## **10.3 Calculator**

To open Calculator, on the Home screen, then touch  and select the Calculator icon.

The Calculator offers two panels: basic and advanced. Switch back and forth between panels by pressing MENU and selecting 'Advanced panel' or 'Basic panel', as you wish.

### **Calculator panels**

Two calculator's panels are available: basic and advanced. Use the Basic panel to enter numbers and perform basic addition, subtraction, multiplication, and division. Use the Advanced panel to insert advanced operators or delimiters, such as sine, cosine, tangent, square root, parentheses, etc.

Switch back and forth between calculator panels by pressing MENU and selecting 'Advanced panel' or 'Basic panel', as you wish. As soon as you select an advanced operator, the panel switches back to Basic, where your operator appears.

To delete numbers, one at a time, touch CLEAR on the screen.

To clear your operation history, press MENU and select 'Clear history'.

#### **10.4 Download**

To store the download files by the Browser.

#### **10.5 SIM card**

The functions provided by the network provider.

If the SIM card and network provider do not support the kinds of services, the User will not be able to use this feature. For more information, please contact the Vendor of the network.

## Health and Safety Precautions

Please read these simple guidelines. Not following them may be dangerous or illegal.

- Do not use the phone while driving. Your first consideration while driving should be road safety.
- Please do not put the phone onto any passenger seat or any place from which it may fall down in case of vehicular collision or emergency braking.
- Flight is influenced by interference caused by the phone. It is illegal to use a phone on the airplane. Please turn off your phone during a flight.
- Your Phone's radio waves may interfere with the functioning of inadequately shielded medical devices. Consult a physician or the manufacturer of the medical device to determine whether they are adequately shielded from external Radio Frequency. Switch off your device when regulations posted instruct you to do so.
- To avoid potential interference with implanted medical devices such as a pacemaker or cardioverter- defibrillator:
  - Always keep your phone at least 15.3 centimeters (6 inches) from the medical device.
  - Do not carry the wireless device in a breast pocket.
  - Turn off the phone if there is any reason to suspect that interference is taking place.
  - Follow the manufacturer directions for the implanted medical device.
  - If you have any questions about using your wireless device with an implanted medical device, consult your health care provider.
- Please turn off your phone when you are close to a gas station or in the vicinity of any place where fuel and chemical preparations, or any other dangerous goods are stored.

- Your phone is designed not to exceed limits of emission of radio waves recommended by International Guidelines.
- SAR (Specific Absorption Rate) is the measurement of body absorbed RF quantity when the phone is in use. SAR value is ascertained according to the higher RF level generated during laboratory tests.
- SAR value of the phone may depend on factors such as proximity to the network tower and use of accessories like wired headphones, Bluetooth headphones etc.
- The highest SAR value of this device is **0.950W/kg** averaged over 1gm of human tissues.

### **What is SAR**

“Mobile handset is a radio transmitter and receiver. It is designed and manufactured so as not to exceed the limits for exposure to radio-frequency (RF) energy set by the FCC and recommended by Government of India. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The limits include a substantial safety margin designed to ensure the safety of all persons, regardless of age and health. The exposure standard for mobile phones employs a unit of measurement known as SAR”.

"Specific Absorption Rate," or SAR, refers to the rate at which the body absorbs RF energy. SAR tests are conducted using standard operating positions (i.e., at the head and on the body) with the handset transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower would be the power required by the phone.

### **SAR Recommendations**

- Use hands free with phone.
- Make sure the handset has a low SAR value.
- Please keep your calls short and use SMS.
- Use your cell phone when the signal strength is good.

- People having active medical implants should preferably keep the cell phone at least 15cm away from the implant.
- Maintain a minimum distance of 15mm from the device.

## Taking Care of Your Device

Your device is a product of superior design and craftsmanship and should be handled with care: The following suggestions will help you protect your phone:

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will rust electronic circuits. If your device does get wet, remove the battery without turning on the device, wipe it with a dry cloth and take it to the service centre.
- Do not store the device in high or cold temperature. High temperatures can shorten the life of electronic devices and damage batteries.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not attempt to open the device other than as instructed in this guide. Repairing this phone by yourself other than our authorised service agents/centres goes against the warranty terms.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not store your device near magnetic fields or allow your device to come in contact with magnetic fields for extended period of time.
- Please put the battery in a cool and well-ventilated place out of direct sunlight. We recommend you to charge the battery at room temperature range.
- Batteries have life cycles. If the time that the battery powers equipment becomes much shorter than usual, the battery life is at an end. Replace the battery with a new battery of the same make and specification.
- Use manufacturer approved batteries, chargers, accessories and supplies. Wynncom will not be held responsible for user's safety when using unapproved accessories or supplies.
- Do not discard the battery with household trash. Please dispose of used

battery according to your local environmental laws and guidelines.

Collection and proper recovery of your electronic waste equipments at the time of disposal will allow us to help preserve the environment. Recycling of the electronic waste equipment will ensure safety of human health and environment.

- The colors and specifications shown/mentioned in the User's Manual may differ from the actual product. Images shown are for representation purpose only. Other product logos and company names mentioned herein may be trademarks or trade names of their respective owners.
- Wynncom reserves the right to make modifications to any of the content in this User's Manual without prior notice. The content of this manual may vary from the actual content displayed in the mobile phone. In such a case, the latter shall govern.

All rights reserved. Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Wynncom is strictly prohibited.





## How To Resolve Malfunction

This section lists some problems that you might face while using your phone. If you feel that your phone is not operating normally, please reset settings first, and then follow the Troubleshooting Guide. If you are still unable to solve the problem, please contact our nearest Authorised Care Centre.

### 1. Phone cannot power on?

Possible Reasons for Malfunction	Solutions
1. Press [Power ] key shorter.	Long press [Power] key over 3 seconds
2. Battery has run out.	Charge the battery for a few minutes and try power on again.
3. The battery is installed incorrectly.	Check if the battery is seated correctly on the device..
4. Abnormal use leads phone not to power on.	Please contact our nearest Authorised Care Centre

### 2. Phone powers off automatically?

Possible Reasons for Malfunction	Solutions
1. Battery has run out.	Please charge for your phone in time.
2. Battery is loose.	Please install the battery properly.

### 3. PIN or PUK locks phone?

Possible Reasons for Malfunction	Solutions
1. Input PIN code wrong.	Please input correct PIN code .
2. Input PUK code wrong.	Please input correct PUK code.

Note: If you input incorrect PIN code 3 times, PIN code will be locked. To unlock the same a PUK code is required. Please contact your network service provider for the same. If a wrong PUK is entered 10 times, SIM card will be locked. In such case you would have to get a new/ duplicate SIM card.

4. Audio quality seems poor?

Possible Reasons for Malfunction	Solutions
1. The current signal strength is unstable.	You may be in the fast-moving state (train or car, etc.), according to the signal strength, select a place with good signal to make a call to ensure call quality.
2. You might be in an area where signal strength is low.	Please move to open areas.

5. My device would not make or receive a call?

Possible Reasons for Malfunction	Solutions
1. You might be in an area where the signal strength is low.	Make sure you are in the area with good cell signal. To ensure it, see the signal strength indicator on the top right of your device screen
2. You might have set up Call Forwarding on your phone.	According to your needs, please cancel call forwarding.
3. You might have set up Call Barring on your phone.	According to your needs, please cancel call barring.
4. Check if the device is set on Airplane mode	Please undo it
5. SIM card might not be installed properly	Please check and insert the SIm card properly.
6. The phone screen is locked.	Please unlock the screen according to the prompts.

6. Your phone call voice is low?

Possible Reasons for Malfunction	Solutions
1. Call volume is low.	Please adjust your phone call volume to louder.

7. The other party can't hear your voice?

Possible Reasons for Malfunction	Solutions
1. Mic is too far away from the sound source.	Place the mic near your mouth.
2. The signal is poor or unstable	Please move to an open area

	or an area with good signal strength.
3. Antenna is not assembled properly.	Please contact our nearest Authorised Care Centre.
2. Mute icon is pressed during the call	Please deactivate the Mute function.

**8.** The call alert doesn't ring when a call coming in?

Possible Reasons for Malfunction	Solutions
1. Incoming call alert is set as silent.	Please re-set the incoming call alert as a sound alert.
2. The ring volume is set too low.	Please increase the phone call volume.
3. You set up Call Forwarding on your phone.	Please cancel call forwarding.

**9.** Battery seems to drop really quickly?

Possible Reasons for Malfunction	Solutions
1. Battery power runs out fast	Please make sure your battery be charged in full before use
2. Battery is not good with the phone connection.	Please install battery properly.
3. Charger is not good with the phone connection.	Please connect the charger and phone properly till it displays the charging icon on the screen.
4. Perhaps the charger or battery is damaged.	Please contact our nearest Authorized Care Centre.
5. Some features such as playing the media files, using camera or camcorder, running applications in the background, constantly syncing email and using Wi-Fi or Bluetooth, can drain the battery quickly than usual.	Please keep these functions closed when not required.
6. The surrounding temperature is too low or too high.	Make sure the phone is in the normal temperature during charging.

**10.** Phone displays no network?

Possible Reasons for Malfunction	Solutions
----------------------------------	-----------

1. SIM card is not installed properly.	Please install SIM card properly.
2. There are impurities on the phone and SIM card metal contacts.	Please ensure that SIM card & phone contacts are clean.
3. The SIM card is invalid	Please check whether the SIM card has got damaged/expired
4. The network environment is in a weak-signal area.	Please move to a strong-signal area to use your mobile phone.

**11.** My phone can't detect the micro SD card installed?

Possible Reasons for Malfunction	Solutions
1. T-Flash card is not installed properly.	Turn off your device, pull out microSD card, put it on again and turn on your device
2. T-Flash card is damaged.	Please change T-Flash card.
3. Make sure microSD card is mounted on your device	Go to Settings and check if Unmount SD card is highlighted or else tap Mount SD card

**12.** Phone is out of memory?

Possible Reasons for Malfunction	Solutions
1. MMS or SMS takes up too much storage space.	Please delete the unwanted SMS or MMS to release space.
2. The browsing history takes up too much storage space.	Select "Browser - Settings - Privacy Settings - to clear the cache to release space.
3. Running too many programs leads to lack of space.	Enter "Settings –Applications—Manage applications" or "Settings –Applications—Running services", force stop some running

	applications or services.
4. You have installed many applications in your phone.	Enter “Settings – Applications – Manage applications”, choose and touch the applications installed by yourself, to uninstall them to release space. Note: The built-in applications can't be uninstalled.

## **Warranty Card**

### **Limited Warranty Terms and Conditions**

Wynncom Digital Devices Pvt. Ltd., (hereinafter referred to as the 'Company') provides this Limited Warranty to the purchaser of the Wynncom mobile handset and original accessories (Battery, Charger, Hands free etc.) supplied in the sales package (hereinafter collectively referred to as the 'Product').

### **Warranty period**

Subject to the conditions specified herein, the Company warrants the Product to be free from defects in design, material and workmanship at the time of its original purchase and for a subsequent period of one year for the Transceiver, six months for the Accessories (Charger/ Battery/ Hands free/ Data cable); all periods commencing from the date of purchase.

### **How to get warranty service**

To obtain warranty services, the purchaser needs to bring the Product to the Company's Authorized Care Centre at his/her own cost, along with the original proof of purchase, bearing unaltered/ unmodified date of purchase and IMEI number.

The Company's Limited Warranty extends only to the original purchaser/ end user of the Product, and is not assignable or transferable to a subsequent purchaser/ end user

### **Provisions and Exclusions**

This Limited Warranty does not cover a) normal wear and tear; b) defects caused by improper handling; c) defects or damages caused by misuse of the Product, including use that is contrary to the instructions provided by the Company set out in the Product's User's Manual; and/or d) other acts beyond the reasonable control of the Company (including but not limited to Force Majeure, Lightening, Voltage surge, etc.)

During the warranty period, the Company or its Authorized Care Centre may repair or replace at its sole discretion, any defective Product(s) or part(s) thereof with new or factory rebuilt/ re-conditioned item(s) and return the

Product to the purchaser in working condition. All replaced part(s)/ item(s) shall become the property of the Company.

The repaired or replaced part(s) or item(s) shall stand warranted only for the remaining warranty period since the date of purchase.

The warranty shall cease to exist in the absence of the original proof of purchase, or in case the original serial number/ IMEI is removed, modified or obliterated, or if the Product is damaged due to liquid spillage, exposure to moisture, exposure to extreme thermal or environmental conditions, or if there is a physical damage to the Product, or if the Product was found tampered/ found opened, modified or repaired by anyone other than the Company's Authorized Care Centre.

The warranty terms are subject to change without prior notice.

Except for any liability that cannot be excluded by law, the Company (including its related entities and their respective officers, employees and agents) excludes all liabilities (including negligence), for any loss of profit, business revenue, goodwill, anticipated savings or data, personal injury; or any loss or damage (including loss of opportunity); whether direct, indirect, special or consequential, arising in any way out of the Product.

All disputes are subject to the jurisdiction of courts of Delhi only.

Email us at [customercare@wynncom.net](mailto:customercare@wynncom.net)

Visit us at [www.wynncom.net](http://www.wynncom.net)

Wynncom Care – 1800 102 9299 (Toll free)

9.30 AM to 6.30 PM (7 days a week)

## **DISCLAIMER**

Some content and services accessible through this device belongs to third parties and are protected by copyright, patent, trademark and/or other intellectual property laws. Such content and services are provided solely for your personal noncommercial use. You may not use any content or services in a manner that has not been authorized by content owner or service provider.

Without limiting the foregoing, unless expressly authorized by the applicable content owner or service provider, you may not modify, copy, republish, upload, post, transmit, translate, sell, create, derivative works, exploit, or distribute in any manner or medium any content or services displayed through this device.

“THIRD PARTY CONTENT AND SERVICES ARE PROVIDED “AS IS”. WYNNCOM DOES NOT WARRANT CONTENT OR SERVICES SO PROVIDED, EITHER EXPRESSLY OR IMPLIEDLY, FOR ANY PURPOSE WYNNCOM EXPRESSLY DISCLAIMS ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. WYNNCOM NOT GUARANTEE THE ACCURACY, VALIDITY, TIMELINESS, LEGALITY, OR COMPLETENESS OF ANY CONTENT OR SERVICE MADE AVAILABLE THROUGH THIS DEVICE AND UNDER NO CIRCUMSTANCES, INCLUDING NEGLIGENCE, SHALL WYNNCOM BE LIABLE, WHETHER IN CONTRACT OR TORT, FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, ATTORNEY FEES, EXPENSES, OR ANY OTHER DAMAGES ARISING OUT OF, OR IN CONNECTION WITH, ANY INFORMATION CONTAINED IN, OR AS A RESULT OF THE USE OF ANY CONTENT OR SERVICE BY YOU OR ANY THIRD PARTY, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.”

Third party services may be terminated or interrupted at any time, and Wynncom, makes no representation or warranty that any content or service will remain available for any period of time.

Content and services are transmitted by third parties by means of networks and transmission facilities over which Wynncom has no control. Without limiting the generality of this disclaimer, Wynncom expressly disclaims any



responsibility or liability of any interruption or suspension of any content or service made available through this device.

Wynncom is neither responsible nor liable for customer service related to the content and services any question or request for service relating to the content or services should be made directly to the respective content and service providers.