

# User Manual

## G60q



**Note:** The content of the manual is correct when it is released, but “**Wyncom Digital Devices Pvt. Ltd**” reserves the right to modify the technical specification without additional notification. Some content in the manual may be different from the mobile phone, as the accessory software, SIM card or service varies by providers

# Table of Contents

<b>For your safety</b> .....	<b>7</b>
<b>General Safety</b> .....	<b>7</b>
Safety Precautions .....	8
Driving .....	8
Operating Machinery .....	8
Product Handling .....	8
Demagnetization .....	11
Electrostatic Discharge (ESD).....	11
Antenna.....	11
Normal Use Position.....	11
Air Bags.....	11
Repetitive Motion Injuries.....	11
Emergency Calls .....	12
Loud Noise .....	12
Phone Heating .....	12
Electrical Safety.....	12
Accessories.....	12
Connection to a Car .....	12
Faulty and Damaged Products.....	13
Interference .....	13
General Statement on Interface .....	13
Pacemakers .....	13
Hearing Aids.....	13
Medical Devices .....	14

Hospitals .....	14
Aircraft .....	14
Interference in Cars .....	14
Explosive Environments .....	15
Petrol Stations and Explosive Atmospheres .....	15
Blasting Caps and Areas .....	15
<b>Getting Started.....</b>	<b>16</b>
<b>Overview .....</b>	<b>16</b>
Keys Explained .....	17
Starting up.....	17
Installing the SIM / Memory Card and Battery .....	17
Removing the Battery and SIM/Memory Card .....	18
Charging the Battery.....	19
Switching Your Phone On/Off .....	19
Setting Up Your Phone for the First Time .....	19
Switching to Sleep Mode .....	20
Waking Up Your Phone .....	20
Getting around your phone .....	20
Touch Control .....	20
Home Screen.....	21
Status and Notification Icons .....	22
Using the Notification Panel.....	22
<b>Phone Calls.....</b>	<b>23</b>
Making Calls.....	23
Calling from the Phone .....	23


















Calling from Your Contacts .....	23
Calling from Your Call Log .....	24
Calling from a Text Message.....	24
Receiving Calls.....	24
Answering a Call .....	24
Rejecting a Call .....	24
Muting a Call .....	24
Turning the Speakerphone On/Off .....	25
Ending a Call.....	25
<b>Contacts.....</b>	<b>25</b>
Creating a Contact.....	25
Searching for a Contact.....	25
<b>Messaging.....</b>	<b>26</b>
The Message Box.....	26
Sending an Message.....	26
Message Settings.....	27
Touch Input Settings.....	27
<b>Getting Connected to the Internet.....</b>	<b>27</b>
<b>Adding a New Network Connection .....</b>	<b>27</b>
Turning On Wi-Fi .....	28
Connecting to a Wi-Fi Network.....	28
Checking the Wi-Fi Network Status .....	28
USB tethering & portable hotspot.....	28
Enabling USB tethering.....	29
Disabling USB tethering .....	29

Enabling the Wi-Fi Hotspot .....	29
Disabling the Wi-Fi Hotspot .....	30
<b>Browsing the Internet.....</b>	<b>30</b>
Browsing Options .....	30
Using Bookmarks .....	30
Editing a Bookmark.....	31
Deleting a Bookmark.....	31
Changing Browser Settings.....	31
<b>Bluetooth.....</b>	<b>31</b>
<b>Making the Most of Multimedia.....</b>	<b>32</b>
Taking Pictures with Your Camera.....	32
Listening to Your FM Radio.....	32
Playing Your Music .....	33
Opening Your Gallery.....	33
Playing Your Videos.....	33
Making Voice Memos.....	33
<b>Sorting out Your Phone Settings .....</b>	<b>34</b>
Setting Date and Time .....	34
Display Settings .....	34
Audio Profiles Settings.....	34
Language Settings .....	35
Disabling Data Services.....	35
Switching Network Modes.....	35
Switching Networks.....	35
Setting Access Point Names.....	35

Security Settings.....	36
Protecting Your Phone with a Pattern .....	36
Protecting Your Phone with a Voice unlock.....	36
Protecting Your Phone with a PIN or Password.....	37
Disabling Screen Unlock Security .....	37
Protecting Your SIM Card with a PIN .....	37
Managing Your Device Memory .....	38
Privacy: Reset to Factory Settings.....	38
Applications .....	39
Installing an Application.....	39
Removing an Application.....	39
Moving an Application .....	40
Managing Other Settings.....	40
Text-to-speech Output.....	40
Accessibility.....	40
<b>Other Applications .....</b>	<b>40</b>
Clock .....	40
Calculator .....	41
<b>Warranty Card .....</b>	<b>42</b>
<b>DISCLAIMER.....</b>	<b>44</b>

# For Your Safety

## General Safety

	Don't make or receive handheld calls while driving. And never text while driving.		Don't use at petrol stations.
	Keep your phone at least 15 mm away from your ear or body while making calls.		Your phone may produce a bright or flashing light.
	Small parts may cause a choking.		Don't dispose of your phone in fire.
	Your phone can produce a loud sound.		Avoid contacting with anything magnetic.
	Keep away from pacemakers and other electronic medical devices.		Avoid extreme temperatures.
	Switch off when asked to in hospitals and medical facilities.		Avoid contacting with liquids. Keep your phone dry.
	Switch off when told to in aircrafts and airports.		Don't take your phone apart.
	Switch off when near explosive materials or liquids.		Only use approved accessories.
	Don't rely on your phone for emergency communications.		

## **Safety Precautions**

### **Driving**

Full attention must be given to driving at all times in order to reduce the risk of an accident. Using a phone while driving (even with a hands free kit) can cause distraction and lead to an accident. You must comply with local laws and regulations restricting the use of wireless devices while driving.

### **Operating Machinery**

Full attention must be given to operating the machinery in order to reduce the risk of an accident.

### **Product Handling**

You alone are responsible for how you use your phone and any consequences of its use.

You must always switch off your phone wherever the use of a phone is prohibited. Use of your phone is subject to safety measures designed to protect users and their environment.

- Always treat your phone and its accessories with care and keep it in a clean and dust-free place.
- Do not expose your phone or its accessories to open flames or lit tobacco products.
- Do not expose your phone or its accessories to liquid, moisture or high humidity.
- Do not drop, throw or try to bend your phone or its accessories.



- Do not use harsh chemicals, cleaning solvents, or aerosols to clean the device or its accessories.
- Do not paint your phone or its accessories.
- Do not attempt to disassemble your phone or its accessories, only authorized personnel can do so.
- Do not expose your phone or its accessories to extreme temperatures, minimum - [5] and maximum + [50] degrees Celsius.
- The phone's normal operating temperature is -20°C ~ 60°C .In order to ensure the normal phone functions, do not use this phone outside the temperature range.
- Please check local regulations for disposal of electronic products.
- Do not carry your phone in your back pocket as it could break when you sit down.
  
- SAR (Specific Absorption Rate) is the measurement of body absorbed RF quantity when the phone is in use. SAR value is ascertained according to the higher RF level generated during laboratory tests.
- SAR value of the phone may depend on factors such as proximity to the network tower and use of accessories like wired headphones, Bluetooth headphones etc.
- The highest SAR value of this device is 1.37W/kg averaged over 1gm of human tissues.

## What is SAR?

"Mobile handset is a radio transmitter and receiver. It is designed and manufactured so as not to exceed the limits for exposure to radio-frequency (RF) energy set by the FCC and recommended by Government of India. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The limits include a substantial safety margin designed to ensure the safety of all persons, regardless of age and health. The exposure standard for mobile phones employs a unit of measurement known as SAR".

"Specific Absorption Rate," or SAR, refers to the rate at which the body absorbs RF energy. SAR tests are conducted using standard operating positions (i.e., at the head and on the body) with the handset transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower would be the power required by the phone.

## SAR Recommendations

- Use hands free with phone.
- Make sure the handset has a low SAR value.
- Please keep your calls short and use SMS.
- Use your cell phone when the signal strength is good.
- People having active medical implants should preferably keep the cell phone at least 15cm away from the implant.
- Maintain a minimum distance of 15mm from the device.

## **Demagnetization**

To avoid the risk of demagnetization, do not allow electronic devices or magnetic media close to your phone for a long time.

## **Electrostatic Discharge (ESD)**

Do not touch the SIM card's metal connectors.

## **Antenna**

Do not touch the antenna unnecessarily.

## **Normal Use Position**

When placing or receiving a phone call, hold your phone to your ear, with the bottom towards your mouth.

## **Air Bags**

Do not place a phone in the area over an air bag or in the air bag deployment area.

Store the phone safely before driving your vehicle.

## **Repetitive Motion Injuries**

To minimize the risk of RSI when texting or playing games with your phone:

- Do not grip the phone too tightly.
- Press the buttons lightly.
- Use the special features which are designed to minimize the times of pressing buttons, such as Message Templates and Predictive Text.

- Take lots of breaks to stretch and relax.

## **Emergency Calls**

This phone, like any wireless phone, operates using radio signals, which cannot guarantee connection in all conditions. Therefore, you must never rely solely on any wireless phone for emergency communications.

## **Loud Noise**

This phone is capable of producing loud noises, which may damage your hearing. Turn down the volume before using headphones, Bluetooth stereo headsets or other audio devices.

## **Phone Heating**

Your phone may become warm during charging and during normal use.

## **Electrical Safety**

### **Accessories**

Use only standard accessories.

Do not connect with incompatible products or accessories.

Take care not to touch or allow metal objects, such as coins or key rings, to contact or short-circuit in the battery terminals.

### **Connection to a Car**

Seek professional advice when connecting a phone interface to the vehicle electrical system.

## **Faulty and Damaged Products**

Do not attempt to disassemble the phone or its accessory.

Only qualified personnel can service or repair the phone or its accessory.

If your phone or its accessory has been submerged in water, punctured, or subjected to a severe fall, do not use it until you have taken it to be checked at an authorized service centre.

## **Interference**

### **General Statement on Interface**

Care must be taken when using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.

### **Pacemakers**

Pacemaker manufacturers recommend that a minimum separation of 15 cm be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To achieve this, use the phone on the opposite ear to your pacemaker and do not carry it in a breast pocket.

### **Hearing Aids**

People with hearing aids or other cochlear implants may experience interfering noises when using wireless devices or when one is nearby.

The level of interference will depend on the type of hearing device and the distance from the interference source, increasing the separation between them may reduce the interference. You may also consult your hearing aid

manufacturer to discuss alternatives.

## **Medical Devices**

Please consult your doctor and the device manufacturer to determine if operation of your phone may interfere with the operation of your medical device.

## **Hospitals**

Switch off your wireless device when requested to do so in hospitals, clinics or health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

## **Aircraft**

Switch off your wireless device whenever you are instructed to do so by airport or airline staff.

Consult the airline staff about the use of wireless devices on board the aircraft. If your device offers a 'flight mode', this must be enabled prior to boarding an aircraft.

## **Interference in Cars**

Please note that because of possible interference to electronic equipment, some vehicle manufacturers forbid the use of mobile phones in their vehicles unless a hands-free kit with an external antenna is included in the installation.

## **Explosive Environments**

### **Petrol Stations and Explosive Atmospheres**

In locations with potentially explosive atmospheres, obey all posted signs to turn off wireless devices such as your phone or other radio equipment.


Areas with potentially explosive atmospheres include fuelling areas, below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

### **Blasting Caps and Areas**

Power off your mobile phone or wireless device when in a blasting area or in areas posted power off “two-way radios” or “electronic devices” to avoid interfering with blasting operations.

# Getting Started

## Overview

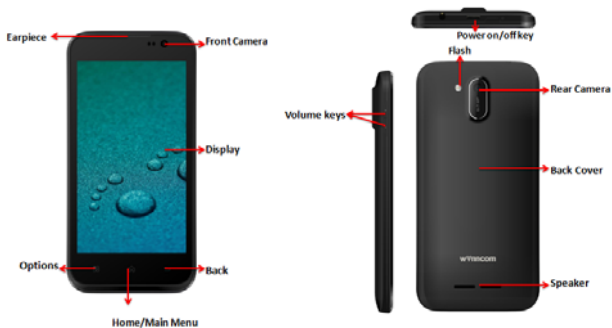



## Keys Explained


Key	Function
Power Key	<ul style="list-style-type: none"><li>• Hold to switch audio profiles, or to turn on or off Airplane mode, or to power off.</li><li>• Press to switch your phone to Sleep mode.</li><li>• Press to wake up your phone.</li></ul>
Home Key	<ul style="list-style-type: none"><li>• Press to return to the Home Screen from any application or screen.</li><li>• Hold to see recently used applications.</li></ul>
Menu Key	Press to get the options for the current screen.
Back Key	Press to go to the previous screen.
Volume Keys	Press or hold to turn the volume up or down.

## Starting up


### Installing the SIM / Memory Card and Battery

Switch off your phone before installing or replacing the battery, SIM, or memory card.


1. Remove the back cover.
2. Hold the SIM card with the cut corner oriented as shown and slip it into the card holder.

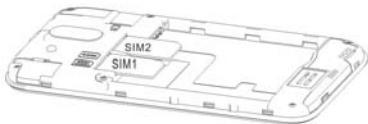

3. Insert the memory card into the card slot with the metal contacts facing down until it inserts to the right position.

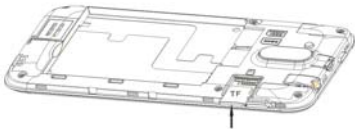

4. Insert the battery by aligning the gold contacts on the battery with the gold contacts in the battery compartment. Gently push down on the battery until it clicks into place.



5. Press the cover gently back into place until you hear a click.

## **Removing the Battery and SIM/Memory Card**

1. Make sure that your mobile phone is off.

2. Remove the back cover.
3. Lift the battery up and out.
4. Slide the SIM card out.
5. Slide the memory card out.

## Charging the Battery

When you first get your new phone you'll need to charge the battery.

1. Connect the adapter to the charger jack. Ensure that the adapter is inserted with the correct orientation. Do not force the connector into the charger jack.
2. Connect the charger to a standard AC wall outlet.
3. Disconnect the charger when the battery is fully charged.

## Switching Your Phone On/Off

Make sure the SIM card is in your device and the battery is charged.

- Hold **Power Key** to switch on your phone.
- To switch it off, hold **Power Key** to get the phone options. Select **Power off**, and then tap **OK**.

## Setting Up Your Phone for the First Time

When you first power on your phone after you purchase it or reset it to factory settings (see chapter *Sorting out Your Phone Settings – Privacy: Reset to Factory Settings*), you need to do some settings before using it.


Tap **Menu Key** in the standby mode, then select **System settings > Language & input > Language** to change the language you want to use, if needed.

## Switching to Sleep Mode

To save battery power, Sleep Mode suspends your device to a low-power-consumption state while the display is off. Your device also goes into Sleep Mode by itself when the display is automatically turned off after a certain period of time. You can start sleep mode by the following method.

Press **Power Key** to switch to Sleep Mode.

## Waking Up Your Phone

1. Press **Power Key** to activate your screen display.
2. Tap the  icon, drag to the right.

**NOTE:** If you have set an unlock pattern, PIN or password for your phone (see chapter *Sorting out Your Phone Settings – Security Settings*) you'll need to draw the pattern or enter the PIN/password to unlock your screen.

## Getting around your phone

### Touch Control

You can use finger gestures to control your phone. The controls on your touch-screen change dynamically depending on the tasks you're performing.

1. Tap the buttons, icons, or applications to select items or to open applications.
2. Flick the screen to scroll up, down, left or right.
3. Point, drag and drop to move particular items across the screen.
4. Double-tap the screen to zoom in/out an image.

**NOTE:** You can view the phone screen in portrait or landscape orientation simply

by holding it upright or turning it on its side. Not all screens are viewable in landscape.

## Home Screen

In the Home screen, besides the shortcut icon is displayed, you can also set your own wallpaper, add the widgets or application shortcuts you need, or remove them as you like.


## Extended Home Screen

The Home Screen extends beyond the screen width, giving you loads more space to add more stuff. Simply slide your finger to the left or right.

## Choosing Your Wallpaper

1. Press **Home Key** to return to the Home Screen.
2. Tap **Menu Key** and select **Wallpaper**.
3. Tap **Gallery**, **Live Wallpapers**, **Video Wallpaper**, or **Wallpapers** and choose the image or animation you want to use as the wallpaper.  
Some cropping may be needed for Gallery images.
4. Tap **Set wallpaper**.

## Adding Items to Your Home Screen

1. Press **Home Key** > tap  to enter the Application Program Interface
2. In the list of applications, touch and hold the icon until the main screen appears, move the application icon to the idle position, release the finger.

## Removing Items from Your Home Screen

1. Press **Home Key** to return to the Home Screen.
2. Tap and hold the item you want to delete until the remove icon appears on

















the top of the screen.

3. Drag the item to the remove icon and release your finger when the item turns red.


## Status and Notification Icons

Your phone will tell you exactly what's going on by showing you simple icons.

Here's what they mean.

	USB connected		Missed call
	Airplane mode		Signal strength
	Battery charge		New message
	Meeting mode		Wi-Fi network
	Alarm set		Earphone insert
	Silent mode		Signal searching
	Bluetooth icon		USB debugging connected
	Data Conn off		New Wi-Fi network detected

## Using the Notification Panel

Flick the status bar downwards from across the top of the screen to open the Notification Panel, where you can see your calendar events, new Messages and so on. Tap  to open the shortcuts panel from notification panel. To

hide the panel, tap on the lower edge of the panel, drag up.

## Open Recently-Used Applications




1. Hold **Home Key** from any screen. The phone will display the applications you used recently.
2. Tap the application you want to open.


## Phone Calls

### Making Calls


There are many ways to make a call with your phone. And they're all easy to do.


### Calling from the Phone

1. Press **Home key** > tap  > **Phone** or tap  on the Home Screen.
2. Enter the phone number using the on-screen keypad.  
Tap  to delete wrong digits.
3. Tap the dial icon.

**TIPS:** To make international calls, hold  to enter the "+".

### Calling from Your Contacts

1. Press **Home key** > tap  > **People**.
2. Slide your finger to scroll the contacts list and tap the contact name you want to call, when the contact details appear, click on the number, choose the SIM card to dial.


You can search for a contact by tapping  on the screen.

## Calling from Your Call Log

1. If you have opened the dialer, touch the call log tab to open the call records, respectively touch all, dialed, received, missed call button to display a list of the corresponding call records.
2. Tap dial icon on the right side of the current record.


## Calling from a Text Message

If a text message contains a phone number that you want to call, you can make the call while viewing the text message.


1. Press **Home key** > tap  > **Messaging**.
2. Tap the conversation and then find the message that contains the phone number you need.
3. Tap the message, the phone will list the options.

## Receiving Calls

### Answering a Call

Tap the  icon, drag to right to answer the call.

### Rejecting a Call



Tap the  icon, drag to left to reject the call.

### Muting a Call



During a call, you can mute your microphone so that the person you are speaking



to cannot hear you, but you can still hear them.

Tap  to turn your microphone off. To turn your microphone back on, tap .

## Turning the Speakerphone On/Off


Tap  during a call to turn the speakerphone on. Tap  again to turn off the speakerphone.

## Ending a Call


Tap  to finish a call.

## Contacts


You can add contacts on your phone and synchronize them with the contacts in your Google account or other accounts that support contact syncing.

To see your contacts, Press **Home key** > tap  > **People**.

## Creating a Contact


1. Tap  from the Contacts Screen.
2. Choose the storage location to save the contact.
3. Enter the contact name, phone numbers, and other information, and then save it.

## Searching for a Contact

1. Tap  on the Contacts Screen.
2. Input the contact name you want to search for.

The contacts matched will be listed.






## Messaging

Your SMS (text message) and MMS (multimedia messaging service) are combined into one menu in **Home Key** >  > **Messaging**.

## The Message Box

Instead of an inbox and outbox, your phone organizes all Messaging you sent and received into one box, where Messaging exchanged with the same number are grouped into one message thread in the Messaging Screen. You can tap a thread to see the conversation you have had with someone.

## Sending an Message

1. Press **Home key** > tap  > **Messaging**.
2. Tap  to create new message.
3. Enter the recipient's number or name. As you type, matching contacts will appear. Tap a suggested contact to add as a recipient. You can also tap to select recipients from the contacts. 
4. Tap **Type text message** and type your message.
  - Tap **Menu Key** to insert quick text or contact.
  - If you are sending an MMS, tap **Menu Key** to add a subject, or tap  to attach pictures, videos, audio, or slideshow.
5. Tap  to send your message.

**NOTE:** Add an attachment to text message and it will be converted into an MMS automatically. Likewise if you remove all attachments and the subject from an

MMS, it'll automatically become a text message.

## Message Settings

The phone's message settings are pre-configured for you to use immediately. To change them, tap **Menu Key > Settings** from the Messaging Screen.

**NOTE:** From SMS settings screen tap **Menu Key > Restore default settings** to change the message settings back to the original.

## Touch Input Settings


Choose the touch input settings by tapping **Menu Key > System settings > Language & input** from Home Screen.

In the **KEYBOARD & INPUT METHODS** section, you can choose the settings that you need.

## Getting Connected to the Internet

Your phone's impressive networking capabilities allow you to access the Internet or your corporate network with ease.


You can use default connection settings to connect to the Internet via your mobile network, or Wi-Fi.

The network connection can be enabled /disabled manually. Just press **Home key > tap  > Settings > SIM management > Data connection.**

## Adding a New Network Connection




To get connected via your mobile network you need a data plan with your service provider. Also if the networks settings are not pre-configured on your phone,

please contact your provider to get the necessary information.

You can view settings by pressing **Home key** > tap  > **Settings** > **More (WIRELESS & NETWORKS)** > **Mobile networks** > **Access Point Names**.

## Turning On Wi-Fi

Wi-Fi provides wireless Internet access over distances of up to about 300 feet.

1. Press **Home key** > tap  > **Settings**.
2. Click  next to the Wi-Fi menu to turn it on, click  you can turn off the Wi-Fi function.

## Connecting to a Wi-Fi Network

1. Press **Home key** > tap  > **Settings** > **Wi-Fi**.

When the Wi-Fi is on, the Wi-Fi access points, or “hotspots”, that your phone has detected are displayed with their names and security settings.

2. Tap an access point to connect to it.

**NOTE:** If security features are implemented, you'll need to enter a password.

## Checking the Wi-Fi Network Status

You can check the Wi-Fi network by looking at the  icon in the status bar.

## USB tethering & portable hotspot

Share your phone's data connection via USB or as a portable Wi-Fi hotspot.

## Enabling USB tethering

**TIPS:** The PC accesses the Internet via the phone's mobile network. Therefore, set up the networks connection correctly before you try to use the phone as a modem.

Press **Home Key** > tap **Menu Key** > **System settings** > **More (WIRELESS & NETWORKS)** > **Tethering & portable hotspot** and tick the **USB tethering** check box.

## Disabling USB tethering


Press **Home Key** > tap **Menu Key** > **System settings** > **More (WIRELESS & NETWORKS)** > **Tethering & portable hotspot** and clear the **USB tethering** check box.

You can also just pull out the USB cable.


## Enabling the Wi-Fi Hotspot

You can use the phone as a portable WLAN router, to share your phone's internet connection with one or more PC or other devices.

### NOTE:

- When the portable Wi-Fi hotspot function is enabled, you can't use your phone's applications to access the internet via its Wi-Fi connection.
- You can configure the Wi-Fi hotspot as follows:
  1. Press **Home Key** > tap **Menu Key** > **System settings** > **More (WIRELESS & NETWORKS)** , click  next to the Wi-Fi hotspot to turn it on.
  2. Tap **Wi-Fi hotspot** to set up & manage portable Wi-Fi hotspot. Now you can find the hotspot on other devices and connect to it.

## Disabling the Wi-Fi Hotspot


Press **Home Key** > tap **Menu Key** > **System settings** > **More (WIRELESS & NETWORKS)** > **Tethering & portable hotspot** and click  next to the Wi-Fi hotspot to turn it off.

## Browsing the Internet

You can use your phone to get on the Internet via a network or Wi-Fi connection.

Press **Home Key** > tap  > **Browser**.

**There are different ways to open web pages:**

- Tap the address bar to enter the website you want to browse. Then tap  on the touch keyboard.
- Tap **Menu Key** > **Bookmarks/History** and select a bookmark or history to open.

## Browsing Options

When you browse the Web, you can also do the following:

- Press **Menu Key** > **Close** and select **Quit** to exit.
- Press **Menu Key** > **Bookmarks/History** and select a bookmark or history to open.
- Press **Menu Key** > **Settings** to configure browser settings.

## Using Bookmarks

If you know the Web address, you can manually add bookmarks. To bookmark a web page, open it and tap **Menu Key** > **Save to bookmarks**. Give the bookmark a name and save it.

## Editing a Bookmark

1. Open a Browser window.
2. Tap **Menu Key > Bookmarks/History**.
3. Select an item you want to edit and hold on it until the shortcut menu pops up.
4. Select **Edit bookmark**.
5. Edit the name or location, and then tap **Ok** to save it.

## Deleting a Bookmark



1. Open a Browser window.
2. Tap **Menu Key > Bookmarks/History**.
3. Select an item you want to delete and hold on it until the shortcut menu pops up.
4. Select **Delete bookmark** and tap **OK** to confirm.

## Changing Browser Settings

Tap **Menu Key > Settings** from a browser window to change browser settings.

## Bluetooth

Bluetooth is a short-range wireless communication technology. Phones or other devices with Bluetooth capabilities can exchange information wirelessly within a distance of about 10 meters. The Bluetooth devices must be paired before the communication is performed.

1. Press **Home Key > tap**  **gs.**
2. Click  next to the Bluetooth menu to turn it on,

When Bluetooth is on, the  icon will appear in the status bar.


3. Tap **Bluetooth**. Your phone will show all visible Bluetooth devices in range.
4. Tap the device you want to pair with and operate according to the message prompt.


When both devices to be paired accept the connection, the pairing is completed.

**TIPS:** Tap your device name to make your phone discoverable if other devices try to pair with your phone.

## Making the Most of Multimedia


### Taking Pictures with Your Camera

Your phone has camera function. Open it by pressing **Home Key** > tap  > **Camera**.

Tap  to take a picture. To view it, just tap the picture in the right corner of the screen.

### Listening to Your FM Radio


With the FM Radio, you can search for radio channels, listen to them, and save them on your phone. Note that the quality of the radio broadcast depends on the coverage of the radio station in your area. The wired headset works as an antenna, so always connect the headset when using the radio.

- To tune in, plug your headset into your phone. Press **Home key** > tap  > **FM Radio**.




## Playing Your Music


You can play digital audio files from your phone's memory card in **Music**. Before playing music, you need to copy music files to memory card location.

1. Press **Home Key** > tap  > **Music** to open the Music Screen.
2. Click the Music category label > music files to start playing.
3. Adjust the volume with **Volume Keys**.

## Opening Your Gallery





Press **Home Key** > tap  > **Gallery**. You can use **Gallery** to view pictures and play videos. You can also do some basic editing of your pictures – such as setting them as wallpaper or contact photo, and sharing with friends.

## Playing Your Videos

Press **Home Key** > tap  > **Video Player**. You can use Video Player to play videos on the phone and memory card.

## Making Voice Memos


**Sound Recorder** enables you to record your voice memos.

1. Press **Home Key** > tap  > **Sound Recorder**.
2. Tap  to start recording.
3. Tap  to stop recording.
4. Tap  to play back the voice recording.

5. Save the voice recording after stop, or tap **Discard** to delete the recording.

## Sorting out Your Phone Settings

### Setting Date and Time


1. Press **Home key** > tap  > **Settings** > **Date & time**.
2. Tap **Automatic Date & time** and select **Off** if you want to set the time and date by yourself.
3. Set date, time and change the other options.

### Display Settings

Press **Home key** > tap  > **Settings** > **Display**, you can adjust the display settings as you like:


- **Brightness**: Adjust brightness of the screen.
- **Auto-rotate screen**: Rotate the screen display as you rotate the phone.
- **Screen timeout**: Set the delay for the screen to automatically turn off.
- **Wallpaper**: Set the wallpaper of the phone
- **Theme**: Set the theme of the phone.

### Audio Profiles Settings

By pressing **Home Key** > tap  > **Settings** > **Audio profiles**. When you choose the General mode, you can adjust the sound settings, such as ringtones, volume and vibrate.

## Language Settings


You can change the language of your phone system in two simple steps.

1. Press **Home key** > tap  > **Settings** > **Language & input** > **Language**.
2. Select a language from the list given.


## Disabling Data Services

Press **Home key** > tap  > **Settings** > **SIM management** > **Data connection**, then tap **Off**.

## Switching Network Modes

1. Press **Home key** > tap  > **Settings** > **More (WIRELESS & NETWORKS)** > **Mobile networks** > **Network Mode**.
2. Select one of the following: **GSM/WCDMA (auto mode)**, **WCDMA only**, **GSM only**.

## Switching Networks

1. Press **Home key** > tap  > **Settings** > **More (WIRELESS & NETWORKS)** > **Mobile networks** > **Network operators**.
2. Tap the SIM card you want to set.
3. Tap **Select manually** to register manually, or tap **Choose automatically**.

## Setting Access Point Names

To connect to the Internet you can use the default Access Point Names (APN). And if you want to add a new APN, please contact the service provider to find out more.


Press **Home key** > **Menu Key** > **Settings** > **More (WIRELESS & NETWORKS)** > **Mobile networks** > **Access Point Names**.

## Security Settings

Here's how to protect your phone and SIM card from unauthorized use.

### Protecting Your Phone with a Pattern

#### Creating Your Screen Unlock Pattern

1. Press **Home key** > tap  > **Settings** > **Security** > **Screen lock** > **Pattern**.
2. Read the instructions on-screen and watch the example pattern, and select **next**.
3. Drag your finger to connect at least four dots, draw the pattern.
4. Touch **Continue**.
5. Redraw your pattern to confirm.

#### Unlocking the Screen with Your Pattern

1. Press **Power Key** to wake up the screen.
2. Draw the pattern you set to unlock the screen.

If you make a mistake, your phone will ask you to try again.

### Protecting Your Phone with a Voice unlock

#### Creating unlock command

1. Press **Home key** > tap  > **Settings** > **Security** > **Screen lock**.
2. Tap Voice Unlock.


3. According to the instruction to set Unlock command and Wake up command.

## Unlocking the Screen with Your Voice unlock


1. Press **Power Key** to wake up the phone.
2. Speak your unlock command.

## Protecting Your Phone with a PIN or Password

### Creating a PIN or Password


1. Press **Home key** > tap  > **Settings** > **Security** > **Screen lock**.
2. Tap **PIN** or **Password**.
3. According to the instruction to complete your PIN or password settings.

### Unlocking the Screen with Your PIN or Password

4. Press **Power Key** to wake up the phone.
5. Enter the PIN or password you set then select  on the touch keyboard.


## Disabling Screen Unlock Security

If you have created an unlock pattern, PIN or password, you can disable it.

1. Press **Home key** > tap  > **Settings** > **Security** > **Screen lock**.
2. Draw the screen unlock pattern or enter your PIN/ password you have created if required.
3. Tap **None**.

## Protecting Your SIM Card with a PIN


Every SIM card comes with a PIN. The initial PIN is provided by your mobile phone carrier. It's best to lock your SIM card as soon as you can.

1. Press **Home key** > tap  > **Settings** > **Security** > **Set up SIM card lock**.
2. Choose the SIM card you want set.
3. Tick the **Lock SIM card** check box.
4. Enter the PIN you've been given and tap **OK**.

**TIPS:** If you enter the wrong SIM PIN more times than allowed, your SIM card will be locked and you cannot access the mobile phone network. Contact your operator for a PIN Unlock Key (PUK) to restore the SIM card.

## Changing Your SIM PIN

You can change the PIN you've been given to one easier for you to remember and harder for others to guess.

1. Press **Home key** > tap  > **Settings** > **Security** > **Set up SIM card lock**.
2. Choose the SIM card you want set.
3. Make sure you already tick the **Lock SIM card** check box.
4. Tap **Change SIM PIN**.


## Managing Your Device Memory

Press **Home Key** > tap  > **Settings** > **Storage**.

You can view the space information of the SD card and the phone storage.

- **Unmount SD card:** You can unmount the SD card to safely remove it.
- **Erase SD card:** Erase all data on the SD card.

## Privacy: Reset to Factory Settings

Press **Home key** > tap  > **Settings** > **Backup & reset** > **Factory data**

**reset > Reset phone > Erase everything.**


**WARNING:** All your personal information and downloaded applications on your phone will be erased after the resetting.

## Applications

Press **Home Key** > tap  > **Settings** > **Apps**.


### Installing an Application

You can install a non-Marketing application if you have allowed the installation of it. Make sure that you select an application developed for your device and processor type before installing it.

1. Copy the application file to the SD card and install the card on your phone.
2. Press **Home key** > tap  > **File Manager**, and open the folder where the application file is.
3. Tap the file to start installation.
4. Read the installation instructions that come with the application and follow it to complete the setup.

**NOTE:** please take your handset as the standard.


### Removing an Application

1. Press **Home key** > tap  > **Settings** > **Apps**.
2. Select the application you want to delete.
3. Tap **Uninstall** and **OK** to confirm.

## Moving an Application


You can move the applications downloaded or installed on your phone to the memory card when the phone memory is full. You can also move applications to your phone if the memory card is getting full.

**NOTE:** Not all applications can be move to your phone or memory card.


1. Press **Home key** > tap  > **Settings** > **Apps**.
2. Click the application you want to move on the **Downloaded** tab.

## Managing Other Settings

### Text-to-speech Output


You can set the text-to-speech and voice recognition options by pressing **Home Key** > tap  > **Settings** > **Language & input** > **Text-to-speech output**.

### Accessibility

You can configure accessibility options for accessibility-related applications by pressing **Home Key** > tap  > **Settings** > **Accessibility**.

## Other Applications

### Clock


Press **Home key** > tap  > **Clock**, you can view the clock or set the alarm.

Tap the top of the screen icon can be switched to the countdown and stopwatch functions from the clock interface.



# Calculator

You can use the phone directly perform simple mathematical calculations.

1. Press **Home Key** > Tap  > **Calculator**.
2. Click the button corresponding with the calculator display, perform basic arithmetic.

**TIPS:** Tap **Menu Key** > **Advanced panel** to use scientific calculation.

## **Warranty Card**



### **Limited Warranty Terms and Conditions**

Wynncom Digital Devices Pvt. Ltd., (hereinafter referred to as the 'Company') provides this Limited Warranty to the purchaser of the Wynncom mobile handset and original accessories (Battery, Charger, Hands free etc.) supplied in the sales package (hereinafter collectively referred to as the 'Product').

### **Warranty period**

Subject to the conditions specified herein, the Company warrants the Product to be free from defects in design, material and workmanship at the time of its original purchase and for a subsequent period of one year for the Transceiver, six months for the Accessories (Charger/ Battery/ Hands free/ Data cable); all periods commencing from the date of purchase.

### **How to get warranty service**

To obtain warranty services, the purchaser needs to bring the Product to the Company's Authorized Care Centre at his/her own cost, along with the original proof of purchase, bearing unaltered/ unmodified date of purchase and IMEI number.

The Company's Limited Warranty extends only to the original purchaser/ end user of the Product, and is not assignable or transferable to a subsequent purchaser/ end user

### **Provisions and Exclusions**

This Limited Warranty does not cover a) normal wear and tear; b) defects caused by improper handling; c) defects or damages caused by misuse of the Product, including use that is contrary to the instructions provided by the Company set out in the Product's User's Manual; and/or d) other acts beyond the reasonable control of the Company (including but not limited to Force Majeure, Lightning, Voltage surge, etc.)

During the warranty period, the Company or its Authorized Care Centre may repair or replace at its sole discretion, any defective Product(s) or part(s) thereof with new or factory rebuilt/ re-conditioned item(s) and return the Product to the

purchaser in working condition. All replaced part(s)/ item(s) shall become the property of the Company.

The repaired or replaced part(s) or item(s) shall stand warranted only for the remaining warranty period since the date of purchase.

The warranty shall cease to exist in the absence of the original proof of purchase, or in case the original serial number/ IMEI is removed, modified or obliterated, or if the Product is damaged due to liquid spillage, exposure to moisture, exposure to extreme thermal or environmental conditions, or if there is a physical damage to the Product, or if the Product was found tampered/ found opened, modified or repaired by anyone other than the Company's Authorized Care Centre.

The warranty terms are subject to change without prior notice.

Except for any liability that cannot be excluded by law, the Company (including its related entities and their respective officers, employees and agents) excludes all liabilities (including negligence), for any loss of profit, business revenue, goodwill, anticipated savings or data, personal injury; or any loss or damage (including loss of opportunity); whether direct, indirect, special or consequential, arising in any way out of the Product.

All disputes are subject to the jurisdiction of courts of Delhi only.

Email us at [customercare@wynncom.net](mailto:customercare@wynncom.net)

Visit us at [www.wynncom.net](http://www.wynncom.net)

## **DISCLAIMER**

Some content and services accessible through this device belongs to third parties and are protected by copyright, patent, trademark and/or other intellectual property laws. Such content and services are provided solely for your personal noncommercial use. You may not use any content or services in a manner that has not been authorized by content owner or service provider. Without limiting the foregoing, unless expressly authorized by the applicable content owner or service provider, you may not modify, copy, republish, upload, post, transmit, translate, sell, create, derivative works, exploit, or distribute in any manner or medium any content or services displayed through this device.

"THIRD PARTY CONTENT AND SERVICES ARE PROVIDED "AS IS".

WYNNCOM DOES NOT WARRANT CONTENT OR SERVICES SO PROVIDED, EITHER EXPRESSLY OR IMPLIEDLY, FOR ANY PURPOSE WYNNCOM EXPRESSLY DISCLAIMS ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO, WARRANTIES OF MERCHANT ABILITY OR FITNESS FOR A PARTICULAR PURPOSE. WYNNCOM NOT GUARANTEE THE ACCURACY, VALIDITY, TIMELINESS, LEGALITY, OR COMPLETENESS OF ANY CONTENT OR SERVICE MADE AVAILABLE THROUGH THIS DEVICE AND UNDER NO CIRCUMSTANCES, INCLUDING NEGLIGENCE, SHALL WYNNCOM BE LIABLE, WHETHER IN CONTRACT OR TORT, FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, ATTORNEY FEES, EXPENSES, OR ANY OTHER DAMAGES ARISING OUR OF, OR IN CONNECTION WITH, ANY INFORMATION CONTAINED IN, OR AS A RESULT OF THE USE OF ANY CONTENT OR SERVICE BY YOU OR ANY THIRD PARTY, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES."

Third party services may be terminated or interrupted at any time, and Wynncom, makes no representation or warranty that any content or service will remain available for any period of time.

Content and services are transmitted by third parties by means of networks and transmission facilities over which Wynncom has no control. Without limiting the generality of this disclaimer, Wynncom expressly disclaims any responsibility or liability of any interruption or suspension of any content or service made available through this device.

Wynncom is neither responsible nor liable for customer service related to the content and services any question or request for service relating to the content or services should be made directly to the respective content and service providers.